

PARTS LIST OF BL-5000
(H4 HIOS / 5.0 HEX / 6.35 HEX SHANK)

ISSUED: January,2003
Revised : July,2006

PARTS NAME	PARTS NO.	PARTS NAME	PARTS NO.
1 Torque Adjusting nut	BL4 -0011	37 Switch Lever Plunger	BL4 -0520
2 Torque Adjusting spring holder	BL4 -0021	38 Lever Spring	CL4 -0510
3 Torque Adjusting spring (purple)	BL4 -0051 -1.6	39 Name Plate	BL5 -0420
4 Clutch Panel	BL4 -0060	40 Set Screw 2.6x6	SPP26X060
5 Steel Ball 5.0φ	BALL -05		
6 Clutch Cover	BL4 -0172	Circuit Assy 41 -48(except47)	BL4 -CC
7 Set Screw 2.6x8	STP26X080		
8 Collar Stopper for H4 HIOS	CL4 -0090	41 Control Circuit	-----
Collar Stopper for 5.0/6.35HEX	CL4X -0090	42 Push or Lever Change over Switch	BL4 -0370
9 Washer 2.6x9.6x0.5 for H4 HIOS	CL3 -0620	43 5 Pin connector	CL4 -0580
Washer 8.5x10.5x0.5 for 5.0 HEX	BL4X -0630 -5		
Washer 9.1x11.0x0.5 for 6.35 HEX	BL4X -0630	44 Resistor 430Ω	-----
10 Collar Spring for H4 HIOS	BL4 -0120	45 Sensor P.C.B. (Lower)	-----
Collar Spring for 5.0 HEX	BL4 -0120 -5	46 Sensor P.C.B. (Upper)	-----
Collar Spring for 6.35 HEX	BL4X -0120	47 Set Screw M2x5	SPP20X050
11 Joint Shaft Collar for H4 HIOS	BL4 -0070	48 Ground Connector	-----
Joint Shaft Collar for 5.0 HEX	BL4X -0070 -5	49 Hanger	CL65 -0650
Joint Shaft Collar for 6.35 HEX	BL4X -0070		
12 Joint Shaft Cover (W/Magnet)	BL4X -3141	50 Free Up Belt	CL4 -0600
13 Cap Screw 2.6x6	SC26X060ST	51 5 -Core Cord W/Connectors	CL4 -0611
14 Joint Shaft for H4 HIOS	BL4 -0101	In Both Ends	
Joint Shaft for 5.0 HEX	BL4X -0101 -5		
Joint Shaft for 6.35 HEX	BL4X -0101		
15 Steel Ball 2.0φ	BALL -02		
16 Push Spring	BL4 -0130		
17 Joint	BL4 -0180		
18 Hexagon Socket Set Screw 2.6x5	SH26X050		
19 Gear Case	BL4 -0191		
20 Set Screw 2.6x 5P3	SPC26X050P3		
21 Lower Planet Shaft	BL4 -0201		
22 Cam Roller φ4x5.5	CL4 -0250		
23 Internal Gear (W/Magnet)	BL4 -3210		
24 Lower Floor	BL4 -0240		
25 Planet Gear (x8)	VZ10 -0302		
26 Upper Planet Cage	VZ10 -0331		
27 Center Pin 2x13.8	F9 -0260		
28 Bearing	BL4 -0311		
29 Set Screw 2.6x 5	STP20X050		
30 Motor Front Panel	BL4 -0301		
31 Motor	BL4 -0341		
32 Pinion Gear	BL4 -0292		
33 Body Case A&B	BL4 -0541		
34 Set Screw 2.6x12	SPPB26X120		
35 For/Rev Switch Lever	BL4 -3361		
36 Switch Lever (W/Magnet)	BL4 -3382		