

PARTS LIST OF BL-7000
(H5 HIOS • 5HEX / 6.35 HEX SHANK)

ISSUED : December,2002
Revised : Apr, 17th, 2012

PARTS NAME	PARTS NO.	PARTS NAME	PARTS NO.
1 Torque Adjusting nut	BL65-0010	41 Name Plate	BL7-0070
2 Steel Ball 1.5φx3	BALL-015	42 Set Screw 3.5X12	B0HD5F35120NITP
3 Torque Adjusting Spring Holder	BL65-0020	43 Connector Cover	BL65-0471
4 Torque Adjusting spring	BL7-0050	44 Switch Lever	BL65-3490
5 Clutch Panel	BL65-0060	45 Switch Lever Spring	CL65-0610
6 Steel Ball 5.5φ	BALL-055	46 Switch Lever Plunger	BL4-0520
7 Clutch Cover	BL65-0221		
8 Set Screw 3x7	SPP30X070N		
9 Collar Stopper	CL65-0110		
10 Washer 9.6x11.6x0.5	BL65-0130	47 5 Pin connector	CL4-0580
		48 Circuit Assy	BL7-CC1
11 Collar Spring	BL65-0120		
12 Joint Shaft Collar	BL65-0110	49 Set Screw 2x2.5	SPC20X025
		50 Set Screw 2x4	SPC20X040
13 C-Ring	BL65-0140		
14 Washer 10.5x12.5x0.5	BL65-0730		
15 Push Spring	BL65-0170		
16 Joint Shaft Cover Set	BL65-3210		
		51 5-Core Cord W/Connectors In Both Ends	CL65-0660
17 Steel Ball 2.5φ for H5/5HEX (x3pcs)	BALL-025		
2.0φ for 6.35HEX (x3pcs)	BALL-02		
18 Steel Ball 2.777φ	BALL-0277	52 Free-Up Belt	CL65-0670
19 Joint Shaft for H5 HIOS/5HEX	BL65-0100	53 Hanger	CL65-0651
Joint Shaft for 6.35 HEX	BL65X-0100		
20 Joint Shaft Cover Spring	BL65-0160		
21 Joint	BL65-0200		
22 Hexagon Socket Set Screw 2.6x3	SH26X030		
23 Gear Case	BL65-0232		
24 Set Screw 2.6x6	MSPF26060NIGP		
25 Lower Planet Shaft	BL65-0150		
26 Cam Roller Φ5x7	CL65-0230		
27 Internal Gear (W/Magnet)	BL65-3320		
28 Lower Floor	BL65-0340		
29 Planet Gear	BL65-0331		
30 Upper Planet Cage	BL65-0360		
31 Center Pin 2x13.8	F9-0260		
32 Cup Ring	BL7-0040		
33 Bearing	BL65-0380		
34 Set Screw 3x7	SPP30X070N		
35 Motor Front Panel	BL65-0401		
36 Pinion Gear	BL7-0392		
37 Motor	BL7A-0440		
38 Body Case A&B W/BL65-0471	BL65-0461		
39 Set Screw 3x7	SPP30X070N		
40 For/Rev Switch	BL4-3360ESD		