

PARTS LIST OF BLFQ-2000
(H4 HIOS SHANK)

Issued: 28th.Jan.2014

Revised:

TS NAME		PARTS NO.	TS NAME		PARTS NO.
1	Mouthpiece Holder	BLQ3N-0051	45	Pinion Gear	BL2-0030
2	Ring Nut	BLQ3N-0061	46	Motor Front Panel	BL2-0340
3	Joint Ring SUS	BLQ3N-0011	47	Motor	BL3-0362
4	O Ring 13 φ	MQ3-0040	48	Totsupura Screw B0F 3x10 (x6pcs)	B0FS30100SBTP
5	Holder	BLQ3N-0030-SD	49	Body Case	BLF2-0100
6	O-ring 4 φ	CLQ4-0110	50	Name Label	-----
7	Air Outlet	BLQ3-0070	51	Circuit ASSY	-----
8	Mouthpiece Base	BLQ3N-0041	52	Limit Switch ASSY	-----
9	Mouthpiece Base Spring	BLQ3N-0080	53	Connector	-----
10	Air Inlet Flange	BLFQ2-0110	54	Connector Flange	BLF2-0110
11	Holder Base	BLFQ2-0100	55	Driver Code	BLF7-0611
12	Torque Adjusting Nut	CL21-0040	56	Vinyl Tube 4x7 (x3.6pcs)	CLQ4-0650
13	Torque Adjusting Spring Holder	CL2-0010	57	Cable Tie (x18pcs)	CLQ4-0660
14	Torque Adjusting Spring 1.2 φ (Black)	CL2-0050-2			
15	Collar Stopper	CL2-0100			
16	Joint Shaft Collar	CL2-0111			
17	Collar Spring	CL2-0120			
18	Washer 6.5x8.5x0.5	CL2-0130			
19	Torque Adjusting Nut Fixing Ring	BL2-0020			
20	Flange	BLF2-0040			
21	Torque Adjusting Bolt (Steel)	BLF2-0071			
22	Front Cover	BLF2-0080			
23	Totsupura Screw 2.6x6 (x2pcs)	MSPF26060NIGP			
24	Fixing Bush	BLF2-0090			
25	Clutch Panel B Spring φ 0.9	CL2-0160			
26	Clutch Panel B	CL2-0151			
27	Clutch Panel A	CL2-0171			
28	Thrust Bearing T1370	CL2-0190			
29	Joint Shaft	CL2-0210			
30	Steel Ball φ 1.5 (x2pcs)	BALL-015			
31	Steel Ball φ 2.0 (x2pcs)	BALL-02			
32	Steel Ball φ 3.17	BALL-0317			
33	Cam	BLF2-0230			
34	Thrust Bearing 6x11	A45-0170			
35	Gear Case	CL21-0270			
36	T-shaped limit pin	CL2-0250			
37	JCIS Cross recessed screw 2x4 (x6pcs)	SPC20X040			
38	Washer 6.1x10.5x0.15	CL2-0700-15			
39	Drive Shaft ASSY	CL2-0280			
40	Shaft φ 2x9.8	CL65PS-0150			
41	Planet Gear (x3pcs)	CL2-0290			
42	Upper Floor ASSY	BL2-0320			
43	Planet Gear (x3pcs)	BL2-0290			
44	Oil Seal 9x19.9x0.4	BL2-0330			