

HDP-50

HDP-5

Fig-1


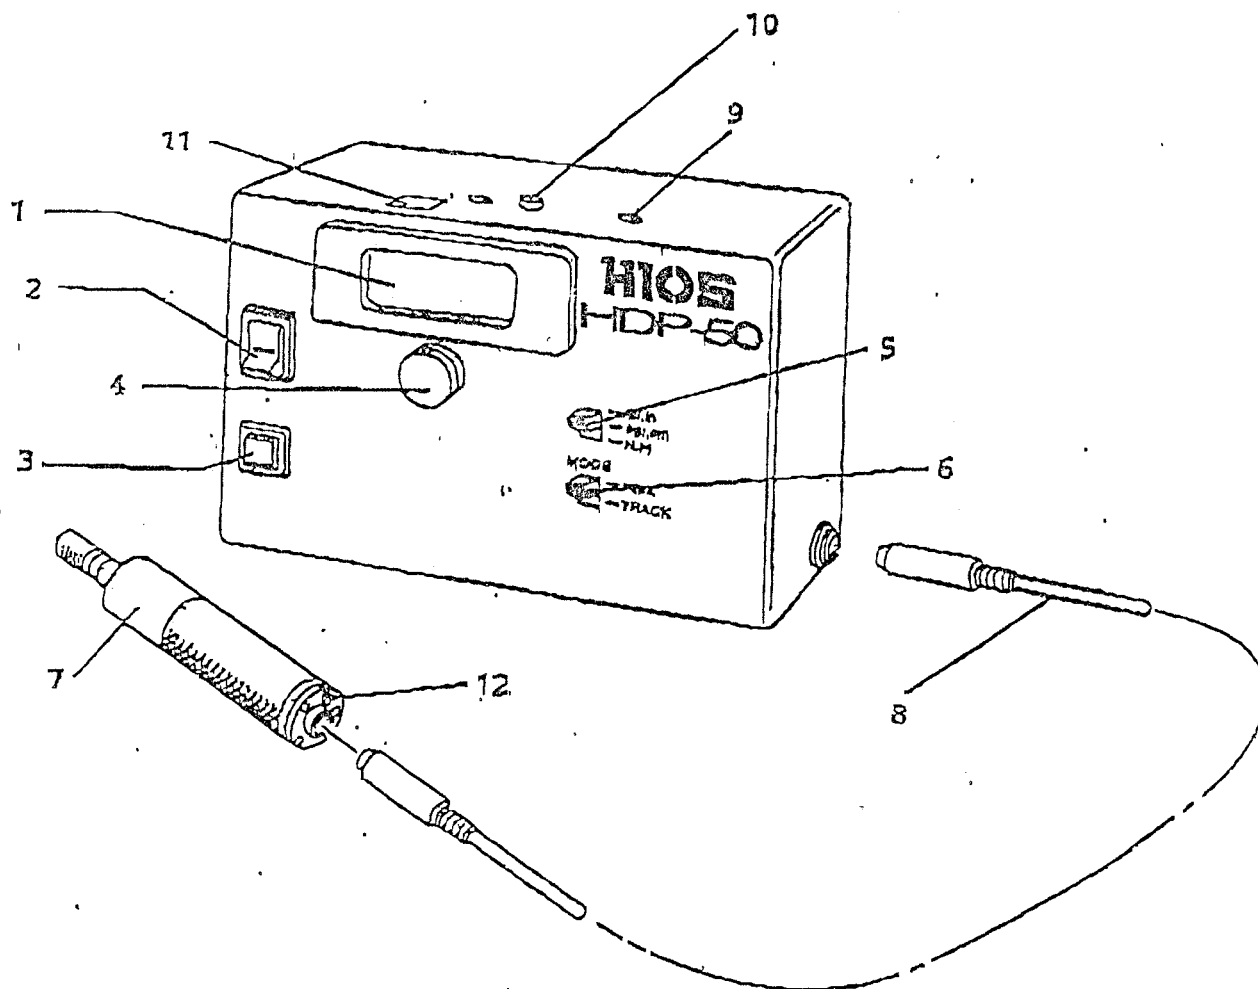


Fig-2

INTERNAL BOARD

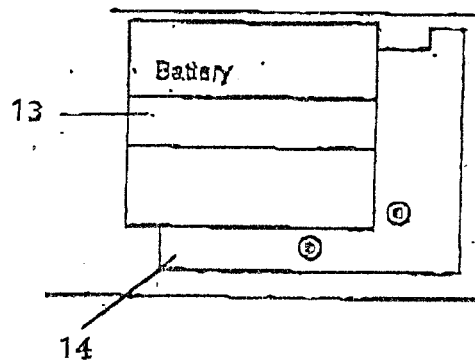

(HDP-102)

Model HDP-5/HDP-50

November, 1988

Ref.No.	Parts Name	Parts No.
Fig-1		
1	LCD Display (included in PCB assy, No.14)	_____
2	Power Switch	PSW-2022
3	Reset Switch (Round Type) DS-683	RSW-DS633
4	Zero Adjust Knob 3296	ZAK
	Zero Adjust Control (Zero Adj. Volume) 3296	ZAB
5	Unit Converter Switch	UCSW
6	Mode Switch	UCSW
7	Detector	
	for HDP-5 (HIOS)	TDA-HDP-5
	for HDP-5 (HEX)	TDA-HDP-5X
	for HDP-50 (HIOS)	TDA-HDP-50
	for HDP-50 (HEX)	TDA-HDP-50X
8	Connector cord (6P)	DPC-0506
9	Connector for Charger	CN-HP
10	Analog Output Connector (included in No.14)	_____
11	Printer Output Connector (")	_____
12	Hand Reset Switch for HDP-50 (Round)	RSW-LTM1-01
Fig-2		
13	Battery Pack (5KF-A1200)	TB-5K
14	P.C.B. Assembly (W/LCD display complete)	
	for HDP-5	PCB-1215B-5
	for HDP-50	PCB-1215B-50

(inside No.7)

- * Transducer Assembly for HDP-5
- * Transducer Assembly for HDP-50

SG-HDP-5
SG-HDP-50