

Fig-1


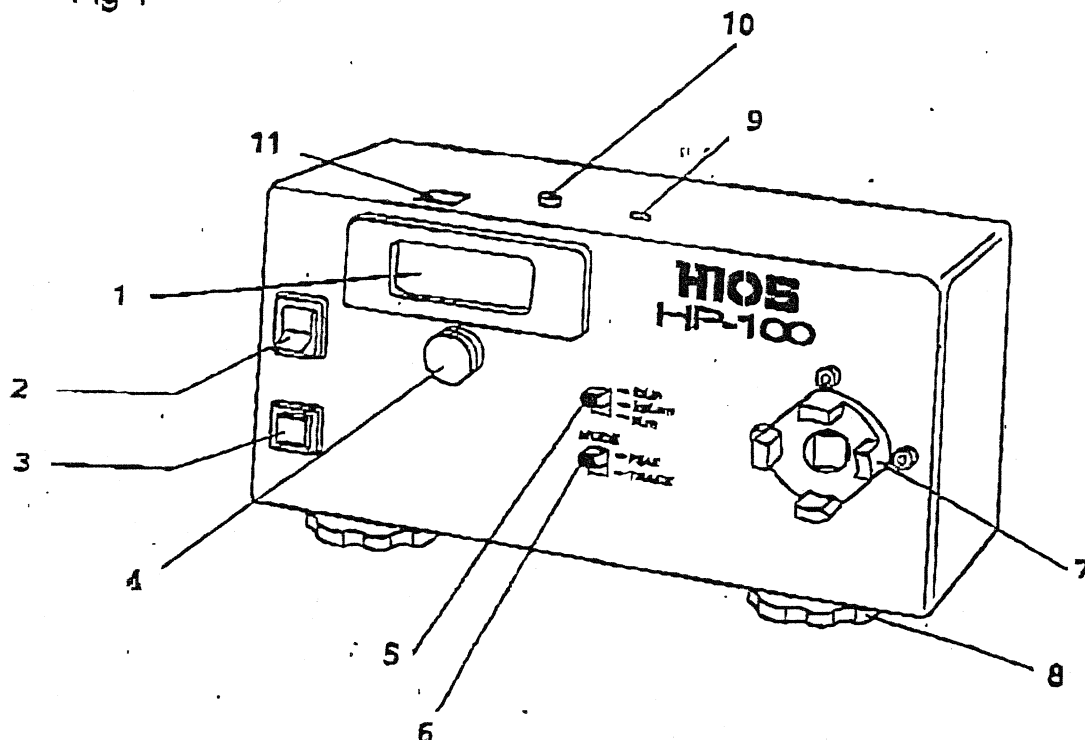


Fig-2

INTERNAL BOARD

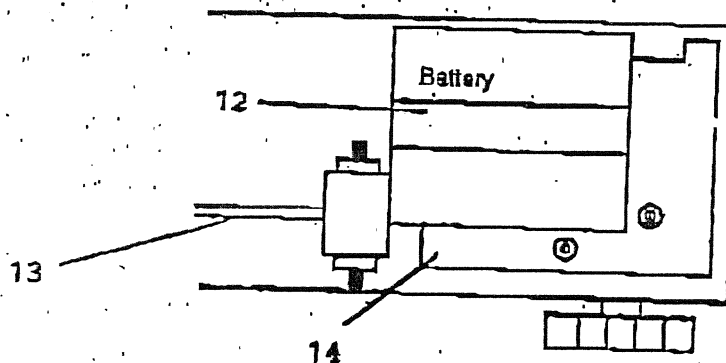

(HP-102)

PARTS LIST OF TORQUEMETER Model HP-10/HP-100

November, 1999

Ref.No.	Parts Name	Parts No.
Fig-1		
1	LCD Display (included in PCB assy, No.14)	_____
2	Power Switch	PSW-2022
3	Reset Switch (Round Type) DS-663	RSW-DS633
4	Zero Adjust Knob 3296	ZAK
	Zero Adjust Control (Zero Adj. Volume) 3296	ZAB
5	Unit Converter Switch	UCSW
6	Mode Switch	UCSW
7	Balancing Socket, Bearing & Bearing Case	TCS
8	Sam Screw (Fixture Clamp Knob)	SMS-HP
9	Connector for Charger	CN-HP
10	Analog Output Connector (included in No.14)	_____
11	Printer Output Connector (")	_____
Fig-2		
12	Battery Pack (5KF-A1200)	TB-5K
13	Transducer Assy for HP-10	SG-HP-10
	Transducer Assy for HP-100	SG-HP-100
14	P.C.B. Assembly (W/LCD display complete)	
	for HP-10	PCB-1215B-10
	for HP-100	PCB-1215B-100