

VMS -40 /-50 /-50VZ

Issued : July, 1999
Revised : June.26th,2012



included with #18

(Ver. VMS - 02")

HIOS Inc.

DRIVER STAND VMS-40,-50,-50VZ

Issued : July, 1999
Revised : JUN.26,2012

Ref. No.	Parts Name	Parts No.
* Driver Stand, Model VMS-40	(1-17)	VMS-40
* Driver Stand, Model VMS-50	(1-17)	VMS-50
* Driver Stand, Model VMS-50VZ	(1-17)	VMS-50VZ
1. Stand Base		VMS40-0010
2. Foot Rubber (Used x5 / Supply individually)		VMS40-0020
3. Pole for VMS-40 $\phi 16 \times 400 \text{mm}$		VMS40-0030
Pole for VMS-50,-50VZ $\phi 16 \times 500 \text{mm}$		VMS50-0030
VMS-40 Arm Assembly (4-9, 11-14, 15, 16, 17,) for CL		VMS40-ARM
4. Pole Stand (Used x2 / Supply individually)		VMS40-0040
5. Slide Ball Bearing		VMS40-0051
6. Bearing Cover (Used x2 / Supply individually)		VMS40-0060
7. Arm Set Cover		VMS40-0070
8. Arm A		VMS40-0080
9. Arm B		VMS40-0090
10. Arm Bolt(x1) and Bearing w/washer(x2) SET		VMS40-BOLT-SET
11. Thrust Bearing w/washer (included #10)		—
12. Coil Spring		VMS40-0130
13. Ring Assy		VMS40-2140
14. Cords Snap		VMS40-0150
15. Standard Driver Holder for VMS-40/50 Type (CL,SS, α ,BL*)		VMS40-0180
15. Standard Driver Holder for VMS-50VZ (VZ-18/30)		VMS-0900-VZ18
*Except BL-7000		
<OPTION HOLDER>		
15. Driver Holder for VZ-1510 Type		VMS50-0190
15. Driver Holder for BL-7000 Type		VMS-0900-BL7
15. Driver Holder for VB-1510 Type		VMS-0910-PG5
15. Driver Holder for VB-18/30 (LEVER) Type		VMS-0900-PG7
15. Driver Holder for VB-18/30 (PUSH) Type		VMS-0900-VB18PS
16. Stop Bar Assy		VMS40-3220
17. Arm Stopper		VMS40-0230
18. Base Set Screw (W/Bolt)		VMS40-6X10BOLT
19. Pole Set Screw(W/Bolt)		VMS40-5X10
20. Washer		VMS40-W
21. Spring Washer		VMS40-SPW
22. Nut		VMS40-NT
23. Bolt 6X20		VMS40-6X20BOLT