


UDBP-TA70 BATTERY OIL-PULSE TOOL

EXPLODED VIEW

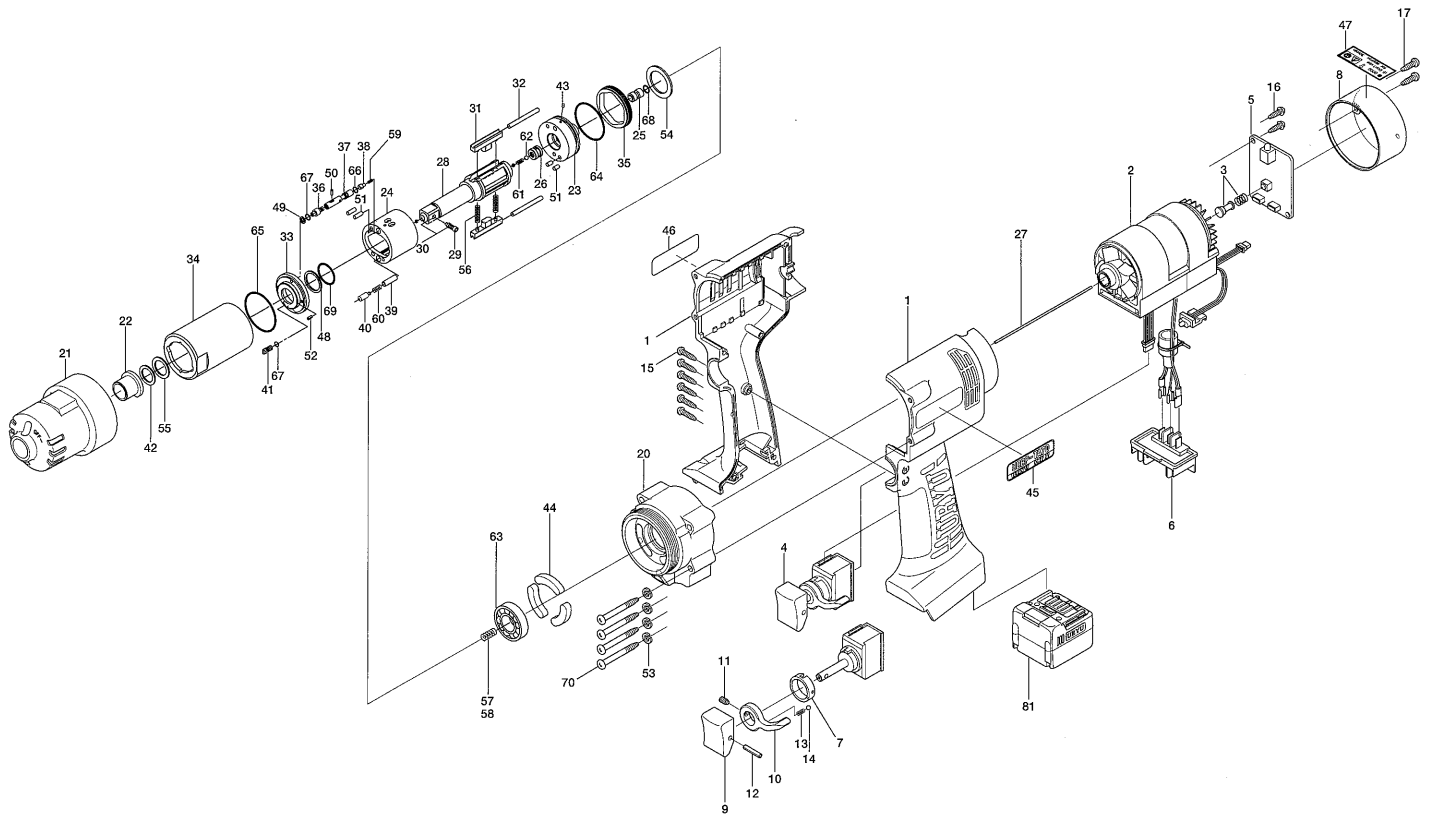

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
Common Parts				#27	098-130-7	Operating Rod (1.4×103.2)	1	#54	975-752-0	Adjusting Spacer (15×10×t)	1
863-970-1 Handle Assembly				#28	18E-319-3	Anvil	1	#55	975-754-0	Adjusting Spacer (17×12.5×t)	1
#1	863-958-1	Handle (R & L)	1	#29	891-300-1	Socket Pin Assembly	1	#56	976-788-0	Spring (3.5×25) WPC	2
#2	863-954-1	Motor Assembly	1	#30	891-550-1	Anvil Assembly	1	#57	976-662-0	Spring (3.3×18) Strong	1
#3	861-173-1	Slide Base Assembly	1	#31	147-440-6	Driving Blade	2	#58	976-857-0	Spring (3.3×17) Medium	1
#4	861-174-1	Switch Assembly	1	#32	147-974-6	Roller Pin (2.5×28)	2	#59	976-817-0	Spring (2.8×7)	1
#5	863-972-1	Operating Board (with LED)	1	#33	18E-904-3	Front Liner Plate	1	#60	976-877-0	Spring (3×14)	1
#6	861-194-1	Battery Contact	1	#34	147-905-6	Liner Casing	1	#61	976-645-0	Spring (2.4×5)	1
#7	861-177-1	Sleeve	1	#35	147-906-6	Liner Casing Cover	1	#62	981-001-0	Ball (3/32)	1
#8	861-178-1	Handle Cover	1	#36	174-907-2	Relief Valve Spindle	1	#63	982-902-0	Ball Bearing (6901)	1
#9	147-107-2	Valve Lever	1	#37	098-970-7	Relief Valve	1	#64	990-923-0	O-Ring (SNS-26)	1
#10	480-212-8	Reverse Lever	1	#38	144-270-0	Pressure Regulator Valve	1	#65	990-334-0	O-Ring (JW-1530-24)	1
#11	954-105-0	Allen Head Screw (M4×5)	1	#39	18F-274-2	Spring Holder	1	#66	990-621-0	O-Ring (3.8×1.8×1.0)	1
#12	973-014-0	Roll Pin (2×14)	1	#40	18E-276-3	Pressure Adjusting Valve	1	#67	990-970-0	O-Ring (SNS-2)	2
#13	976-006-0	Spring (3×5)	1	#41	194-742-0	Oil Plug	1	#68	991-025-0	X-Ring (4.7×2.2×1.25)	1
#14	981-002-0	Ball (1/8)	1	#42	178-327-9	Anvil Front Spacer	1	#69	992-020-0	SU-Ring (Q-12)	1
#15	861-179-1	Tapping Screw	7	#43	147-064-6	Plug	1	#70	963-366-0	Tapping Screw (M4×55)	4
#16	861-180-1	Tapping Screw	2	#44	080-835-3	Filter	3	ACCESSORIES			
#17	861-181-1	Tapping Screw	2	#45	083-924-9	Name Plate UDBP-TA70(P)	1	#80	939-091-0	Allen Wrench (1.5)	1
#20	098-065-7	Handle Front Cover	1	#46	094-997-4	Plate (Address & Others)	1	#81	861-187-1	Battery (UB333Li)	1
#21	094-439-5	Front Casing	1	#47	094-995-4	Plate (Warning)	1	#82	861-185-1	Battery Charger (UBC-A) with Power Code	1
#22	190-328-6	Anvil Bushing	1	#48	944-013-0	Back-up Ring (P-12)	1	#83	861-186-1	Battery Charger (UBC-E) with Power Code	1
#23	18E-901-3	Rear Liner Plate	1	#49	944-203-0	Back-up Ring (3.1×5×1)	1	#84	861-196-1	Power Code for UBC-A	1
#24	18E-902-3	Liner	1	#50	970-013-0	Pin (H)(1.5×4)	1	#85	861-197-1	Power Code for UBC-E	1
#25	145-546-6	Piston	1	#51	970-204-0	Pin (H)(3×6)	4				
#26	145-929-6	Check Valve Cover	1	#52	969-449-0	Pin (G)(3×6)	1				
				#53	962-006-0	Spring Washer (2-4S)	4				

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

Jun 2012

OKA-550-12-07-11-0501