


UD-50 SERIES AIR DRILLS

EXPLODED VIEW

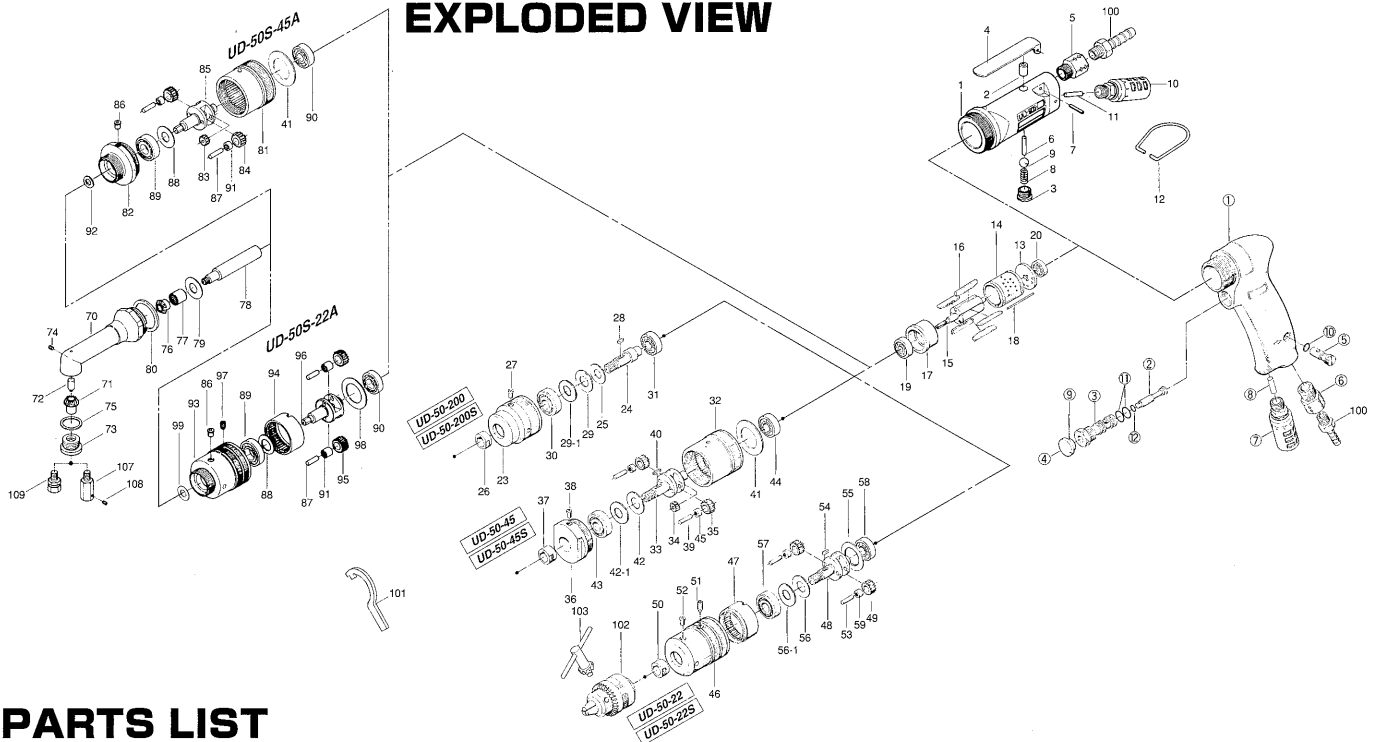

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
619-984-4 Casing Assembly (Straight Handle) (Components are marked with "O")				#30	982-140-0	Ball Bearing (6000Z)	1	#80	975-795-0	Adjusting Spacer (29×26×t)	1
#1	619-025-4	○ Casing	1	#31	982-402-0	Ball Bearing (EE-3)	1	479-005-4 UD-50S-45A Gear Box Assembly			
#2	553-103-1	○ Valve Rod Bushing	1	611-005-5 Gear Box Assembly for UD-50-45 & UD-50S-45				#81	611-029-5	Gear Casing	1
#3	201-108-1	○ Valve Plug	1	#32	611-029-5	Gear Casing	1	#41	611-296-4	Front Plate Spacer	1
#4	500-107-1	○ Valve Lever	1	#33	674-319-1	Anvil	1	#82	479-037-4	Gear Casing Connector	1
#5	191-091-5	○ Air Inlet Bushing	1	#34	674-460-1	Rotor Gear	1	#83	674-460-1	Rotor Gear	1
#6	970-321-0	○ Pin (H)(4×21)	1	#35	674-470-1	Planet Gear	2	#84	674-470-1	Planet Gear	2
#7	973-124-0	○ Roll Pin (3×24)	1	#36	674-070-1	Gear Casing Cover	1	#85	479-480-4	Gear Cage	1
#8	977-154-0	○ Cone Spring (7×7.5×17)	1	#37	603-411-1	Chuck Retainer	1	#86	968-130-0	Grease Cup (3/16)	1
#9	981-030-0	○ Polyurethane Ball (3/8)	1	#38	968-130-0	Grease Cup (3/16)	1	#87	972-114-0	Needle Roller (4×13.8)	2
#10	235-885-0	○ Silencer	1	#39	972-114-0	Roller Pin (4×13.8)	2	#88	975-162-0	Spacer (24×12.5×0.4)	1
#11	611-744-0	○ Silencer Tube	1	#40	974-008-0	Key (3×8)	1	#89	982-100-0	Ball Bearing (6000)	1
#12	010-790-1	Suspension Ring	1	#41	611-296-4	Front Plate Spacer	1	#90	982-402-0	Ball Bearing (EE-3)	1
611-984-1 Handle Assembly (Pistol Handle) (Components are marked with "X")				#42	975-162-0	Spacer (24×12.5×0.4)	1	#91	988-450-0	Needle Bearing (HK-0408)	2
#1	611-025-1	× Valve	1	#42-1	975-752-0	Adjusting Spacer (15×10×t)	1	#92	602-483-1	Gear Cage Spacer	1
#2	603-100-2	× Valve	1	#43	982-140-0	Ball Bearing (6000Z)	1	479-005-0 UD-50S-22A Gear Box Assembly			
#3	606-101-1	× Valve Bushing	1	#44	982-402-0	Ball Bearing (EE-3)	1	#93	479-029-0	Gear Casing	1
#4	603-107-2	× Throttle Trigger	1	#45	988-450-0	Needle Bearing (HK-0408)	2	#94	611-465-1	Internal Gear	1
#5	023-240-1	× Regulator Valve	1	611-005-1 Gear Box Assembly for UD-50-22 & UD-50S-22				#95	603-470-1	Planet Gear	2
#6	191-091-5	× Air Inlet Bushing	1	#46	611-029-1	Gear Casing	1	#96	479-480-0	Gear Cage	1
#7	235-885-0	× Silencer	1	#47	611-465-1	Internal Gear	1	#97	952-205-0	Allen Head Screw (M5×5)	1
#8	611-744-0	× Silencer Tube	1	#48	603-319-1	Anvil	1	#86	968-130-0	Grease Cup (3/16)	1
#9	973-010-0	× Roll Pin (2×10)	1	#49	603-470-1	Planet Gear	2	#87	972-114-0	Needle Roller (4×13.8)	2
#10	990-003-0	× O-Ring (P-5)	1	#50	603-411-1	Chuck Retainer	1	#88	975-162-0	Spacer (24×12.5×0.4)	1
#11	990-610-0	× O-Ring (8×2)	2	#51	952-205-0	Allen Head Screw (M5×5)	1	#98	975-244-0	Spacer (31.5×26×2)	1
#12	990-203-0	× O-Ring (JW1516-3)	1	#52	968-130-0	Grease Cup (3/16)	1	#89	982-100-0	Ball Bearing (6000)	1
Common Parts				#53	972-114-0	Roller Pin (4×13.8)	2	#90	982-402-0	Ball Bearing (EE-3)	1
#13	603-285-1	Rear Plate	1	#54	974-008-0	Key (3×8)	1	#91	988-450-0	Needle Bearing (HK-0408)	2
#14	603-286-1	Cylinder	1	#55	975-244-0	Spacer (31.5×26×2)	1	#99	479-483-1	Gear Cage Spacer	1
#15	603-287-1	Rotor	1	#56	975-162-0	Spacer (24×12.5×0.4)	1	Standard Accessories			
#16	603-288-1	Blade	5	#56-1	975-752-0	Adjusting Spacer (15×10×t)	1	#100	940-114-0	Air Hose Nipple (1/4×3/8)	1
#17	603-289-1	Front Plate	1	#57	982-140-0	Ball Bearing (6000Z)	1	#101	937-006-0	Spanner (4×21×150)	1
#18	971-021-0	Pin (1.8×44)	1	#58	982-402-0	Ball Bearing (EE-3)	1	For UD-50 & 50S series			
#19	982-021-0	Ball Bearing (626)	1	#59	988-450-0	Needle Bearing (HK-0408)	2	#102	923-070-0	Chuck (8mm)	1
#20	982-026-0	Ball Bearing (634)	1	602-005-1 Middle Shaft Casing Assembly				#103	927-051-0	Chuck Handle (6.5)	1
611-005-8 Gear Box Assembly for UD-50-200 & UD-50S-200				#70	602-034-1	Middle Shaft Casing	1	For UD-50S-22A & 45A series			
#23	611-039-8	Anvil Casing	1	#71	602-430-1	Driven Gear	1	#104	936-100-0	Spanner (8×2×90)	1
#24	611-319-7	Anvil	1	#72	602-431-1	Driven Gear Spindle	1	#105	936-512-0	Spanner (12)	1
#25	611-334-7	Anvil Spacer	1	#73	602-075-1	Casing Front Plate	1	#106	939-108-0	Allen Wrench (1.5)	1
#26	603-411-1	Chuck Retainer	1	#74	953-104-0	Allen Head Screw (M4×4)	1	#107	924-011-0	Drilling Adapter (4mm)	1
#27	968-130-0	Grease Cup(3/16)	1	#75	975-760-0	Adjusting Spacer (20×17×t)	1	#108	953-053-0	Allen Head Screw (M3×3)	1
#28	974-008-0	Key(3×8)	1	#76	602-420-1	Driving Gear	1	#109	923-100-0	Cone Jaw Chuck Assembly (Opt.)	1
#29	975-149-0	Spacer(22×12.5×0.4)	1	#77	602-455-1	Middle Shaft Bushing	1				
#29-1	975-752-0	Adjusting Spacer(15×10×t)	1	#78	602-500-1	Middle Shaft	1				
				#79	975-750-0	Adjusting Spacer (14×8×t)	1				

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

2013.03

OKA-145-13-01-15-2001