


UA90MC OIL-PULSE WRENCH

EXPLODED VIEW

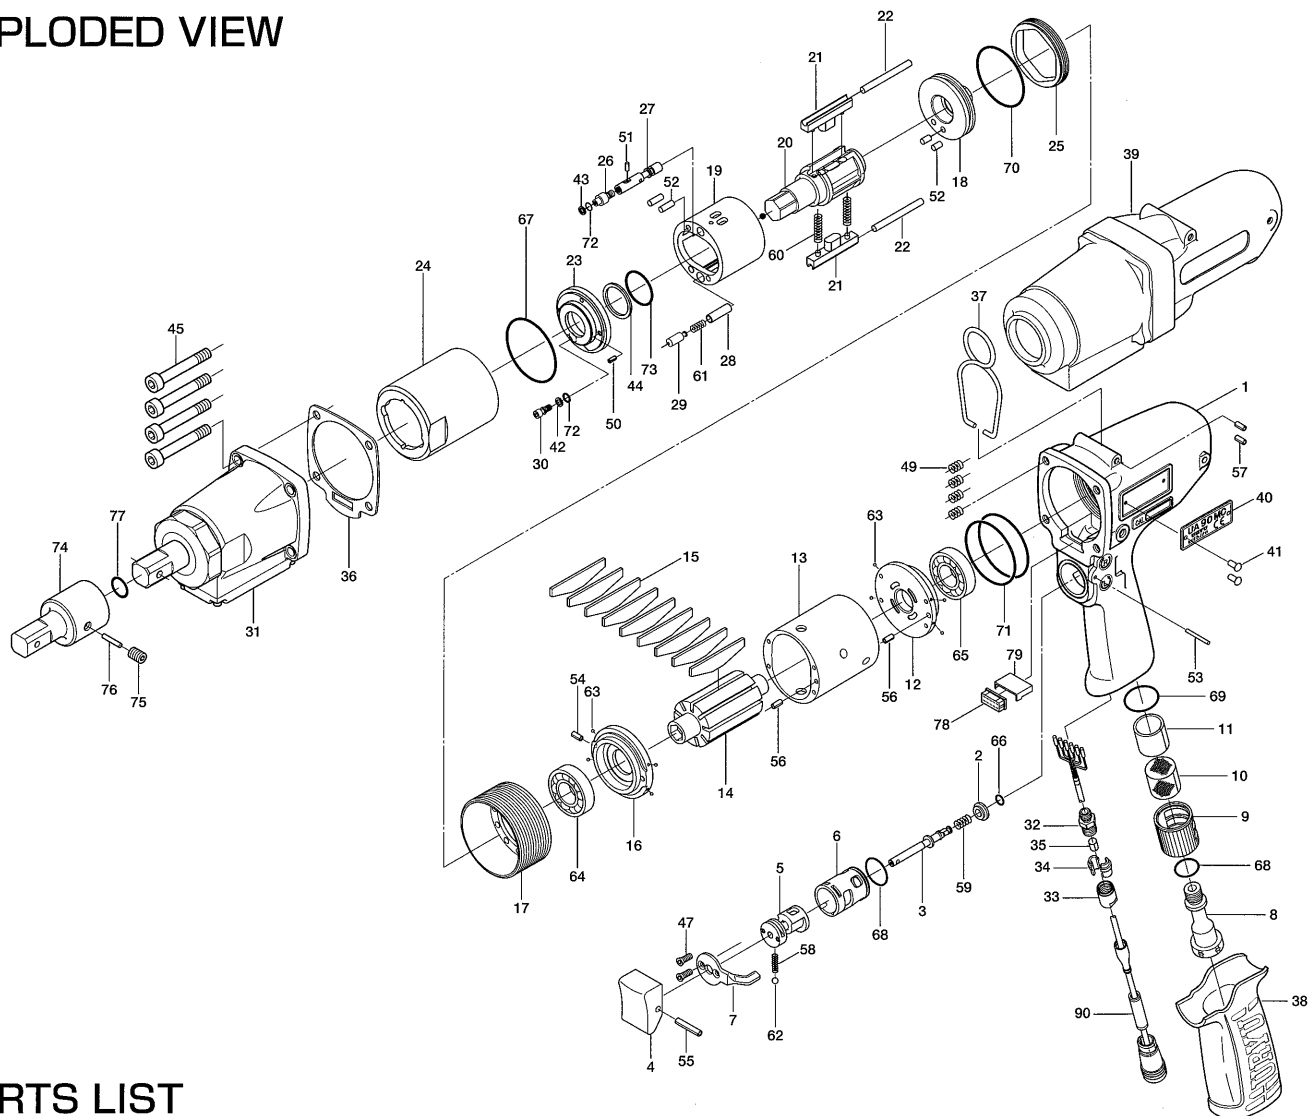

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	131-025-8	Handle	1	#30	194-742-3	Oil Plug	1	#61	976-873-0	Spring (3.5×18)	1
# 2	147-100-8	Valve	1	#31	851-681-1	Sensor Casing Assembly (S08S)	1	#62	981-002-0	Ball (1/8)	1
# 3	147-104-8	Valve Rod	1	#32	851-301-1	Connector	1	#63	981-045-0	Ball (1.5)	8
# 4	147-107-2	Valve Lever	1	#33	851-302-1	Cap	1	#64	982-903-0	Ball Bearing (6902)	1
# 5	147-210-8	Reverse Valve	1	#34	851-303-1	Stopper	2	#65	982-949-0	Ball Bearing (16001)	1
# 6	147-211-8	Reverse Valve Bushing	1	#35	131-395-8	Outer Ring	1	#66	990-306-0	O-Ring (APR-569-004)	1
# 7	147-212-8	Reverse Lever	1	#36	149-867-5	Front Casing Packing	1	#67	990-337-0	O-Ring (JW1530-27)	1
# 8	147-091-8	Air Inlet Bushing	1	#37	174-790-0	Suspension Ring	1	#68	990-914-0	O-Ring (SNS-16)	2
# 9	147-780-9	Exhaust Stack	1	#38	17D-842-3	Handle Cover	1	#69	990-919-0	O-Ring (SNS-22)	1
#10	147-042-8	Silencer	1	#39	131-840-8	Casing Protector	1	#70	990-924-0	O-Ring (SNS-30)	1
#11	147-835-8	Filter (K100)	1	#40	17E-924-9	Metal Tag (UA90MC)	1	#71	990-932-0	O-Ring (SNS-42)	2
#12	143-285-9	Rear Plate	1	#41	930-205-0	Driver Rivet	2	#72	990-970-0	O-Ring (SNS-2)	2
#13	143-286-9	Cylinder	1	#42	944-003-0	Back-up Ring (3×5×1)	1	#73	992-021-0	SU-Ring (Q16)	1
#14	147-287-8	Rotor	1	#43	944-203-0	Back-up Ring (3.1×5×1)	1	#74	904-190-0	Extension Bar (1/2×60)	1
#15	147-288-8	Blade	9	#44	944-215-0	Back-up Ring (16×19.9×1.5)	1	#75	953-205-0	Allen Head Screw (M5×5)	1
#16	143-289-9	Front Plate	1	#45	945-117-0	Allen Head Bolt (M5×16)	4	#76	971-220-0	Pin (3×20)	1
#17	143-036-9	Hammer Casing Connector	1	#47	948-423-0	Allen Flush Head Screw (M3×6)	2	#77	990-016-0	O-Ring (P-16)	1
#18	17E-901-9	Rear Liner Plate	1	#49	965-011-0	Heli-Sert (M5×1.5D)	4	#78	909-918-0	Double-Row Socket	1
#19	18F-902-5	Liner	1	#50	969-449-0	Pin (G)(3×6)	1	#79	911-012-0	Connector Cover	1
#20	17E-319-9	Anvil	1	#51	970-091-0	Pin (H)(2×4.5)	1	ACCESSORIES			
#21	147-440-9	Driving Blade	2	#52	970-205-0	Pin (H)(3×7)	4	#90	910-258-0	Joint Cable Assembly	1
#22	147-974-8	Roller Pin (2.5×30)	2	#53	971-125-0	Pin (2×25)	1	#91	939-091-0	Allen Wrench (1.5)	1
#23	18F-904-5	Front Liner Plate	1	#54	973-006-0	Roll Pin (2×6)	1	#92	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#24	147-905-8	Liner Casing	1	#55	973-014-0	Roll Pin (2×14)	1	#93	909-749-0	Solenoid Valve Assembly	1
#25	147-906-8	Liner Casing Cover	1	#56	973-068-0	Roll Pin (2.5×8)	2	#94	910-263-0	Sensor Cable Assembly (3F5)	1
#26	174-907-2	Relief Valve Spindle	1	#57	973-308-0	Roll Pin (5×8)	2	#95	910-633-0	Connector Cover	1
#27	17E-970-9	Relief Valve	1	#58	976-006-0	Spring (3×5)	1				
#28	18F-274-8	Spring Holder	1	#59	976-643-0	Spring (7.5×9.7)	1				
#29	17E-276-9	Pressure Adjusting Valve	1	#60	976-794-0	Spring (3.8×33)WPC	2				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

Jun 2012

OKA-546-12-06-20-0501