



URYU IMPACT WRENCHES

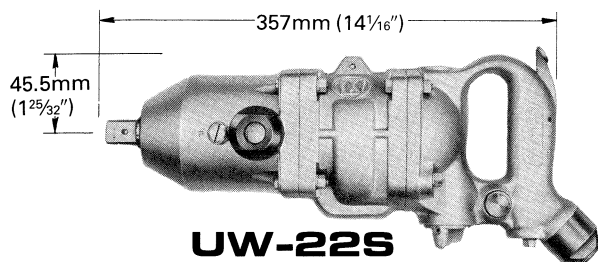


UW-22S

(Straight type)

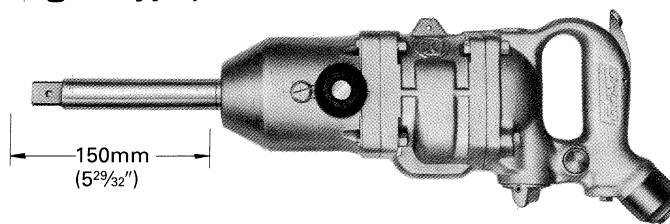

UW-22S(L)

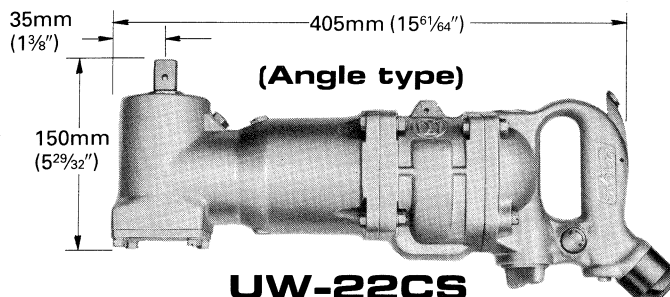


UW-22CS

(Angle type)

Inner Trigger
Handle (Option)
is available.


(Please specify "IN"
when ordering.)

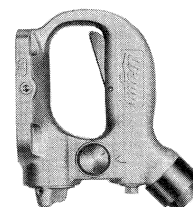

SPECIFICATIONS


Model	Capacity Bolt Size		Free Speed (about)	Weight less socket (about)		Drive Shank		Air Inlet Thread (Pipe Tap)	Air Hose Size		Average Air Consumption (about)	
	in	mm	r.p.m.	lb.	kg	in	mm		in	mm	ft ³ /min.	m ³ /min.
UW-22S	7/8	22	4,000	17.4	7.90	3/4	19.05	N.P.T. 3/8	1/2	12.7	26.5	0.75
UW-22S(L)	7/8	22	4,000	18.3	8.30	3/4	19.05	N.P.T. 3/8	1/2	12.7	26.5	0.75
UW-22CS	7/8	22	4,000	29.7	13.50	3/4	19.05	N.P.T. 3/8	1/2	12.7	26.5	0.75
UW-022S	7/8	22	3,800	16.8	7.65	3/4	19.05	N.P.T. 3/8	1/2	12.7	26.5	0.75
UW-022S(L)	7/8	22	3,800	17.8	8.00	3/4	19.05	N.P.T. 3/8	1/2	12.7	26.5	0.75

Standard Accessories: Socket, Air Hose Nipple

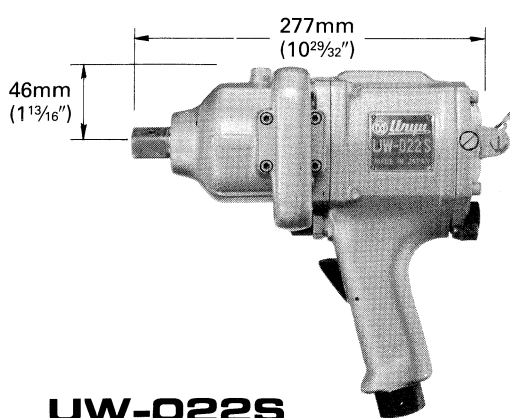


UW-022S

(Offset type)

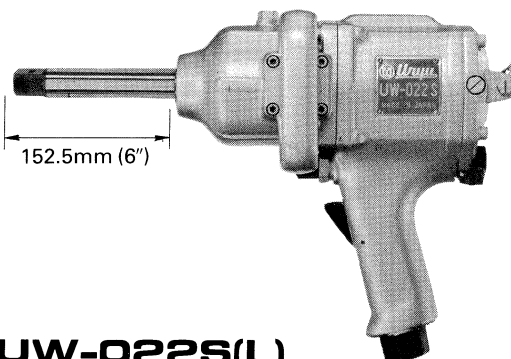

UW-022S(L)

SWIVEL Air Hose Joint
Optionally available for
UW-022S

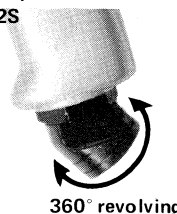

IMPORTANT!!

- ★ **Air Pressure:** — Air Pressure of 0.6MPa (85 psi) is recommended for the most efficient performance. Too high air pressure will shorten tool's life.
- ★ **Lubrication:**— **For Air Motor**— Supply Turbine Oil properly through Air Inlet or Line Oiler every before and after operation. (for examples, MOBIL TURBINE OIL #32, SHELL TURBINE OIL #32 and or equivalents.)
- For Impacting Part** — Supply recommended lubricants (For examples MOBIL COMPOUND BB, SHELL MACOMA 33 and or equivalent.) of about 30 c.c. (for UW-022 series) once every three months. Over lubrication causes dull motion or heating.
- ★ **Dry & Clean Air:** — Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.
- ★ **Air Hose & Joints:** — Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- ★ **Sockets:** — Do not use Sockets which are worn at female square where Anvil fits in.
- ★ **Anvil & Hammer:** — Replace Anvil & Hammer together when either of them is found worn.
- ★ **Genuine Parts:** — Use only URYU's genuine spare parts for replacement.
- ★ **Regular Overhaul:** — At least once every three months or periodical overhaul by a competent person is needed for best performance and trouble-less operation.

Distributed by:

Printed in Japan

URYU SEISAKU, LTD.

Claims must be filed only with distributors within ten (10) days from delivery.