



URYU IMPACT WRENCHES


Outer Trigger Type

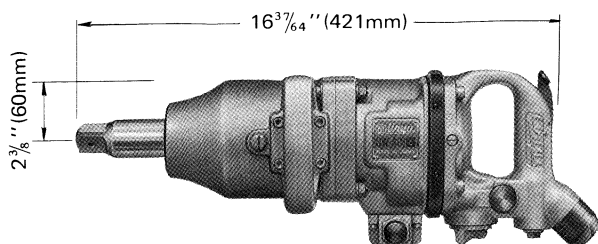


UW-401 (Out-1 1/4)

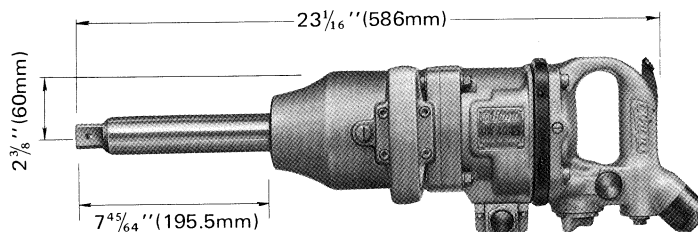

UW-401L (Out-1)


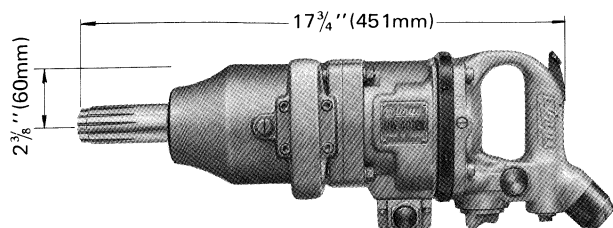


UW-401 (Out-Spline)

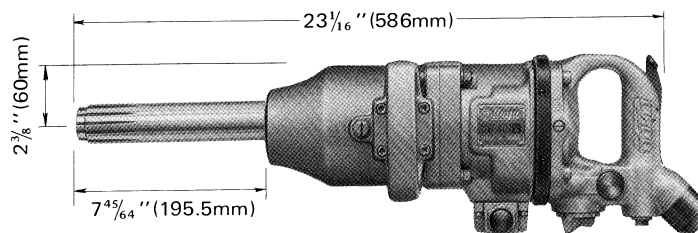

UW-401L (Out-Spline)

Inner Trigger Type

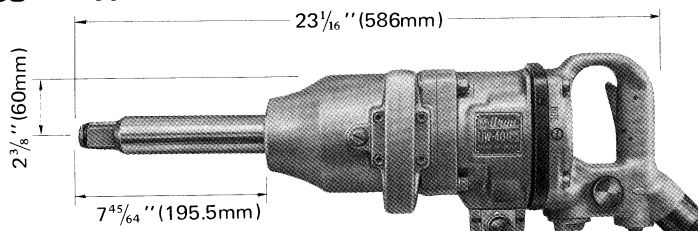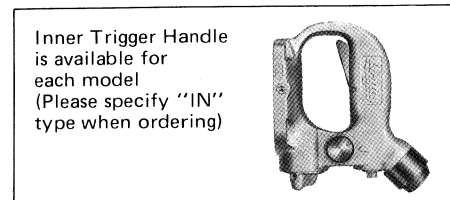

UW-401L (In-WR)

SPECIFICATIONS

Model	Capacity (Bolt Size)		Free Speed (about)	Weight less Socket (about)		Drive Shank		Air Inlet Thread (Pipe Tap)	Air Hose Size		Average Air Consumption (about)		Air Pressure	
	in	mm		lb	kg	in	mm		in	mm	ft ³ /min.	m ³ /min.	MPa	psi
UW-401 (1 1/4)	1 1/2	38	3,200	33.22	15.1	* 1 1/4	31.8	N.P.T. 1/2	1/2	12.7	42.4	1.2	0.6	85
UW-401 (SPLINE)	1 1/2	38	3,200	33.22	15.1	#5 SPLINE		N.P.T. 1/2	1/2	12.7	42.4	1.2	0.6	85
UW-401L (1)	1 1/2	38	3,200	36.30	16.5	1	25.4	N.P.T. 1/2	1/2	12.7	42.4	1.2	0.6	85
UW-401L (SPLINE)	1 1/2	38	3,200	35.64	16.2	#5 SPLINE		N.P.T. 1/2	1/2	12.7	42.4	1.2	0.6	85

* 1" (25.4mm) Square Anvil is available at user's option.
Standard Accessories: 1 pc. Air Hose Nipple, Wrenches.

IMPORTANT!!

- Air Pressure** — Air Pressure of 0.6MPa (85psi) is recommended for the most efficient performance. Too high air pressure will shorten tool's life.
- Lubrication:**— **For Air Motor**— Supply Turbine Oil properly through Air Inlet or Line Oilier every before and after operation. (for examples, MOBIL TURBINE OIL #32, SHELL TURBINE OIL #32 and or equivalents.)
- For Impacting Part** — Supply recommended high quality Grease properly (for examples, SHELL ALVANIA NO.2, SHELL ALVANIA EP, MOBILPLEX 2, MOBILPLEX 47 and or equivalents.) once every three months and when the tool is overhauled.
- Over-greasing will cause dull motion or heating.
- Dry & Clean Air** — Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.
- Air Hose & Joints** — Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- Sockets** — Do not use Sockets which are worn at female square where Anvil fits in.
- Anvil & Hammer** — Replace Anvil & Hammer together when either of them is found worn.
- Genuine Parts** — Use only URYU's genuine spare parts for replacement.
- Regular Overhaul** — Regular overhaul of once every three months is recommended to keep sufficient performance and to prevent trouble.

Distributed by:

Printed in Japan

URYU SEISAKU, LTD.

Claims must be filed only with distributors within ten (10) days from delivery.