

URYU HEAVY-DUTY IMPACT WRENCHES

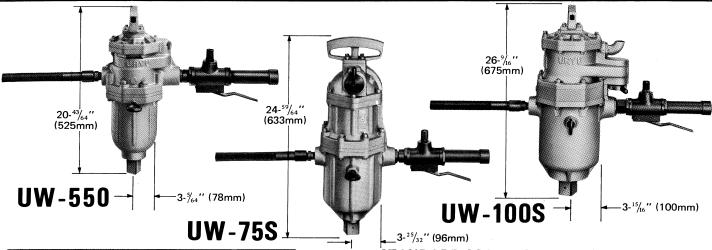

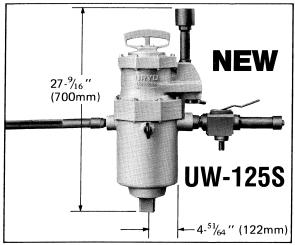

When ordering optional sized sockets, please specify each size of Drive Shank (S), Across Flats (AF), Length (L) and Depth (D).

STANDARD SOCKETS Type "O" (O-Ring) Socket Retaining

method

	, ,	metrioa					
Model	S	Code	AF	L	D		
	(Drive Shank)	Number	mm	mm	mm		
UW-550	1-½" (38.1mm)	900-666-0	85	111	43		
UW-75S	1-¾′′ (44,5mm)	900-706-0	110	140	60		
	1-½" (38.1mm)	900-666-0	85	111	43		
UW-100S	2'' (51.8mm)	900-752-0	135	162	73		
	2-½" (63.5mm)	900-791-1	165	197	89		
UW-125S	2-½" (63.5mm)	900-791-1	165	197	89		

SPECIFICATIONS

Model	Capacity (Bolt Size)		Free Speed (about)	Weight (Less Socket) (about)		Drive Shank		Air Inlet Thread	Air Hose Size		Average Air Consumption (about)	
	in	mm	r.p.m.	lb	kg	in	mm	(Pipe Tap)	in	mm	ft ³ /min	m³/min
UW-550	2-1/4	55	3,500	81.4	37	1-1/2	38.1	N.P.T.1	3/4	19.0	79	2.2
UW-75S	3	76	1,500	129.8	59	© 1-¾	44.5	N.P.T.1	3/4	19.0	114	3.2
UW-100S	4	102	2,600	167.2	76	* 2	51.8	N.P.T.1	1	25.4	142	4.0
UW-125S	5	125	2,500	275.6	125	2-1/2	63.5	N.P.T. 1-1/4	1-1/4	32.0	194	5.5

Standard Accessories: Air Hose Nipple. Recommended Air Pressure: 85 psi (6kg/cm²)

- © Optional Anvil of $1-\frac{1}{2}$ " is available. * Optional Anvil of $2-\frac{1}{2}$ " is available.

IMPORTANT!!

- * Air Pressure: Air Pressure of 85 psi (6kg/cm²) is recommended for the most efficient performance. Too high air pressure will shorten tool's life.
- Lubrication: For Air Motor Supply light Spindle Oil properly through Air Inlet or Line Oiler every before and after operation. (For examples, MOBIL SPINDLE OIL NO.1, SHELL SPINDLE OIL 60 and or equivalent.)

For Impacting Part: Supply recommended high quality Grease properly (for examples, SHELL ALVANIA NO.2, SHELL ALVANIA EP. MOBILPLEX 2, MOVILPLEX 47, and or equivalents.) once every three months and when the tool is overhauled. Over-greasing will cause dull

- Dry & Clean Air: Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.
- Air Hose & Joints: Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- Sockets: Do not use Sockets which are worn at female square where Anvil fits in.
- Anvil & Hammer: Replace Anvil & Hammer together when either of them is found worn.
- Genuine Parts: Use only URYU's genuine spare parts for replacement.
- Regular Overhaul: Regular overhaul of once every three months is recommended to keep sufficient performance and to prevent trouble.

Distributed by: