



URYU IMPACT WRENCHES

LIGHT TYPE

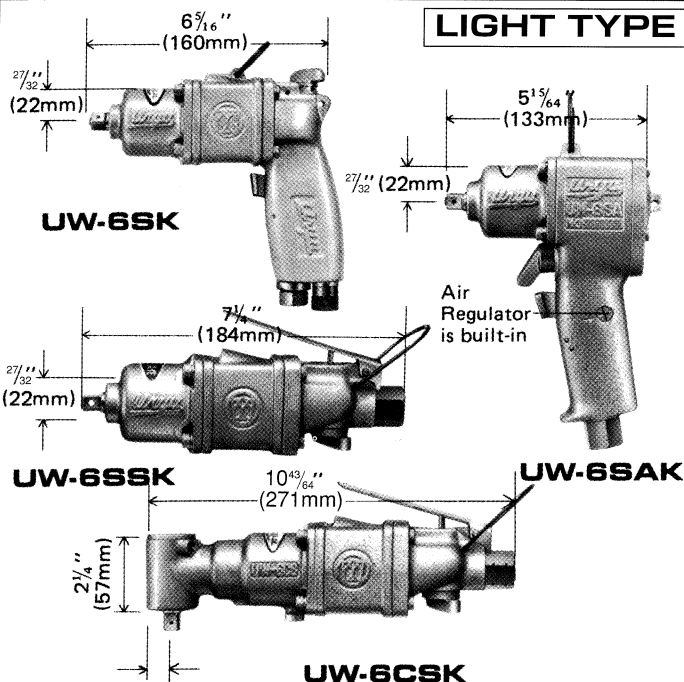


HEAVY-DUTY TYPES

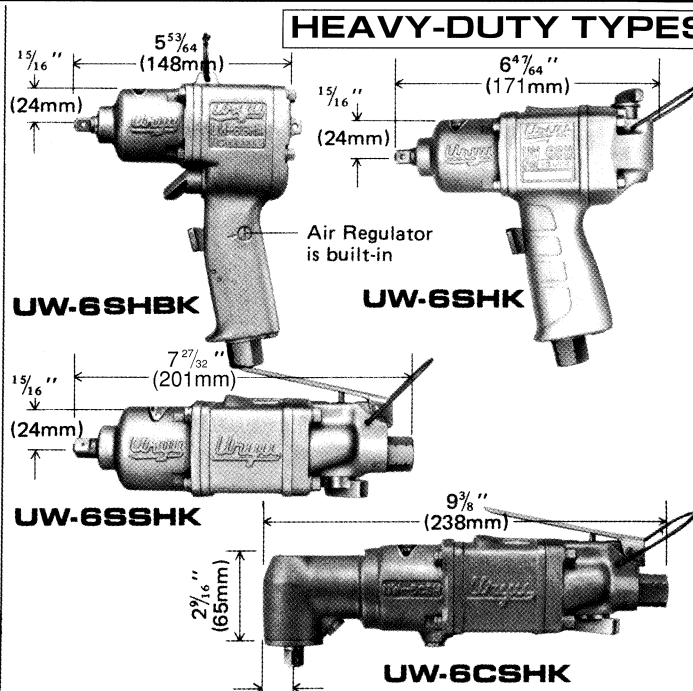


Pistol Handle

Straight Handle

Rear Exhaust Handle Types (like UW-6SRK) Exhaust noise is cut by approx. 10%

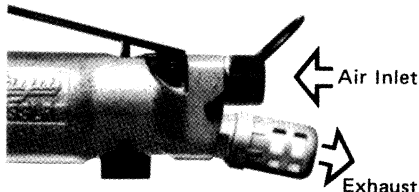

Quick-change Driver Anvil (for 1/4" Hex. bit) is available for the pistol and straight handle types.)

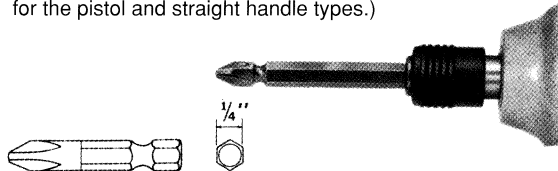

Add "D" to each model name like UW-6SDK when ordering.

SPECIFICATIONS (Subject to change without notice.)

Model		Capacity		Free Speed(about)		Weight Less Socket(about)				Average Air Consumption(about)			
Standard	Rear Exhaust	Bolt Size)		Standard	Rear Exhaust	Standard		Rear Exhaust		Standard		Rear Exhaust	
		mm	in			kg	lb	kg	lb	m ³ /min.	ft ³ /min.	m ³ /min.	ft ³ /min.
UW-6SAK	UW-6SARK	6	1/4	7,500	7,500	1.10	2.43	1.15	2.54	0.30	10.7	0.30	10.7
UW-6SK	UW-6SRK	6	1/4	7,500	7,500	1.22	2.68	1.22	2.68	0.30	10.7	0.30	10.7
UW-6SSK	UW-6SSRK	6	1/4	7,500	7,500	0.97	2.13	0.97	2.13	0.30	10.7	0.30	10.7
UW-6CSK	UW-6CSRK	6	1/4	7,500	7,500	1.42	3.12	1.42	3.12	0.30	10.7	0.30	10.7
UW-6SHBK	UW-6SHBRK	8	5/16	7,300	7,300	1.36	2.99	1.36	2.99	0.30	10.7	0.30	10.7
UW-6SHK	—	8	5/16	7,500	—	1.41	3.10	—	—	0.35	12.4	—	—
UW-6SSHK	UW-6SSHRK	8	5/16	7,500	7,500	1.12	2.66	1.26	2.77	0.35	12.4	0.35	12.4
UW-6CSHK	UW-6CSRK	8	5/16	7,500	7,300	1.71	3.76	1.71	3.76	0.35	12.4	0.35	12.4

Air Pressure : 0.6MPa (85psi) Drive Shank : 9.53mm (3/8") Air Inlet Thread (Pipe Tap) : N.P.T.1/4 Air Hose Size : 9.53mm (3/8")

Accessories : Socket, Air Hose Nipple

IMPORTANT!!

- Air Pressure** → Air Pressure of 0.6Mpa(85psi) is recommended for the most efficient performance. Too high air pressure will shorten tool's life.
- Lubrication** → **For Air Motor**— Supply turbine Oil properly through Air Inlet or Line Oilier every before and after operation. (for examples, MOBIL TURBINE OIL #32, and or equivalents.)
For Impacting Part— Supply recommended high quality Grease properly (for examples, SHELL Alvania EP R2, NIPPON Sharples Grease, or equivalents.) once every three months and when the tool is overhauled. Over-greasing will cause dull motion or heating.
- Dry & Clean Air** → Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.

- Air Hose & Joints** → Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- Sockets** → Do not use Sockets which are worn at female square where Anvil fits in.
- Anvil & Hammer** → Replace Anvil and Hammer together when either of them is found worn.
- Genuine Parts** → Use only URYU's genuine spare parts for replacement.
- Regular Overhaul** → At least once every three months regular or periodical overhaul by a competent person is needed for best performance and trouble-less operation.

Distributed by

Printed in Japan

URYU SEISAKU, LTD.

Claims must be filed only with distributors within ten(10)days from delivery.