




## URYU IMPACT WRENCHES

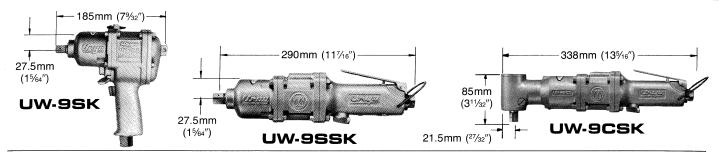

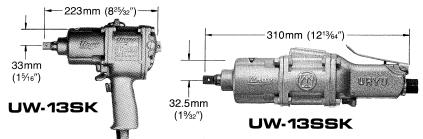

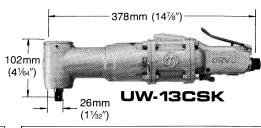

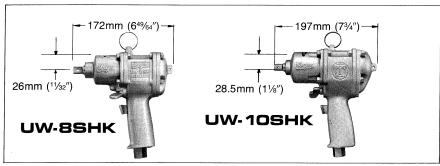

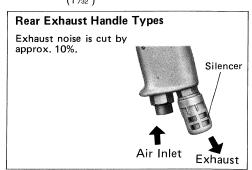

## SPECIFICATIONS (Subject to change without notice)

Model		Capacity (Bolt		Free Speed (about) r.p.m.		Weight less Socket (about)				Drive		Air Inlet Thread	Air Hose		Average Air consumption (about)				Air Pressure	
Standard	Rear Exhaust	size)		Standard	Rear Exhaust	Star	Standard Rear Exhaust			Shank		(Pipe Tap)	Size		Standard		Rear Exhaust			
		mm	in			kg	lb	kg	lb	mm	in	in	mm	in	m³ min.	ft³ min.	m³ min.	ft³ min.	Мра	lb/in²
UW-9SK	UW-9SRK	9.5	3/8	7,000	7,000	1.84	4.04	1.79	3.93	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.45	15.9	0.45	15.9	0.6	85 psi
UW-9SSK	UW-9SSRK	9.5	3/8	7,000	7,000	2.10	4.62	2.10	4.62	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.45	15.9	0.45	15.9	0.6	85 psi
UW-9CSK	UW-9CSRK	9.5	3/8	7,000	7,000	2.78	6.11	2.78	6.11	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.45	15.9	0.45	15.9	0.6	85 psi
UW-13SK	UW-13SRK	12.7	1/2	6,000	6,000	2.61	5.74	2.61	5.74	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.50	17.6	0.50	17.6	0.6	85 psi
UW-13SSK		12.7	1/2	6,300		3.17	6.97	_		12.7	1/2	N.P.T. 1/4	9.53	3/8	0.50	17.6			0.6	85 psi
UW-13CSK	_	12.7	1/2	6,500	_	5.17	11.37		_	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.50	17.6	_	_		85 psi
UW-8SHK	UW-8SHRK	8.0	5/16	7,300	7,300	1.55	3.41	1.55	3.41	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.40	15.8	0.40	15.8		85 psi
UW-10SHK	UW-10SHRK	10.0	<sup>25</sup> / <sub>64</sub>	6,000	6,000	2.13	4.68	2.13	4.68	12.7	1/2	N.P.T. 1/4	9.53	3/8	0.45	15.9	0.40	15.8		85 psi

Accessories: Socket, Air Hose Nipple

## **IMPORTANT!!**

- \* Air Pressure: Air Pressure of 0.6Mpa (85 psi) is recommended for the most efficient performance. Too high air presure will shorten tool's life.
- \* Lubrication: For Air Motor Supply Turbine Oil properly through Air Inlet or Line Oiler every before and after operation. (For example MOBIL TURBINE OIL #32, SHELL TURBINE OIL #32, and or equivalent.)

For Impacting Part – Supply recommended high quality Grease properly (for examples, SHELL Albania EP R2, Esso Beacon Q2 and or equivalents) once every three months and when the tool is overhauled.)

Over-greasing will cause dull motion or heating.

- \* Dry & Clean Air: Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.
- \* Air Hose & Joints: Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- \* Sockets: Do not use Sockets which are worn at female square where Anvil fits in.
- \* Anvil & Hammer Replace Anvil & Hammers together when either of them is found worn.
- ★ Genuine Parts: Use only URYU's genuine spare parts for replacement.
- \* Regular Overhaul: At least once every three months regular or periodical overhaul by a competent person is needed for best performance and trouble-less operation.

Distributed by:

Printed in Japan