



EXPLODED VIEW



Casing Assembly
Code 432-004-1
Components
(#16 to 21 & 23 to 32)

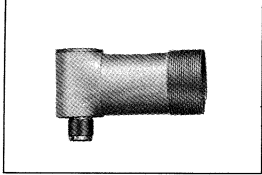

Angle Head Casing
Assembly
Code 422-007-1
Components
(#102, 109 to
114, 124 128)

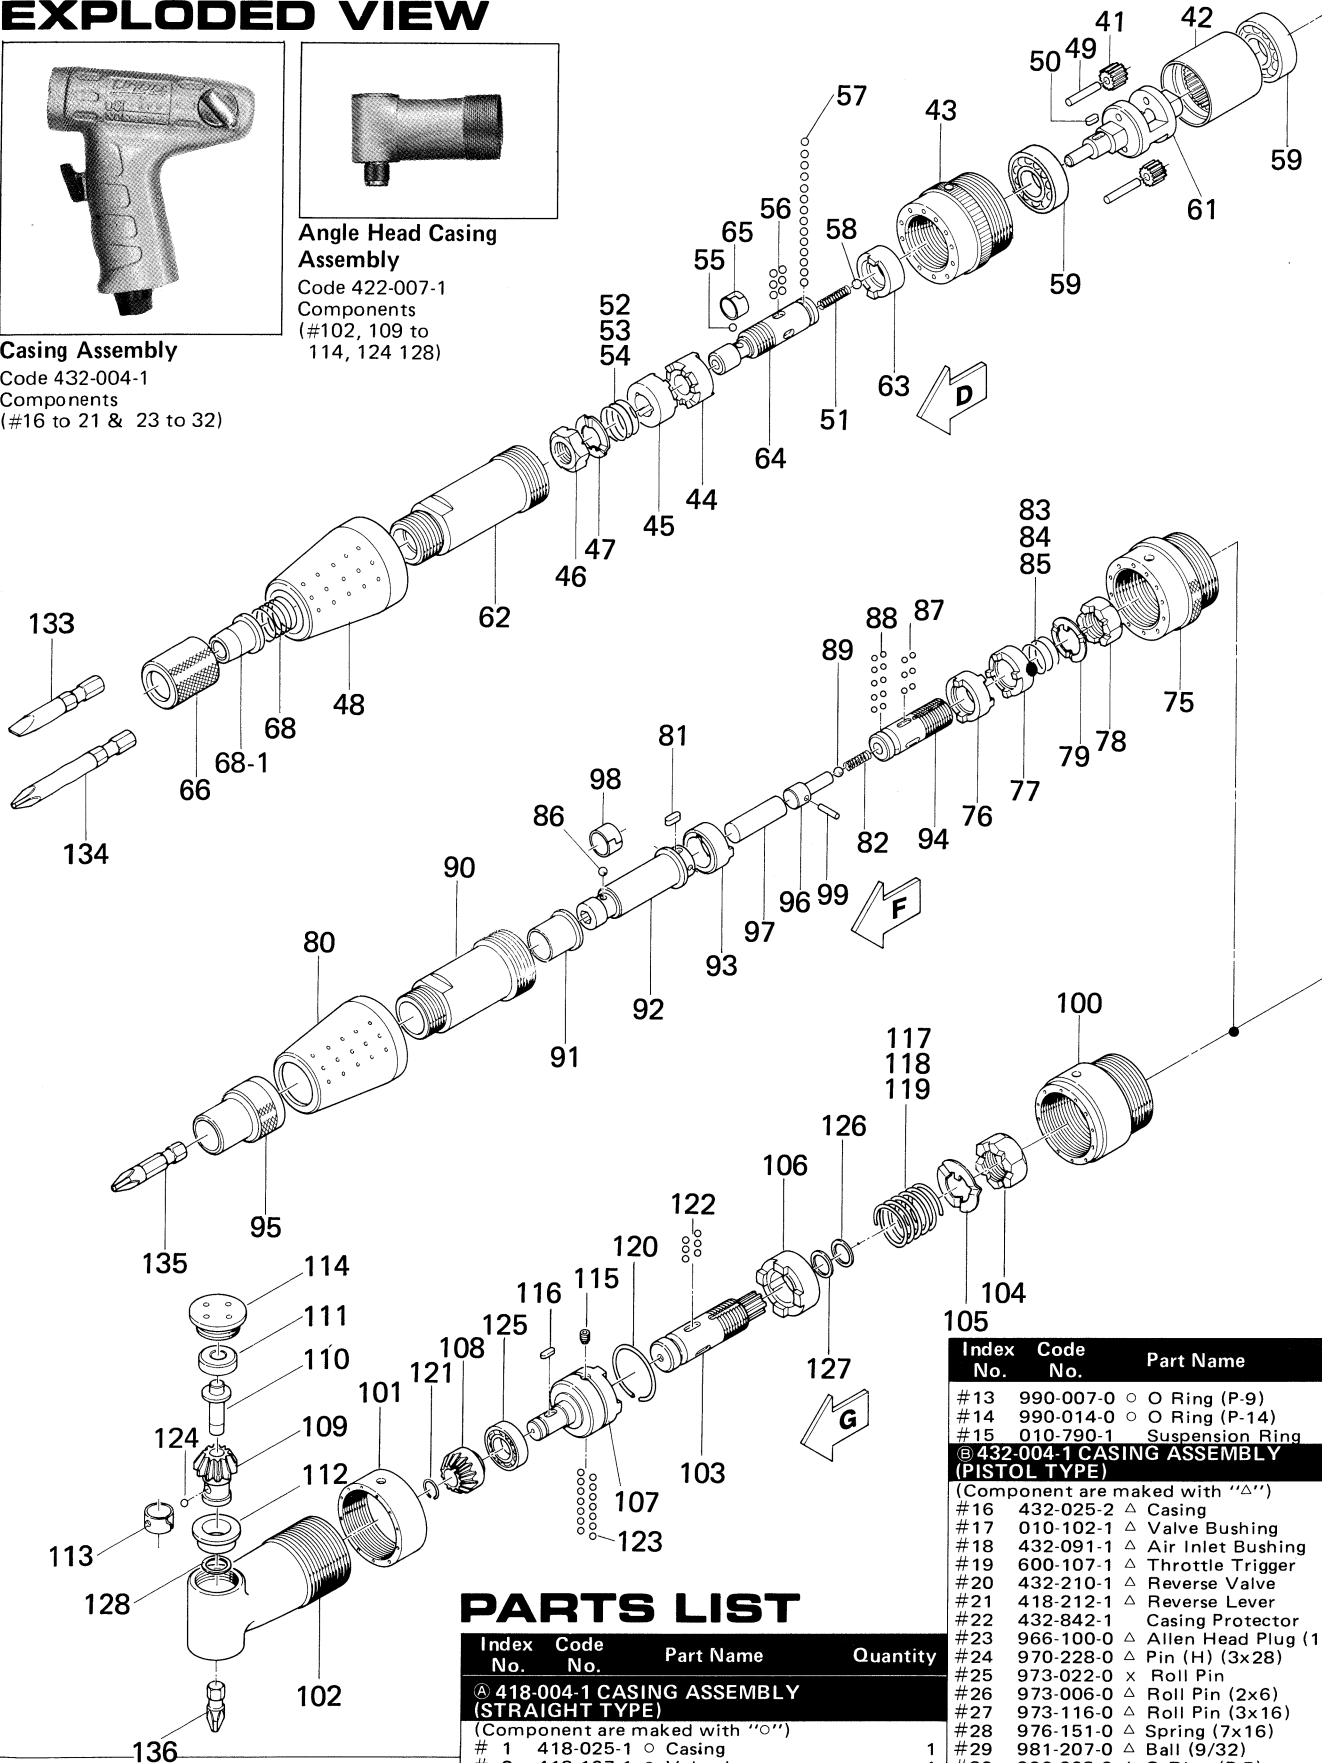


* Guide for your easy selection of models in ordering.

US-4	A-C-D
US-4PB	B-C-D
US-4MA	A-C-E-F
US-4PMA	B-C-E-F
US-4CA	A-C-E-G

PARTS LIST


Index No.	Code No.	Part Name	Quantity
A 418-004-1 CASING ASSEMBLY (STRAIGHT TYPE)			
(Component are marked with "O")			
# 1	418-025-1	O Casing	1
# 2	418-107-1	Valve Lever	1
# 3	418-091-1	Air Inlet Bushing	1
# 4	418-210-1	Reverse Valve	1
# 5	418-212-1	Reverse Lever	1
# 6	970-321-0	Pin (H) (4x21)	1
# 7	973-022-0	Roll Pin	1
# 8	973-006-0	Roll Pin (2x6)	1
# 9	973-124-0	Roll Pin (3x24)	1
# 10	976-151-0	Spring (7x16)	1
# 11	981-207-0	Ball (9/32)	1
# 12	990-003-0	O Ring (P-5)	1

Index No.	Code No.	Part Name	Quantity
B 432-004-1 CASING ASSEMBLY (PISTOL TYPE)			
(Component are marked with "△")			
# 13	990-007-0	O Ring (P-9)	1
# 14	990-014-0	O Ring (P-14)	2
# 15	010-790-1	Suspension Ring	1
C COMMON PARTS			
# 33	418-285-1	Rear Plate	1
# 34	418-286-1	Cylinder	1
# 35	418-287-1	Rotor	1
# 36	600-288-2	Blade	5
# 37	418-289-1	Front Plate	1
# 38	973-010-0	Roll Pin (2x10)	2
# 39	982-401-0	Ball Bearing (EE-2)	1

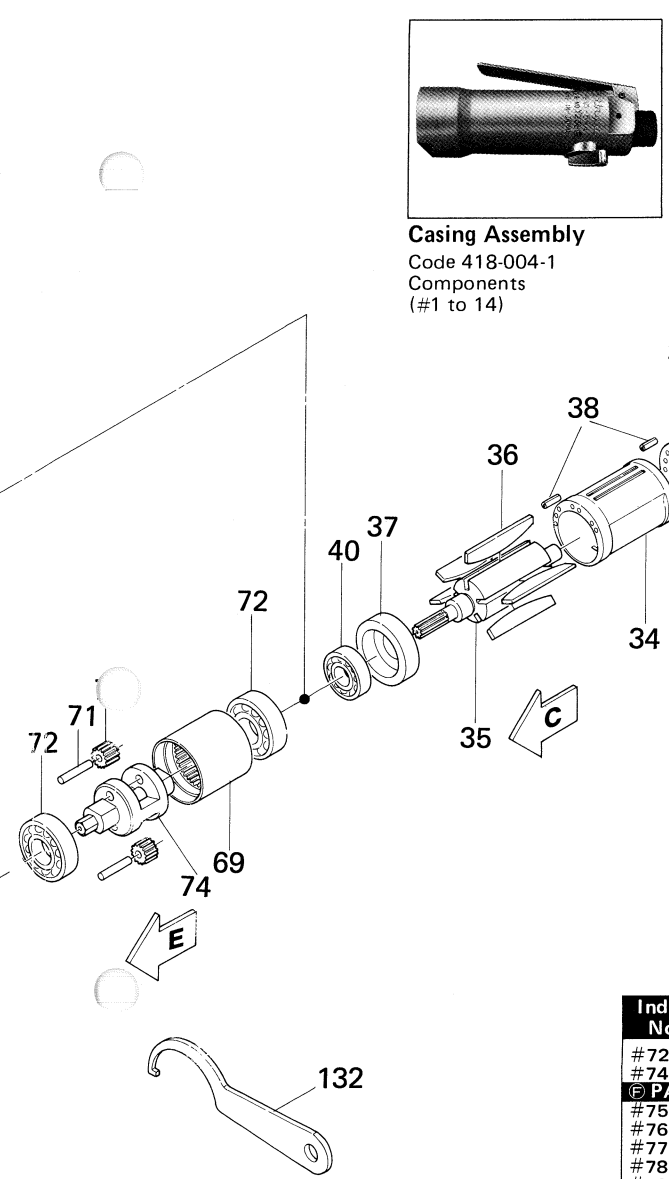

Casing Assembly
Code 418-004-1
Components
(#1 to 14)

Index No.	Code No.	Part Name	Quantity
D 982-402-0 Ball Bearing (EE-3)			
E PARTS FOR US-4 & -4PB			
# 41	600-470-1	Planet Gear	2
# 42	418-465-1	Internal Gear	1
# 43	418-036-1	Hammer Casing Connector	1
# 44	418-364-1	Driven Clutch	1
# 45	418-365-1	Hammer	1
# 46	418-362-1	Adjusting Nut	1
# 47	418-347-1	Adjusting Nut Lock Washer	1
# 48	418-782-1	Exhaust Deflector	1
# 49	972-119-0	Needle Roller (4x18)	2
# 50	974-005-0	Key (3x6)	1
# 51	976-057-0	Spring (4.5x14)	1
# 52	976-410-0	Spring (16x12) (Weak)	1
# 53	976-411-0	Spring (16x12) (Standard)	1
# 54	976-412-0	Spring (16x12) (Strong)	1
# 55	981-002-0	Ball (1/8)	1
# 56	981-002-0	Ball (1/8)	6
# 57	981-002-0	Ball (1/8)	10
# 58	981-004-0	Ball (3/16)	1
# 59	982-403-0	Ball Bearing (EE-4)	2
# 61	418-480-1	Gear Cage	1
# 62	418-028-1	Hammer Casing	1
# 63	418-366-1	Driving Clutch	1
# 64	418-360-1	Hammer Shank	1
# 65	418-356-1	Bit Band	1
# 66	418-057-1	Bit Casing	1
# 68	976-358-0	Spring (14.4x26)	1
# 68-1	917-300-0	Finder (4x51x19)	1
F GEAR PARTS FOR US-4CA, -4MA & -4PMA			
# 69	418-465-1	Internal Gear	1
# 70	600-470-1	Planet Gear	2
# 71	972-119-0	Needle Roller (4x18)	2

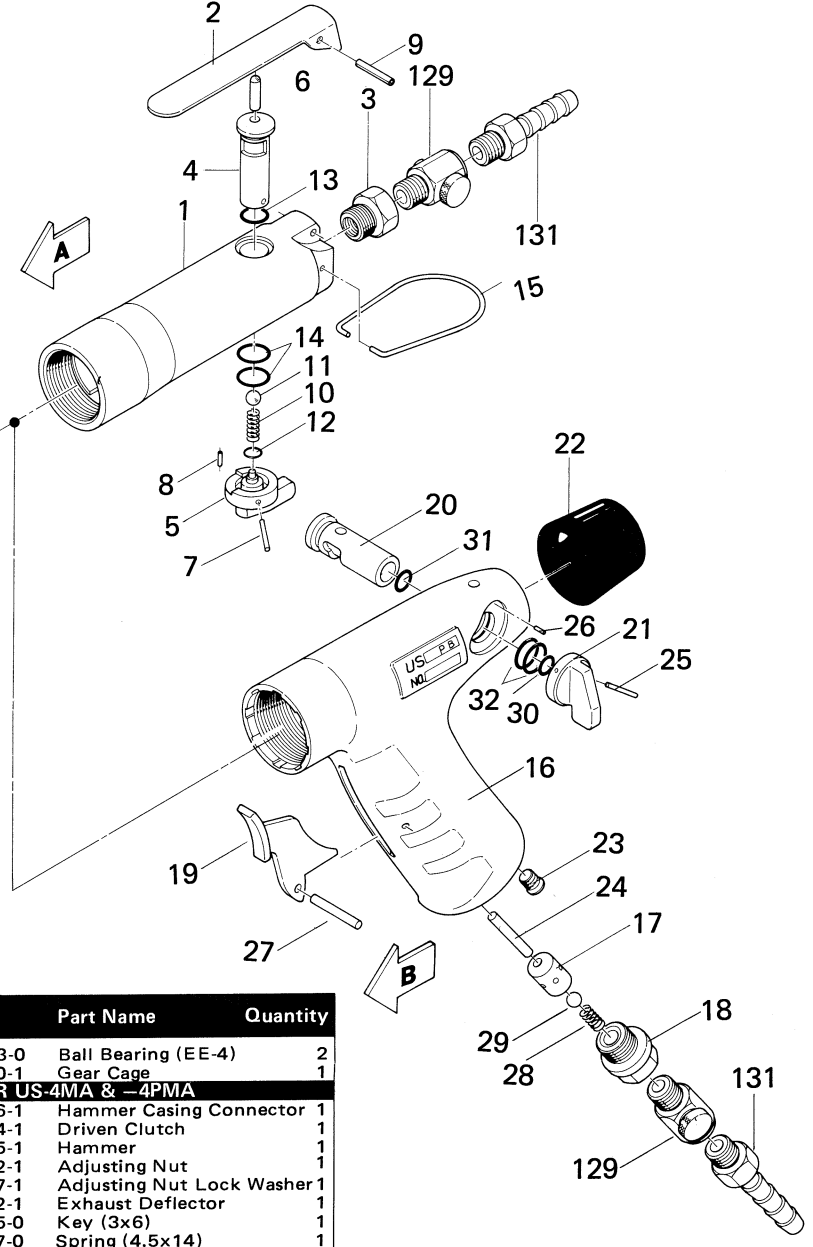

Index No.	Code No.	Part Name	Quantity
# 72	982-403-0	Ball Bearing (EE-4)	2
# 74	417-480-1	Gear Cage	1
G PARTS FOR US-4MA & -4PMA			
# 75	418-036-1	Hammer Casing Connector	1
# 76	418-364-1	Driven Clutch	1
# 77	418-365-1	Hammer	1
# 78	418-362-1	Adjusting Nut	1
# 79	418-347-1	Adjusting Nut Lock Washer	1
# 80	418-782-1	Exhaust Deflector	1
# 81	974-005-0	Key (3x6)	1
# 82	976-057-0	Spring (4.5x14)	1
# 83	976-410-0	Spring (16x12) (Weak)	1
# 84	976-411-0	Spring (16x12) (Standard)	1
# 85	976-412-0	Spring (16x12) (Strong)	1
# 86	981-002-0	Ball (1/8)	1
# 87	981-002-0	Ball (1/8)	6
# 88	981-002-0	Ball (1/8)	10
# 89	981-004-0	Ball (3/16)	1
# 90	419-028-1	Hammer Casing	1
# 91	431-328-1	Anvil Bushing	1
# 92	419-319-1	Anvil	1
# 93	419-366-1	Driving Clutch	1
# 94	419-360-1	Hammer Shank	1
# 95	419-382-1	Hammer Casing Nut	1
# 96	419-330-1	Anvil Rear Plate	1
# 97	419-704-1	Magnet	1
# 98	430-356-1	Bit Band	1
# 99	970-213-0	Pin (H) (3x13)	1
H PARTS FOR US-4CA			
I 422-007-1 ANGLE HEAD CASING ASSEMBLY			
(Component are marked with "x")			
# 100	423-036-1	Angle Head Casing Connector	1
# 101	423-069-1	Angle Head Casing Connector Nut	1
# 102	422-028-1	Angle Head Casing	1
# 103	431-360-1	Hammer Shank	1
# 104	430-362-1	Adjusting Nut	1
# 105	430-347-1	Adjusting Nut Lock Washer	1
# 106	430-365-1	Hammer	1
# 107	434-319-2	Anvil	1
# 108	434-420-1	Driving Gear	1
# 109	434-430-1	Driven Gear	1
# 110	434-318-1	Pilot Pin	1
# 111	434-435-1	Driven Gear Collar Bushing	1
# 112	434-434-1	Driven Gear Bushing	1
# 113	430-356-1	Bit Band	1
# 114	434-067-1	Angle Head Casing Cover	1

Index No.	Code No.	Part Name	Quantity
# 115	950-203-0	Flat Point Screw (M5x3.5)	1
# 116	974-008-0	Key (3x8)	1
# 117	976-538-0	Spring (23x13.5) (Weak)	1
# 118	976-539-0	Spring (23x13.5) (Weak) (Standard)	1
# 119	976-540-0	Spring (23x13.5) (Strong)	1
# 120	978-240-0	Snap Ring (24x1.0)	1
# 121	978-097-0	Snap Ring (9.5x0.8)	1
# 122	981-003-0	Steel Ball (5/32)	6
# 123	981-002-0	Steel Ball (1/8)	14
# 124	981-002-0	Steel Ball (1/8)	1
# 125	982-402-0	Ball Bearing (EE-3)	1
# 126	975-030-0	Spacer (12x7.5x2)	1
# 127	975-736-0	Adjusting Spacer (12x7.5x1)	1
# 128	975-788-0	Adjusting Spacer (22x18.5x1)	1
# 129	434-334-1	Anvil Spacer	1
ACCESSORIES			
# 130	934-110-0	Air Hose Assembly (1/4")	1
# 131	940-113-0	Air Hose Nipple (NPT 1/4"x1/4")	1
# 132	937-003-0	Spanner (4x19x150)	1
For US-4 & -4PB			
# 133	916-020-0	(-) Bit (4x51)	1
# 134	916-710-0	(+) Double Bit (No.2x70)	1
For US-4MA & -4PMA			
# 135	916-550-0	(+) Bit (No.2x 40)	1
For US-4CA			
# 136	916-510-0	(+) Bit (No.2x23)	1