



URYU AIR SCREWDRIVERS

(Standard type)

US-5

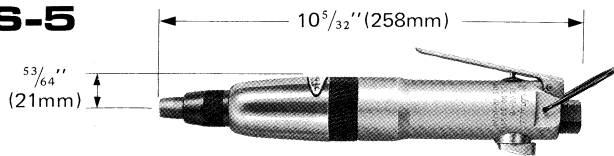


US-5PB

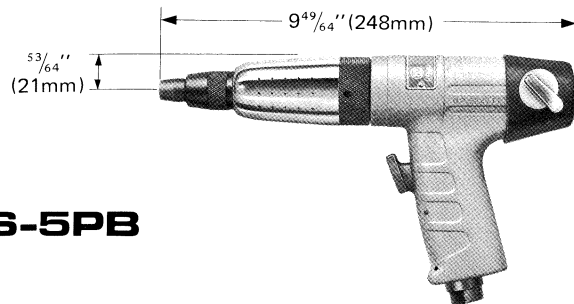


(Magnetic type)

US-5MA

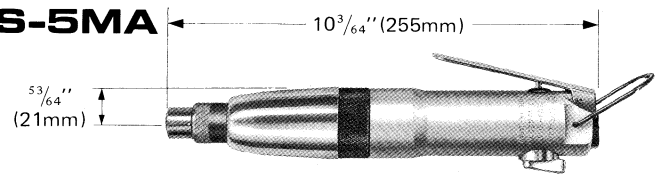


US-5PMA

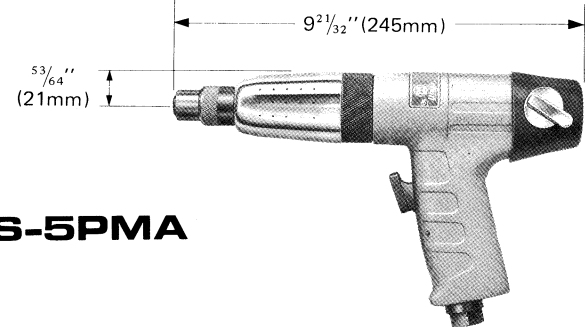


(Angle type)

US-5CA

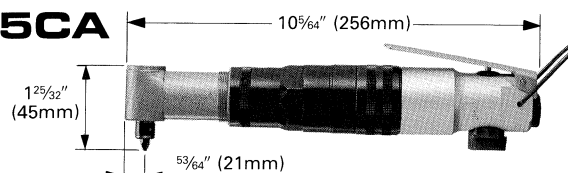


US-5AA

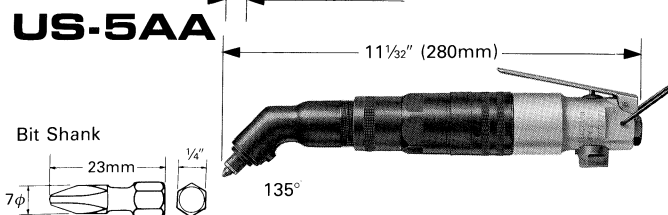


Auto-Throttle type (Non-lever)

Tool starts automatically when work is engaged by operators axial pressure.

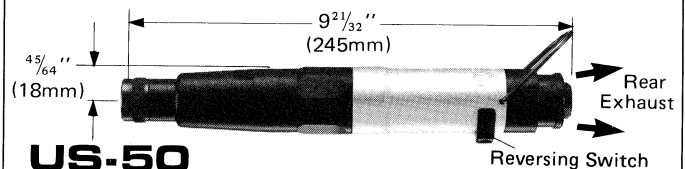


US-50

(Optional Silencers)

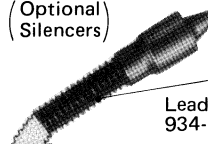

Piped-away type
Exhaust Hose Assembly:
496-885-1

Leader Hose Assembly:
934-150-0

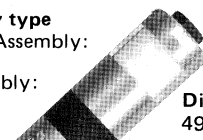

Direct type
496-088-1

Model	Capacity Screw Size		Free Speed (about)	Weight less Bit (about)		Hex. Size of Bit		Air Inlet Thread (Pipe Tape)	Air Hose Size		Average Air Consumption (about)		Air Pressure	
	in	m/m		lb.	kg	in.	m/m		in.	m/m	ft ³ /min	m ³ /min	MPa	psi
US-5	3/16	5	1,400	2.42	1.10	1/4	6.35	N.P.T. 1/4	1/4	6.4	7.0	0.2	0.4	57
US-5MA	3/16	5	1,400	2.55	1.16	1/4	6.35	N.P.T. 1/4	1/4	6.4	10.7	0.3	0.4	57
US-5PB	3/16	5	1,400	2.86	1.30	1/4	6.35	N.P.T. 1/4	1/4	6.4	7.0	0.2	0.4	57
US-5PMA	3/16	5	1,400	2.97	1.35	1/4	6.35	N.P.T. 1/4	1/4	6.4	10.7	0.3	0.4	57
US-5CA	3/16	5	500	3.08	1.40	1/4	6.35	N.P.T. 1/4	1/4	6.4	10.7	0.3	0.4	57
US-5AA	3/16	5	500	3.08	1.40	1/4	6.35	N.P.T. 1/4	1/4	6.4	7.0	0.2	0.4	57
US-50	3/16	5	1,250	1.98	0.90	1/4	6.35	N.P.T. 1/4	1/4	6.4	10.7	0.3	0.4	57

IMPORTANT!!

Air Pressure : 0.4MPa (57psi) Air Pressure is recommended for the most efficient performance. Too high air pressure will shorten tool's life.

Lubrication: For Air Motor – Supply Turbine Oil properly through Air Inlet or Line Oilier every before and after operation. (For example MOBIL TURBINE OIL #32, SHELL TURBINE OIL #32, and or equivalent.)

For Gears and Bearings – Supply recommended high quality Grease properly (for examples, SHELL ALVANIA NO.2, MOBILPLEX 2, or equivalents). once every three months and when the tool is overhauled. Over-greasing will cause dull motion or heating.

Dry and Clean Air: Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.

Air Hose and Joints: Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.

Genuine Parts: Use only URYU's genuine spare parts for replacement.

REGULAR OVERHAUL – Regular overhaul of once every three months is recommended to keep sufficient performance and to prevent trouble.

Distributed by:

URYU SEISAKU, LTD.

Claims must be filed only with distributors within ten (10) days from delivery.