


US-LT31PB-05 PISTOL-TYPE SCREW DRIVER

EXPLODED VIEW

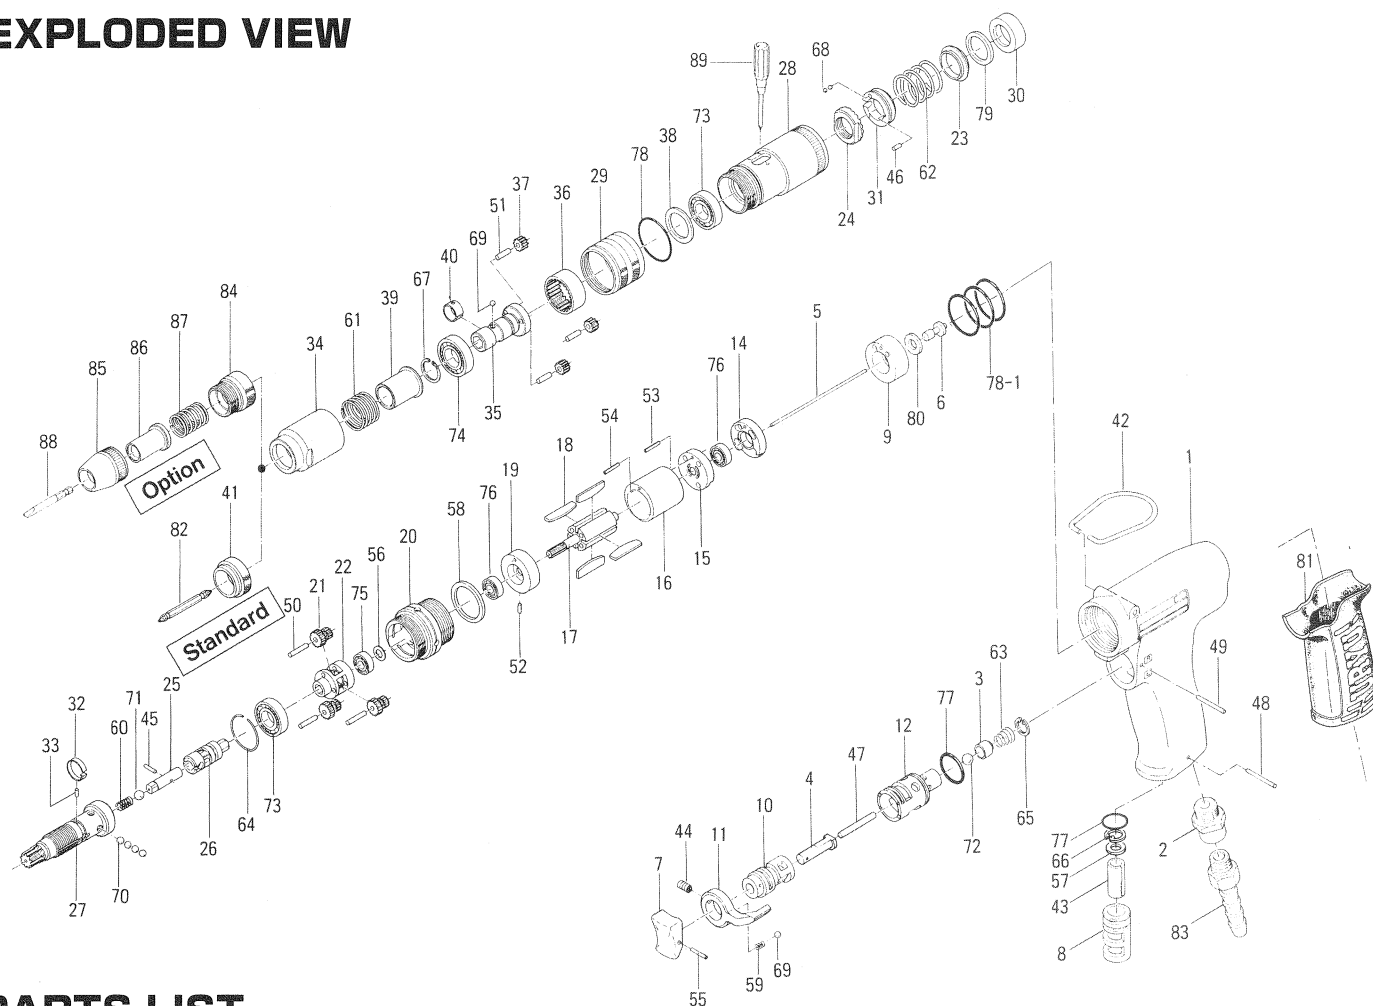

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	442-025-5	Casing	1	#36	462-466-9	Second Internal Gear	1	#67	979-353-0	Inner Snap Ring (ISTW-12)	1
# 2	480-091-8	Air Inlet Bushing	1	#37	462-471-9	Second Planet Gear	3	#68	981-001-0	Ball (3/32)	2
# 3	480-100-9	Valve	1	#38	462-487-9	Second Gear Cage Spacer	1	#69	981-002-0	Ball (1/8)	2
# 4	443-103-5	Valve Rod Bushing	1	#39	471-351-6	Bit Sleeve	1	#70	981-003-0	Ball (5/32)	4
# 5	442-104-4	Valve Rod	1	#40	471-356-7	Bit Band	1	#71	981-004-0	Ball (3/16)	1
# 6	443-254-5	Shut-Off Valve	1	#41	471-567-6	Bushing	1	#72	981-206-0	Ball (1/4)	1
# 7	177-107-5	Valve Lever	1	#42	010-790-1	Suspension Ring	1	#73	982-901-0	Ball Bearing (6900)	2
# 8	480-780-8	Silencer	1	#43	177-835-6	Filter	1	#74	982-902-0	Ball Bearing (6901)	1
# 9	442-282-5	Shut-Off Valve Bushing	1	#44	952-106-0	Allen Head Dog Point Screw (M4×6)	1	#75	987-013-0	Miniature Ball Bearing (R1350)	1
#10	480-210-9	Reverse Valve	1	#45	969-470-0	Pin (E) (2×8)	1	#76	987-041-0	Miniature Ban Bearing (1350ZZ)	2
#11	480-212-8	Reverse Lever	1	#46	970-091-0	Pin (2×4.5)	1	#77	990-912-0	O-Ring (SNS-14)	2
#12	480-211-9	Reverse Valve Bushing	1	#47	970-228-0	Pin (3×28)	1	#78	990-919-0	O-Ring (SNS-22)	1
#14	442-291-4	Rear Plate Spacer	1	#48	971-122-0	Pin (2×22)	1	#78-1	990-917-0	O-Ring (SNS-24)	3
#15	471-285-7	Rear Plate	1	#49	971-123-0	Pin (2×23)	1	#79	944-016-0	Backup Ring (P16)	1
#16	442-286-4	Cylinder	1	#50	972-036-0	Roller Pin (2.5×15.8A)	3	#80	996-411-0	Packing (11×6×1)	1
#17	471-287-5	Rotor	1	#51	972-090-0	Roller Pin (3×10)	3	#89	939-402-0	Manual Driver No.2 (φ 5)	1
#18	471-288-0	Blade (PC)	4	#52	973-001-0	Roll Pin (1.5×6)	1	#90	976-471-0	Spring (19.4×22) (1.6) (Pink-Weak)	1
#19	471-289-7	Front Plate	1	#53	973-002-0	Roll Pin (1.5×15)	1				
#20	462-030-9	First Gear Casing	1	#54	973-003-0	Roll Pin (1.5×8)	2				
#21	471-470-5	First Planet Gear	3	#55	973-012-0	Roll Pin (2×12)	1				
#22	471-480-5	Gear Cage	1	#56	975-009-0	Spacer (9×5.2×0.3)	1				
#23	471-164-8	Spring Holder	1	#57	975-026-0	Spacer (11×3.9×2)	1				
#24	471-257-7	Adjusting Screw	1	#58	975-188-0	Spacer (26×20×1.5)	1				
#25	471-318-5	Pilot Pin	1	#59	976-006-0	Spring (3×5 (0.4))	1				
#26	471-346-5	Cam	1	#60	976-058-0	Spring (4.5×11 (0.4))	1				
#27	462-654-9	Cam Guide	1	#61	976-450-0	Spring (18.5×10 (1.0))	1				
#28	462-369-9	Clutch Casing	1	#62	976-493-0	Spring (20.8×22) (2.0) (Red-Standard)	1				
#29	462-370-9	Clutch Casing Sleeve	1	#63	977-150-0	Cone Spring (6.8×8.5×8 (0.4))	1				
#30	471-375-8	Cam Ring	1	#64	978-229-0	Snap Ring (23×1)	1				
#31	471-562-7	Retainer	1	#65	979-002-0	Inner Snap Ring (9)	1				
#32	471-670-7	Band	1	#66	979-004-0	Inner Snap Ring (11)	1				
#33	471-764-7	Notch Pin	1								
#34	462-029-9	Gear Casing	1								
#35	462-319-9	Anvil	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

OKA-416-03-05-20-2004