# US-LT30&LT30L SERIES SCREW DRIVERS

## EXPLODED VIEW

**Optional Silencers**

#84 408-088-2
Silencer
Assembly

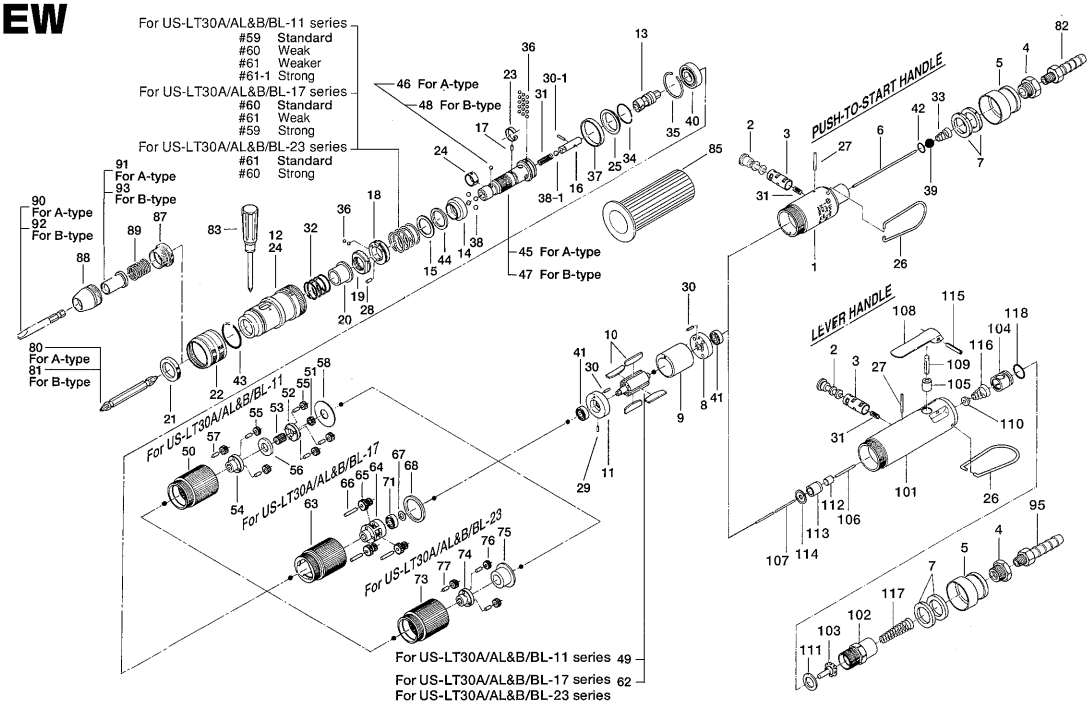


## PARTS LIST

| Index No. | Code No. | Parts Name | Quantity |
|---|---|---|---|
| **US-LT30 SERIES PUSH-TO-START HANDLE** | | | |
| # 1 | 471-025-8 | Casing | 1 |
| # 2 | 893-056-1 | Reverse Valve (Locking) | 1 |
| # 3 | 471-211-7 | Reverse Valve Bushing | 1 |
| # 4 | 480-091-8 | Air Inlet Bushing | 1 |
| # 5 | 408-782-1 | Exhaust Deflector | 1 |
| # 6 | 471-104-7 | Valve Rod | 1 |
| # 7 | 471-835-5 | Filter (K100) | 2 |
| #26 | 401-790-1 | Suspension Ring | 1 |
| #27 | 972-020-0 | Roller Pin (2×19.8) | 1 |
| #31 | 976-058-0 | Spring (4.5×11) | 2 |
| #33 | 977-157-0 | Cone Spring (7×11×20) | 1 |
| #39 | 981-208-0 | Ball (5/16) | 1 |
| #42 | 990-004-0 | O Ring (P-6) | 1 |
| #12 | 471-369-7 | Clutch Casing | 1 |
| **US-LT30L SERIES LEVER HANDLE** | | | |
| #101 | 469-025-5 | Casing | 1 |
| # 4 | 480-091-8 | Air Inlet Bushing | 1 |
| #102 | 461-097-6 | Air Inlet Connector | 1 |
| #103 | 259-100-0 | Valve | 1 |
| #104 | 461-102-6 | Valve Bushing | 1 |
| #105 | 553-103-1 | Valve Rod Bushing | 1 |
| #106 | 970-105-0 | Pin (H)(2×24) | 1 |
| #107 | 462-104-7 | Valve Rod | 1 |
| #108 | 466-107-5 | Valve Lever | 1 |
| #109 | 469-114-5 | Valve Pin | 1 |
| #110 | 259-254-0 | Shut-Off Valve | 1 |
| #111 | 996-424-0 | Packing | 1 |
| #112 | 444-106-8 | Valve Rod Cap | 1 |
| #113 | 461-567-6 | Bushing | 1 |
| # 2 | 893-056-1 | Reverse Valve (Locking) | 1 |
| # 3 | 471-211-7 | Reverse Valve Bushing | 1 |
| # 5 | 408-782-1 | Exhaust Deflector | 1 |
| # 7 | 471-835-5 | Filter (K100) | 2 |
| #114 | 469-291-5 | Rear Plate Spacer | 1 |
| #26 | 401-790-1 | Suspension Ring | 1 |
| #27 | 972-020-0 | Roller Pin (2×19.8) | 1 |
| #115 | 973-118-0 | Roll Pin (3×18) | 1 |
| #31 | 976-058-0 | Spring (4.5×11) | 2 |
| #116 | 977-071-0 | Cone Spring (5.5×11.5×15) | 1 |
| #117 | 977-155-0 | Cone Spring (7×10×35) | 1 |
| #118 | 990-911-0 | O Ring (SNS-12) | 1 |
| #24 | 462-369-7 | Clutch Casing | 1 |
| #37 | 462-397-7 | Gear Casing Flange | 1 |
| **Common Parts** | | | |
| # 8 | 471-285-7 | Rear Plate | 1 |
| # 9 | 471-286-7 | Cylinder | 1 |
| #10 | 471-288-0 | Blade | 4 |
| #11 | 471-289-7 | Front Plate | 1 |
| #13 | 471-346-5 | Cam | 1 |
| #14 | 471-375-8 | Cam Ring | 1 |
| #15 | 471-164-8 | Spring Setter | 1 |
| #16 | 471-318-5 | Pilot Pin | 1 |
| #17 | 471-764-7 | Notch Pin | 1 |
| #18 | 471-562-7 | Retainer | 1 |
| #19 | 471-257-7 | Regulating Screw | 1 |
| #20 | 471-351-6 | Bit Sleeve | 1 |
| #21 | 471-567-6 | Bushing | 1 |
| #22 | 471-370-7 | Clutch Casing Sleeve | 1 |
| #23 | 471-670-7 | Band | 1 |
| #24 | 471-356-7 | Bit Band | 1 |
| #25 | 462-334-7 | Anvil Spacer | 1 |
| #28 | 970-091-0 | Pin (H)(2×4.5) | 1 |
| #29 | 973-001-0 | Roll Pin (1.5×6) | 1 |
| #30 | 973-003-0 | Roll Pin (1.5×8) | 2 |
| #30-1 | 969-470-0 | Pin (2×8) | 1 |
| #32 | 976-450-0 | Spring (18.5×10) | 1 |
| #34 | 978-185-0 | Snap Ring (19×1) | 1 |
| #35 | 978-229-0 | Snap Ring (23×1) | 1 |
| #36 | 981-001-0 | Ball (3/32) | 17 |
| #38 | 981-003-0 | Ball (5/32) | 4 |
| #38-1 | 981-004-0 | Ball (3/16) | 1 |
| #40 | 982-901-0 | Ball Bearing (6900) | 1 |
| #41 | 987-041-0 | Mini. Ball Bearing (R1350ZZ) | 2 |
| #43 | 990-919-0 | O Ring (SNS-22) | 1 |
| #44 | 944-016-0 | Back-up Ring (P-16) | 1 |
| **Parts for US-LT30A & 30AL series** | | | |
| #45 | 471-319-5 | Anvil | 1 |
| #46 | 981-003-0 | Ball (5/32) | 1 |
| **Parts for US-LT30B & 30BL series** | | | |
| #47 | 471-319-2 | Anvil | 1 |
| #48 | 981-002-0 | Ball (1/8) | 1 |
| **Parts for US-LT30A/AL-11 and 30B/BL-11** | | | |
| #49 | 471-287-7 | Rotor | 1 |
| #50 | 471-029-7 | Gear Casing | 1 |
| #51 | 471-460-7 | Rotor Gear | 1 |
| #52 | 471-480-7 | First Gear Cage | 1 |
| #53 | 471-445-7 | Middle Gear | 1 |
| #54 | 471-485-7 | Second Gear Cage | 1 |
| #55 | 471-471-7 | Second Planet Gear | 6 |
| #56 | 471-483-7 | Gear Cage Spacer | 1 |
| #57 | 972-033-0 | Roller Pin (2.5×8) | 6 |
| #58 | 975-178-0 | Spacer (26×10×1.5) | 1 |
| #59 | 976-472-0 | Spring (20.6×22) Standard | 1 |
| #60 | 976-493-0 | Spring (20.8×22) Weak | 1 |
| #61 | 976-471-0 | Spring (19.4×22) Weaker | 1 |
| #61-1 | 976-504-0 | Spring (21×22) Strong | 1 |
| **Parts for US-LT30A/AL-17 and 30B/BL-17** | | | |
| #62 | 471-287-5 | Rotor | 1 |
| #63 | 471-029-5 | Gear Casing | 1 |
| #64 | 471-480-5 | Gear Cage | 1 |
| #65 | 471-470-6 | Planet Gear | 3 |
| #66 | 972-036-0 | Roller Pin (2.5×15.8) | 3 |
| #67 | 975-009-0 | Spacer (9×5.2×0.3) | 1 |
| #68 | 975-188-0 | Spacer (26×20×1.5) | 1 |
| #71 | 987-013-0 | Mini. Ball Bearing (R1350) | 1 |
| #60 | 976-493-0 | Spring (20.8×22) Standard | 1 |
| #61 | 976-471-0 | Spring (19.4×22) Weak | 1 |
| #59 | 976-472-0 | Spring (20.6×22) Strong | 1 |
| **Parts for US-LT30A/AL-23 and 30B/BL-23** | | | |
| #62 | 471-287-5 | Rotor | 1 |
| #73 | 471-029-7 | Gear Casing | 1 |
| #74 | 471-480-3 | Gear Cage | 1 |
| #75 | 471-483-3 | Gear Cage Spacer | 1 |
| #76 | 471-470-3 | Planet Gear | 3 |
| #77 | 972-033-0 | Roller Pin (2.5×8) | 3 |
| #61 | 976-471-0 | Spring (19.4×22) Standard | 1 |
| #60 | 976-493-0 | Spring (20.8×22) Strong | 1 |
| **ACCESSORIES** | | | |
| #80 | 916-710-0 | Double Bit (No.2×70) for A-type | 1 |
| #81 | 916-810-0 | Double Bit (No.2×75) for B-type | 1 |
| #82 | 940-113-0 | Air Hose Nipple | 1 |
| #83 | 939-402-0 | Manual Driver No. 2 | 1 |
| #84 | 408-088-2 | Silencer Assembly | 1 |
| #85 | 471-083-7 | Casing Protector | 1 |
| **For Slotted Head Bit and Finder** | | | |
| (Remove #21 471-567-6 Bushing and use following) | | | |
| #87 | 471-082-7 | Bit Casing Set Screw | 1 |
| #88 | 471-057-7 | Bit Casing | 1 |
| #89 | 976-330-0 | Spring (13.8×18×0.8) | 1 |
| #90 | 916-020-0 | (-) Bit (4×51) for A-type | 1 |
| #91 | 917-299-0 | Finder for A-type | 1 |
| #92 | 916-030-0 | (-) Bit (5×56) for B-type | 1 |
| #93 | 917-350-0 | Finder for B-type | 1 |

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan

**URYU SEISAKU, LTD.** Osaka Japan

For further information, please contact at any time your nearest URYU distributor.

Jun 2012

OKA-248-12-01-13-2001