


UG-50S-200, 200A DIE GRINDERS

EXPLODED VIEW

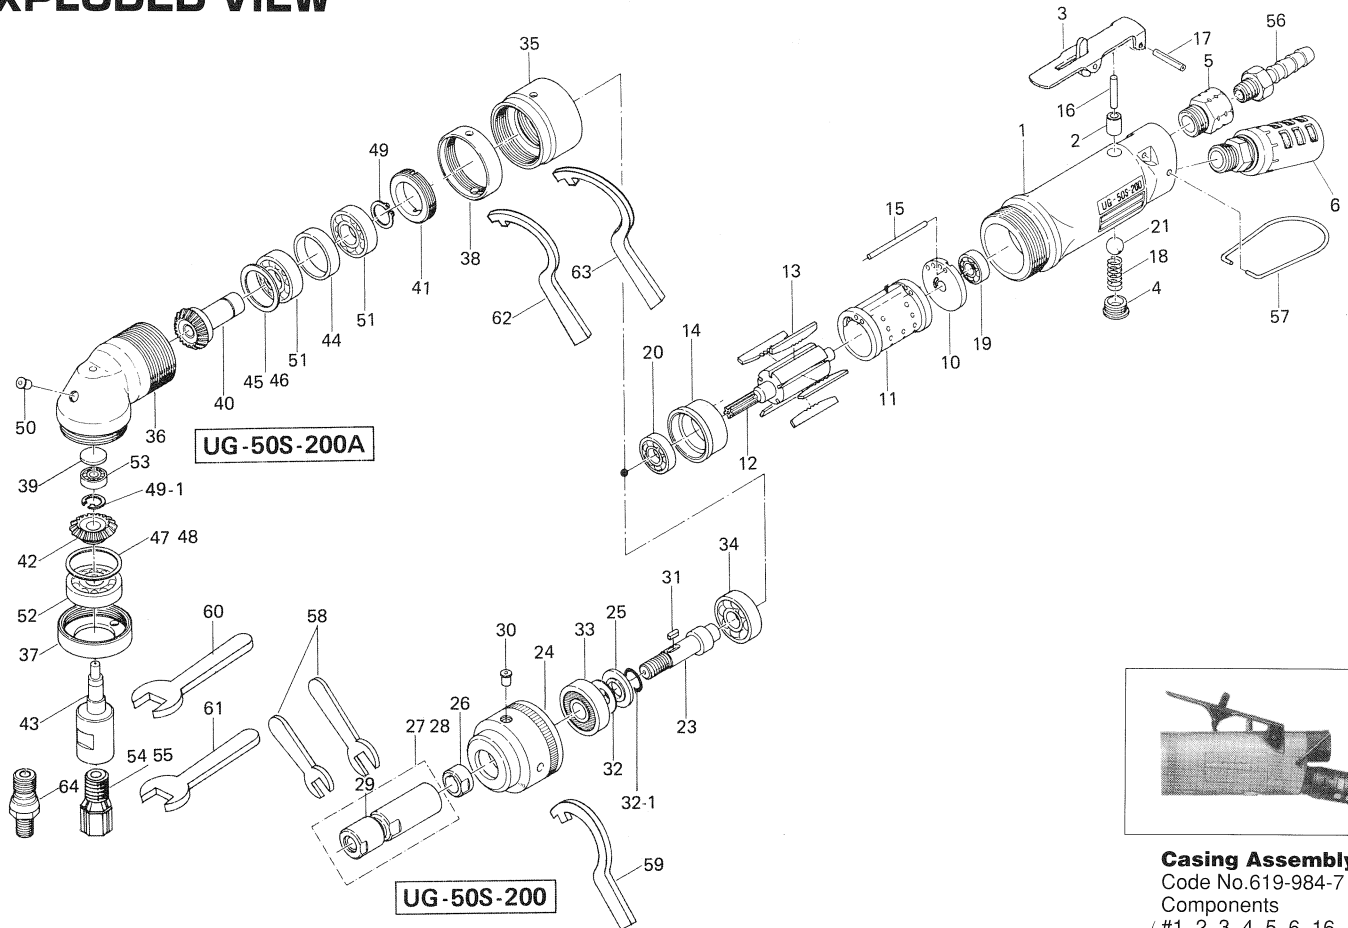

PARTS LIST

Casing Assembly Components are marked with "○".

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
UG-50S-200, 200A Common Parts				#27	923-535-0	Collet Chuck Assembly (6mm)	1	#49-1	979-349-0	Inner Snap Ring (ISTW-8)	1
# 1	619-025-4	○ Casing	1	#28	923-536-0	Collet Chuck Assembly (1/4")	1	#50	968-130-0	Grease Cup (3/16)	1
# 2	553-103-1	○ Valve Rod Bushing	1	#29	505-412-1	Chuck Nut	1	#51	982-101-0	Ball Bearing (6001)	2
# 3	508-914-4	○ Valve Lever Assy	1	#30	968-130-0	Grease Cup (3/16)	1	#52	982-240-0	Ball Bearing (6200Z)	1
# 4	201-108-1	○ Valve Plug	1	#31	974-008-0	Key (3×8)	1	#53	982-012-0	Ball Bearing (605)	1
# 5	191-091-5	○ Air Inlet Bushing	1	#32	975-149-0	Spacer (22×12.5×0.4)	1	#54	923-003-0	Collet Chuck (6mm)	1
# 6	029-885-7	○ Silencer Assy	1	#32-1	975-752-0	Adjusting Spacer (15×10×T)	1	#55	923-006-0	Collet Chuck (1/4")	1
#10	603-285-1	Rear Plate	1	#33	982-140-0	Ball Bearing (6000Z)	1	Standard Accessories			
#11	603-286-1	Cylinder	1	#34	982-402-0	Ball Bearing (EE3)	1	#56	940-114-0	Air Hose Nipple (NPT 1/4×3/8)	1
#12	603-287-1	Rotor	1	Parts for UG-50S-200A				#57	010-790-1	Suspension Ring	1
#13	603-288-1	Blade	5	#35	508-039-8	Anvil Casing	1	FOR UG-50S-200			
#14	603-289-1	Front Plate	1	#36	508-032-8	Bevel Gear Casing	1	#58	936-514-0	Spanner (14)	2
#15	970-030-0	Pin (H) (1.8×44)	1	#37	508-072-8	Bevel Gear Casing Cover	1	#59	937-006-0	Spanner (4×21×150)	1
#16	970-325-0	○ Pin (H) (4×24.5)	1	#38	508-073-8	Bevel Gear Casing LockingNut	1	FOR UG-50S-200A			
#17	973-124-0	○ Roll Pin (H) (3×24)	1	#39	508-414-8	Wheel Spindle Rear Cover	1	#60	936-514-0	Spanner (14)	1
#18	977-154-0	○ Cone Spring (7×7.5×17)	1	#40	508-420-8	Driving Gear	1	#61	936-517-0	Spanner (17)	1
#19	982-021-0	Ball Bearing (626)	1	#41	508-426-8	Driving Gear Bearing Set Screw	1	#62	937-003-0	Spanner (4×19×150)	1
#20	982-026-0	Ball Bearing (634)	1	#42	508-430-8	Driven Gear	1	#63	937-006-0	Spanner (4×21×150)	1
#21	981-030-0	○ Ball (3/8)	1	#43	508-438-8	Wheel Spindle	1	Optional Accessories			
Parts for UG-50S-200				#44	508-380-8	Bearing Holder Bushing	1	FOR UG-50S-200A			
#23	611-319-7	Anvil	1	#45	975-219-0	Spacer (28×25×1)	1	#64	508-732-8	Chuck Connector	1
#24	611-039-8	Anvil Casing	1	#46	975-807-0	Adjusting Spacer (28×25×T)	1				
#25	611-334-7	Anvil Spacer	1	#47	975-238-0	Spacer (30×26×1)	1				
#26	603-411-1	Chuck Retainer	1	#48	975-803-0	Adjusting Spacer (30×26×T)	1				
				#49	979-109-0	Outer Snap Ring (12)	1				

When ordering spare parts, please specify tool type, code numbers and parts names.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

OKA-453-03-06-25-2004