


UBP-T SERIES BATTERY OIL-PULSE TOOL

EXPLODED VIEW

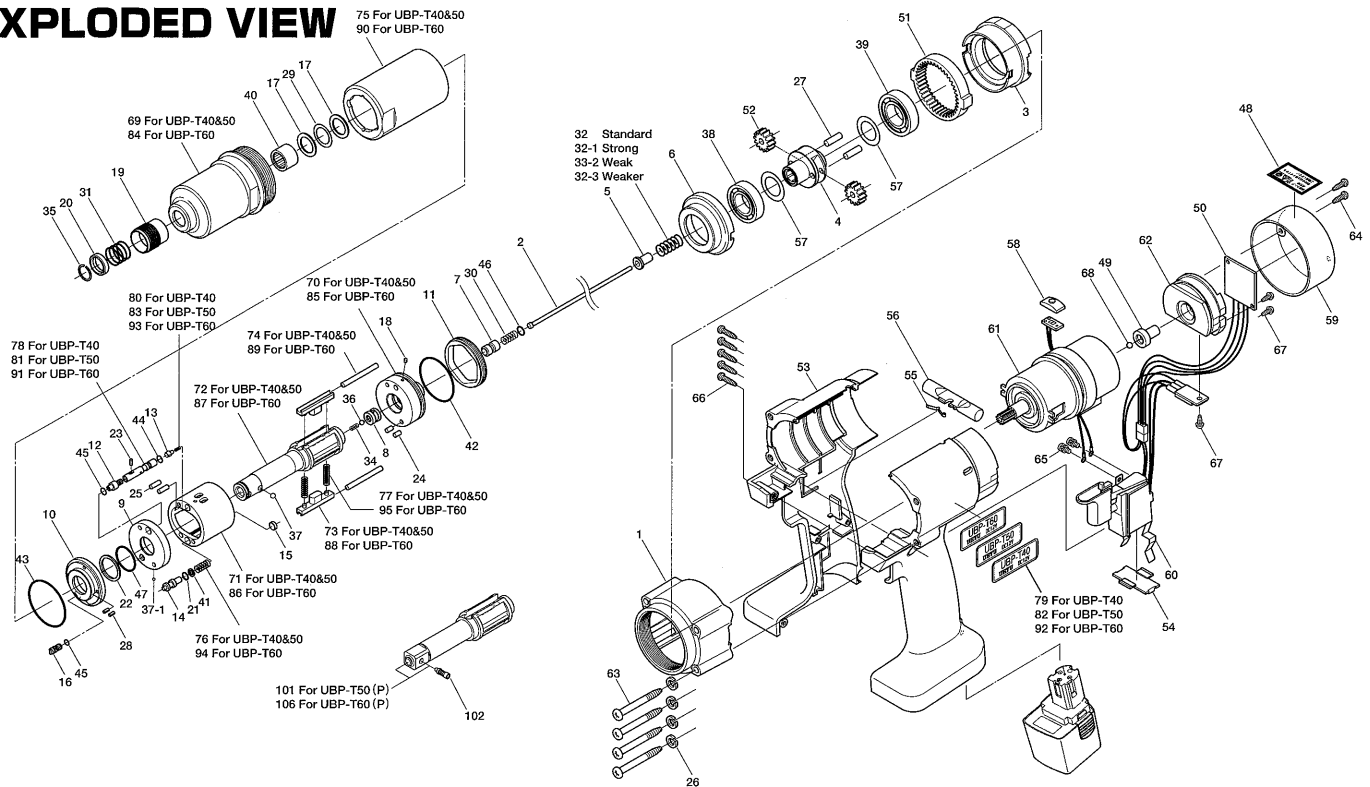

* 861-198-1 Handle Assembly components are marked with "O".

* Recommended Battery Charger : Panasonic Model EY0203B(AC230V)

* Recommended Battery Pack : Panasonic Model EY9200B

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	157-065-4	Handle Front Cover	1	#42	990-329-0	O-Ring(JW1530-19)	1	#79	157-924-2	Name Plate	1
# 2	157-650-4	Operating Rod	1	#43	990-605-0	O-Ring(25×1.45)	1	#80	976-637-0	Spring(2.8×6.9)(0.4)	1
# 3	157-029-3	Gear Casing	1	#44	990-621-0	O-Ring(3.8×1.8×1.0)	1	Parts for UB-P-T50			
# 4	157-480-4	Gear Cage	1	#45	990-900-0	O-Ring(SNS-2)	2	#81	157-970-6	Relief Valve	1
# 5	157-164-4	Spring Setter	1	#46	990-305-0	O-Ring(ARP568-003)(KS)	1	#82	157-924-3	Name Plate	1
# 6	157-062-4	Ball Bearing Casing	1	#47	992-020-0	SU-Ring(Q12)(NTN)	1	#83	976-602-0	Spring(2.7×7.3)(0.4)	1
# 7	145-546-6	Piston	1	#48	158-995-6	Name Plate(Caution)	1	Parts for UB-P-T60			
# 8	145-929-6	Check Valve Cover	1	Parts for 861-198-1 Handle Assembly				#84	157-439-4	Front Casing	1
# 9	145-973-6	Liner Casing Spacer	1	#49	861-438-1	○ Slide Base	1	#85	145-901-6	Rear Liner Plate	1
#10	145-904-6	Front Liner Plate	1	#50	861-169-1	○ Operating Board	1	#86	145-902-6	Liner	1
#11	145-906-6	Liner Casing Cover	1	#51	861-453-1	○ Internal Gear	1	#87	145-350-7	Driver Anvil	1
#12	145-907-6	Relief Valve Spindle	1	#52	861-454-1	○ Planet Gear	2	#88	145-440-6	Driving Blade	2
#13	144-270-0	Pressure Control Valve	1	#53	861-478-1	○ Handle Set	1	#89	145-974-6	Roller(2.5×26)	2
#14	145-972-6	Accumulator	1	#54	861-480-1	○ Shield Plate	1	#90	145-905-6	Liner Casing	1
#15	145-908-7	Accumulator Cover	1	#55	861-482-1	○ Plate Spring	1	#91	157-970-5	Relief Valve	1
#16	194-742-0	Oil Plug	1	#56	861-483-1	○ Reverse Lever	1	#92	157-924-4	Name Plate	1
#17	145-327-6	Anvil Front Spacer	2	#57	861-487-1	○ Gear Cage Spacer	2	#93	976-639-0	Spring(2.9×7.4)(0.45)	1
#18	150-064-5	Plug	1	#58	861-489-1	○ Lens	1	#94	976-665-0	Spring(4.3×19)(0.55)	1
#19	011-351-1	Bit Sleeve(1/8)	1	#59	861-496-1	○ Head Cover	1	#95	976-781-0	Spring(3.3×20.5)(0.4)	2
#20	011-352-1	Bit Spacer	1	#60	861-167-1	○ Switch	1	Parts for UB-P-T50 (P)			
#21	944-002-0	Supporting Ring(2.6×4.5×1)	1	#61	861-199-1	○ Motor	1	#32	976-694-0	Spring(4.3×9.2)(Standard)	1
#22	944-212-0	Supporting Ring(12×16×1.5)	1	#62	861-499-1	○ Handle Rear Cover	1	#32-1	976-696-0	Spring(4.3×9.8)(Strong)	1
#23	970-013-0	Pin(H)(1.5×4)	1	#63	861-160-1	○ Tapping Screw(K4×45)	4	#32-2	976-599-0	Spring(4.1×9.8)(Weak)	1
#24	970-130-0	Pin(H)(2.45×4.5)	2	#64	861-161-1	○ Screw(K3×10)	2	#32-3	976-695-0	Spring(4.3×9.2)(Weaker)	1
#25	970-131-0	Pin(H)(2.45×9.5)	2	#65	861-162-1	○ Screw(M3×5)	2	#101	891-554-1	Anvil Assembly(P)	1
#26	962-006-0	Spring Washer(2-4S)	4	#66	861-163-1	○ Screw(3×20)	5	#102	891-300-1	Socket Pin Assembly	1
#27	972-111-0	Roller Pin(4×11)	2	#67	861-164-1	○ Screw(2.6×8)	2	Parts for UB-P-T60 (P)			
#28	973-040-0	Roll Pin(1.5×5)	2	#68	981-000-0	○ Ball(1/16)	1	#32	976-694-0	Spring(4.3×9.2)(Standard)	1
#29	975-754-0	Adjusting Spacer(17×12.5×t)	1	Parts for UB-P-T40 & T50				#32-1	976-696-0	Spring(4.3×9.8)(Strong)	1
#30	976-601-0	Spring(1.9×6.5)(0.23)	1	#69	157-439-3	Front Casing	1	#32-2	976-599-0	Spring(4.1×9.8)(Weak)	1
#31	976-327-0	Spring(13.5×11)(0.9)	1	#70	145-901-0	Rear Liner Plate	1	#32-3	976-695-0	Spring(4.3×9.2)(Weaker)	1
#32	976-694-0	Spring(4.3×9.2)(Standard)	1	#71	145-902-0	Liner	1	#106	891-552-1	Anvil Assembly(P)	1
#32-1	976-696-0	Spring(4.3×9.8)(0.5)(Strong)	1	#72	145-350-2	Driver Anvil	1	#102	891-300-1	Socket Pin Assembly	1
#32-2	976-599-0	Spring(4.1×9.8)(0.45)(Weak)	1	#73	145-440-0	Driving Blade	2	Standard Accessories			
#34	976-645-0	Spring(2.4×5)(0.3)	1	#74	145-974-0	Roller(2.5×21)	2	#96	939-091-0	Allen Wrench(1.5mm)	1
#35	978-117-0	Snap Ring(11.7×1)	1	#75	145-905-0	Liner Casing	1	#97	143-242-2	Regulating Attachment	1
#36	981-001-0	Ball(3/32)	1	#76	976-674-0	Spring(4.3×14)(0.55)	1				
#37	981-002-0	Ball(1/8)	1	#77	976-295-0	Spring(3.3×20.5)(0.35)	2				
#37-1	981-045-0	Ball(1.5mm)	1	Parts for UB-P-T40							
#38	982-923-0	Ball Bearing(6902ZZ)	1	#78	157-970-2	Relief Valve	1				
#39	982-942-0	Ball Bearing(6902ZZNR)	1								
#40	988-460-0	Needle Roller Bearing(1210)	1								
#41	990-320-0	O-Ring(ARP568-003)	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

Oct 2011

OKA-491-07-07-12-0502