


UDBP-TA40&TA50 SERIES BATTERY OIL-PULSE TOOLS

EXPLODED VIEW

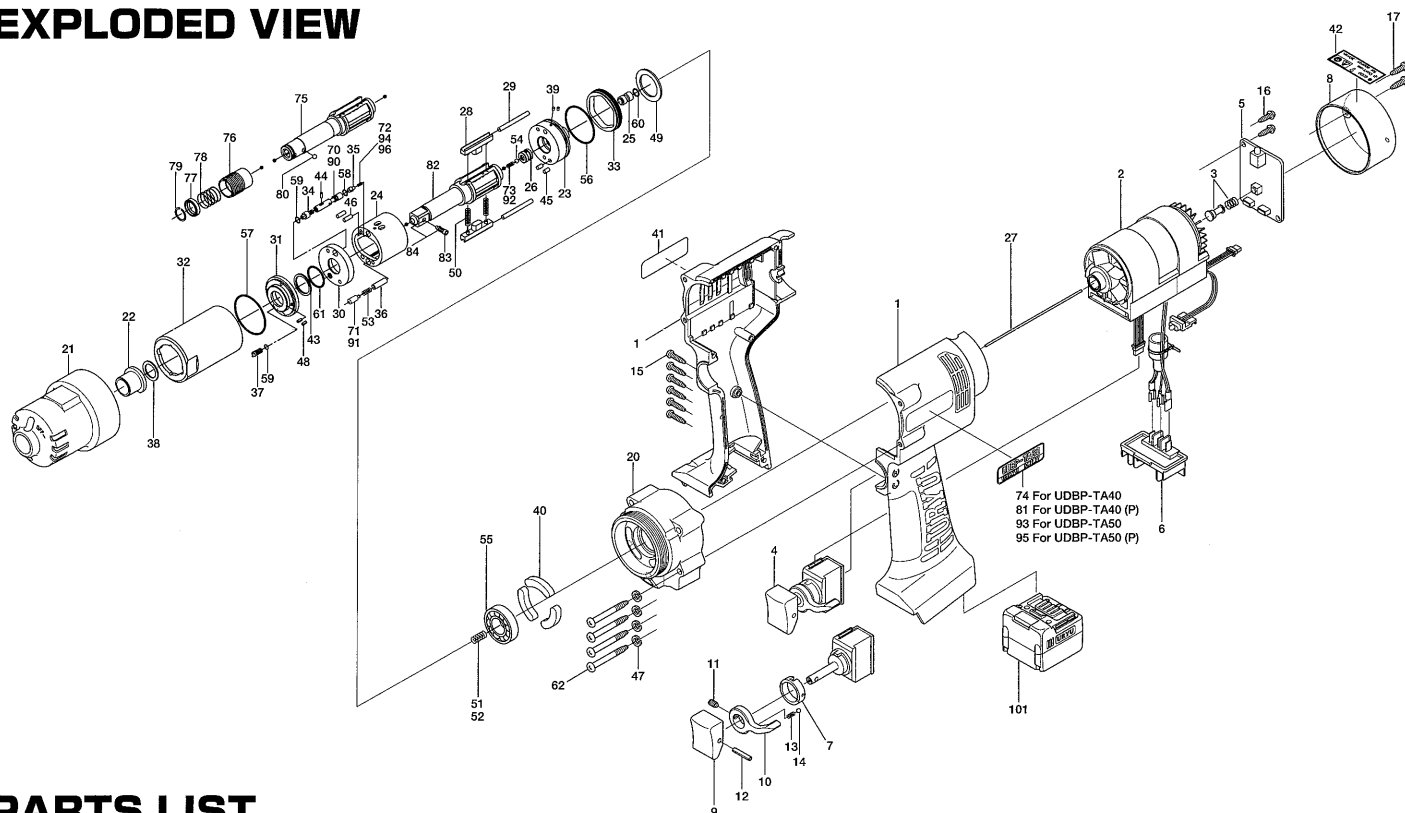

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
Common Parts				#39	150-064-5	Plug	2	For UDBP-TA40(P)			
863-968-1 Handle Assembly				#40	080-835-3	Filter	3	#81	077-924-4	Name Plate UDBP-TA40(P)	1
# 1	863-958-1	Handle (R & L)	1	#41	094-997-4	Plate (Address & Others)	1	#82	145-319-0	Anvil	1
# 2	861-192-1	Motor Assembly	1	#42	094-995-4	Plate (Warning)	1	#83	891-300-1	Socket Pin Assembly	1
# 3	861-173-1	Slide Base Assembly	1	#43	944-212-0	Back-up Ring (12×16×1.5)	1	#84	891-554-1	Anvil Assembly	1
# 4	861-174-1	Switch Assembly	1	#44	970-013-0	Pin (H)(1.5×4)	1	Parts for UDBP-TA50 series			
# 5	863-972-1	Operating Board (with LED)	1	#45	970-130-0	Pin (H)(2.45×4.5)	2	#90	093-970-8	Relief Valve	1
# 6	861-193-1	Battery Contact	1	#46	970-131-0	Pin (H)(2.45×9.5)	2	#91	078-276-7	Pressure Adjusting Valve	1
# 7	861-177-1	Sleeve	1	#47	962-006-0	Spring Washer (2-4S)	4	#92	976-653-0	Spring (2.4×5)(0.26)	1
# 8	861-178-1	Handle Cover	1	#48	973-040-0	Roll Pin (1.5×5)	2	For UDBP-TA50			
# 9	147-107-2	Valve Lever	1	#49	975-752-0	Adjusting Spacer (15×10×1)	1	#93	078-924-5	Name Plate UDBP-TA50	1
#10	480-212-8	Reverse Lever	1	#50	976-791-0	Spring (3.3×21) WPC	2	#94	976-896-0	Spring (2.9×7.7)	1
#11	954-105-0	Allen Head Screw (M4×5)	1	#51	976-662-0	Spring (3.3×18) Strong	1	#75	145-350-2	Driver Anvil	1
#12	973-014-0	Roll Pin (2×14)	1	#52	976-857-0	Spring (3.3×17) Medium	1	#76	011-351-1	Bit Sleeve	1
#13	976-006-0	Spring (3×5)	1	#53	976-842-0	Spring (2.9×13.5) WPC	1	#77	011-352-1	Bit Spacer	1
#14	981-002-0	Ball (1/8)	1	#54	981-001-0	Ball (3/32)	1	#78	976-327-0	Spring (13.5×11)	1
#15	861-179-1	Tapping Screw	7	#55	982-902-0	Ball Bearing (6901)	1	#79	978-117-0	Snap Ring (11.7×1)	1
#16	861-180-1	Tapping Screw	2	#56	990-329-0	O-Ring (JW-1530-19)	1	#80	981-002-0	Ball (1/8)	1
#17	861-181-1	Tapping Screw	2	#57	990-605-0	O-Ring (25×1.45)	1	For UDBP-TA50 (P)			
#20	093-065-8	Handle Front Cover	1	#58	990-621-0	O-Ring (3.8×1.8×1.0)	1	#95	079-924-0	Name Plate UDBP-TA50(P)	1
#21	093-439-8	Front Casing	1	#59	990-900-0	O-Ring (SNS-2)	2	#96	976-895-0	Spring (2.8×7.7)	1
#22	190-328-6	Anvil Bushing	1	#60	991-025-0	X-Ring (4.7×2.2×1.25)	1	#82	145-319-0	Anvil	1
#23	18B-901-2	Rear Liner Plate	1	#61	992-020-0	SU-Ring (Q-12)	1	#83	891-300-1	Socket Pin Assembly	1
#24	18B-902-2	Liner	1	#62	963-363-0	Tapping Screw (M4×35)	4	#84	891-554-1	Anvil Assembly	1
#25	145-546-6	Piston	1	Parts for UDBP-TA40 series				ACCESSORIES			
#26	145-929-6	Check Valve Cover	1	#70	144-970-0	Relief Valve	1	#100	939-091-0	Allen Wrench (1.5)	1
#27	092-130-8	Operating Rod (1.4×82.7)	1	#71	17C-276-4	Pressure Adjusting Valve	1	#101	861-188-1	Battery (UB111Li)	1
#28	145-440-0	Driving Blade	2	#72	976-853-0	Spring (2.9×7.5)	1	#102	861-185-1	Battery Charger (UBC-A) with Power Code	1
#29	145-974-0	Roller Pin (2.5×21)	2	#73	976-645-0	Spring (2.4×5)(0.3)	1	#103	861-186-1	Battery Charger (UBC-E) with Power Code	1
#30	18C-973-8	Liner Casing Spacer	1	For UDBP-TA40				#104	861-196-1	Power Code for UBC-A	1
#31	145-904-6	Front Liner Plate	1	#74	077-924-0	Name Plate UDBP-TA40	1	#105	861-197-1	Power Code for UBC-E	1
#32	145-905-0	Liner Casing	1	#75	145-350-2	Driver Anvil	1	#106	916-810-0	Double Bit (No. 2×75) for Driver Anvil	1
#33	145-906-6	Liner Casing Cover	1	#76	011-351-1	Bit Sleeve	1				
#34	145-907-6	Relief Valve Spindle	1	#77	011-352-1	Bit Spacer	1				
#35	144-270-0	Pressure Regulator Valve	1	#78	976-327-0	Spring (13.5×11)	1				
#36	080-274-6	Spring Holder	1	#79	978-117-0	Snap Ring (11.7×1)	1				
#37	194-742-0	Oil Plug	1	#80	981-002-0	Ball (1/8)	1				
#38	145-327-6	Anvil Front Spacer	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

Jun 2012

OKA-547-12-06-28-0501