


UDBP-TA60 SERIES BATTERY OIL-PULSE TOOLS

EXPLODED VIEW

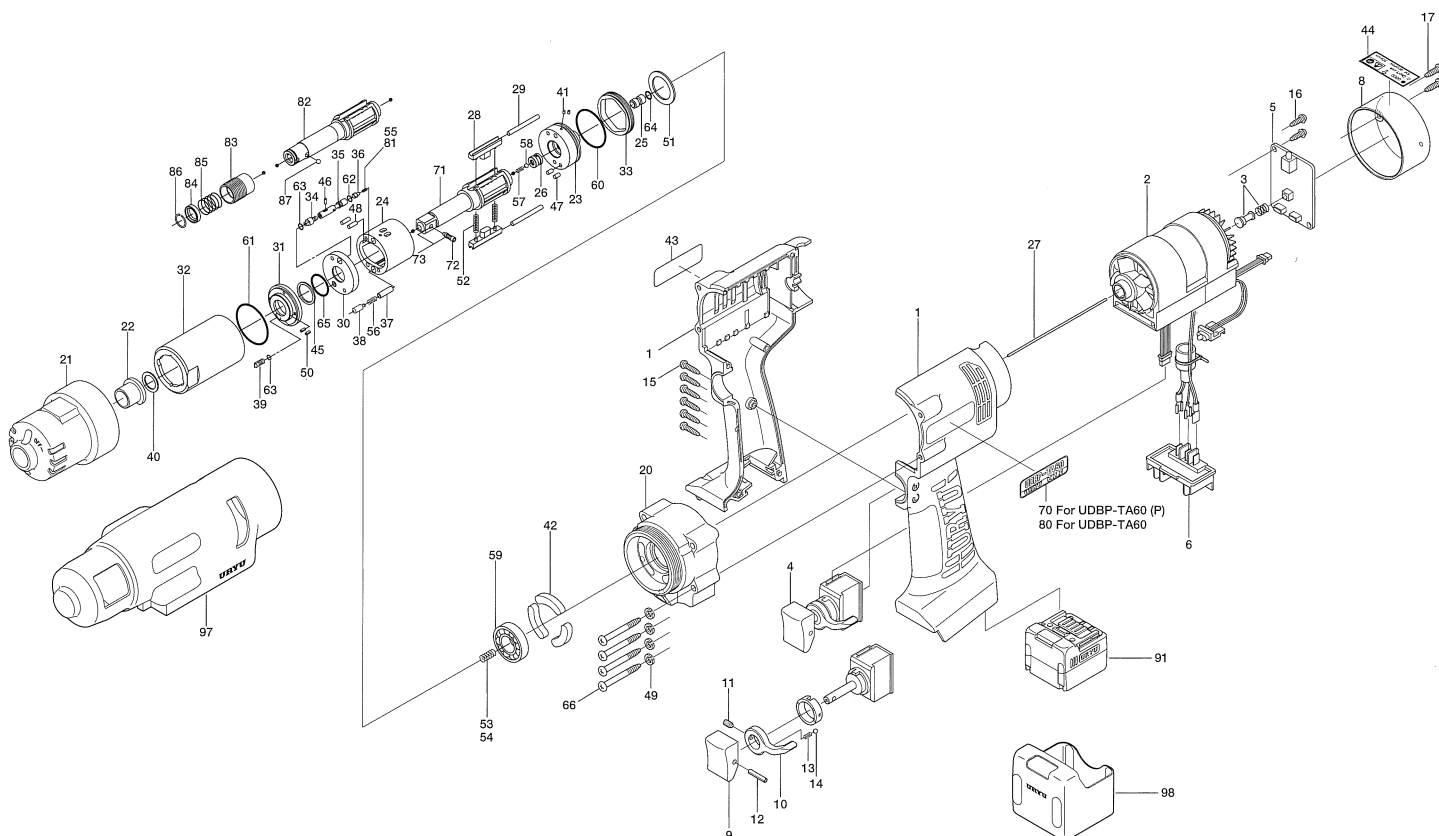

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
Common Parts				#33	145-906-6	Liner Casing Cover	1	#65	992-020-0	SU-Ring (Q-12)	1
863-969-1 Handle Assembly				#34	145-907-6	Relief Valve Spindle	1	#66	963-364-0	Tapping Screw (M4×40)	4
# 1	863-958-1	Handle (R & L)	1	#35	094-970-4	Relief Valve	1	For UDBP-TA60 (P)			
# 2	861-172-1	Motor Assembly	1	#36	144-270-0	Pressure Regulator Valve	1	#70	081-924-8	Name Plate UDBP-TA60(P)	1
# 3	861-173-1	Slide Base Assembly	1	#37	080-274-6	Spring Holder	1	#55	976-636-0	Spring (2.8×7.4)	1
# 4	861-174-1	Switch Assembly	1	#38	080-276-6	Pressure Adjusting Valve	1	#71	094-319-4	Anvil	1
# 5	863-972-1	Operating Board (with LED)	1	#39	194-742-0	Oil Plug	1	#72	891-300-1	Socket Pin Assembly	1
# 6	861-176-1	Battery Contact	1	#40	145-327-6	Anvil Front Spacer	1	#73	891-570-1	Anvil Assembly	1
# 8	861-178-1	Handle Cover	1	#41	150-064-5	Plug	2	For UDBP-TA60			
# 9	147-107-2	Valve Lever	1	#42	080-835-3	Filter	3	#80	081-924-5	Name Plate UDBP-TA60	1
#10	480-212-8	Reverse Lever	1	#43	094-997-4	Plate (Address & Others)	1	#81	976-883-0	Spring (2.8×7.6)	1
#11	954-105-0	Allen Head Screw (M4×5)	1	#44	094-995-4	Plate (Warning)	1	#82	145-350-7	Driver Anvil	1
#12	973-014-0	Roll Pin (2×14)	1	#45	944-212-0	Back-up Ring (12×16×1.5)	1	#83	011-351-1	Bit Sleeve	1
#13	976-006-0	Spring (3×5)	1	#46	970-013-0	Pin (H)(1.5×4)	1	#84	011-352-1	Bit Spacer	1
#14	981-002-0	Ball (1/8)	1	#47	970-130-0	Pin (H)(2.45×4.5)	2	#85	976-327-0	Spring (13.5×11)	1
#15	861-179-1	Tapping Screw	7	#48	970-131-0	Pin (H)(2.45×9.5)	2	#86	978-117-0	Snap Ring (11.7×1)	1
#16	861-180-1	Tapping Screw	2	#49	962-006-0	Spring Washer (2-4S)	4	#87	981-002-0	Ball (1/8)	1
#17	861-181-1	Tapping Screw	2	#50	973-040-0	Roll Pin (1.5×5)	2	ACCESSORIES			
#20	094-065-5	Handle Front Cover	1	#51	975-752-0	Adjusting Spacer (15×10×1)	1	#90	939-091-0	Allen Wrench (1.5)	1
#21	094-439-5	Front Casing	1	#52	976-805-0	Spring (3.5×25.2) WPC	2	#91	861-182-1	Battery (UB222Li)	1
#22	190-328-6	Anvil Bushing	1	#53	976-662-0	Spring (3.3×18) Medium	1	#92	861-185-1	Battery Charger (UBC-A)	1
#23	18C-901-8	Rear Liner Plate	1	#54	976-857-0	Spring (3.3×17) Weak	1	with Power Code			
#24	080-902-6	Liner	1	#55	976-985-0	Spring (3.3×18) Strong	1	#93	861-186-1	Battery Charger (UBC-E)	1
#25	145-546-6	Piston	1	#56	976-841-0	Spring (3×11.4)	1	with Power Code			
#26	145-929-6	Check Valve Cover	1	#57	976-645-0	Spring (2.4×5.5)	1	#94	861-196-1	Power Code for UBC-A	1
#27	094-130-7	Operating Rod (1.4×93.2)	1	#58	981-001-0	Ball (3/32)	1	#95	861-197-1	Power Code for UBC-E	1
#28	145-440-6	Driving Blade	2	#59	982-902-0	Ball Bearing (6901)	1	#96	916-810-0	Double Bit (No. 2×75) for Driver Anvil	1
#29	145-974-6	Roller Pin (2.5×26)	2	#60	990-329-0	O-Ring (JW-1530-19)	1	#97	863-965-1	Casing Protector	1
#30	18C-973-8	Liner Casing Spacer	1	#61	990-605-0	O-Ring (25×1.45)	1	#98	863-977-1	Battery Protector	1
#31	145-904-6	Front Liner Plate	1	#62	990-621-0	O-Ring (3.8×1.8×1.0)	1				
#32	145-905-6	Liner Casing	1	#63	990-900-0	O-Ring (SNS-2)	2				
				#64	991-025-0	X-Ring (4.7×2.2×1.25)	1				

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-549-14-07-01-1002