



UD-50 SERIES AIR DRILLS

EXPLODED VIEW

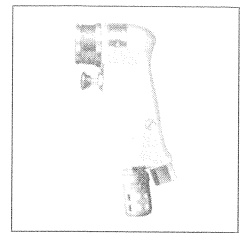

Casing Assembly
Code 611-984-1
Components
(#1, 2, 3, 4, 5, 6, 7, 14, 19, 20, 21,)

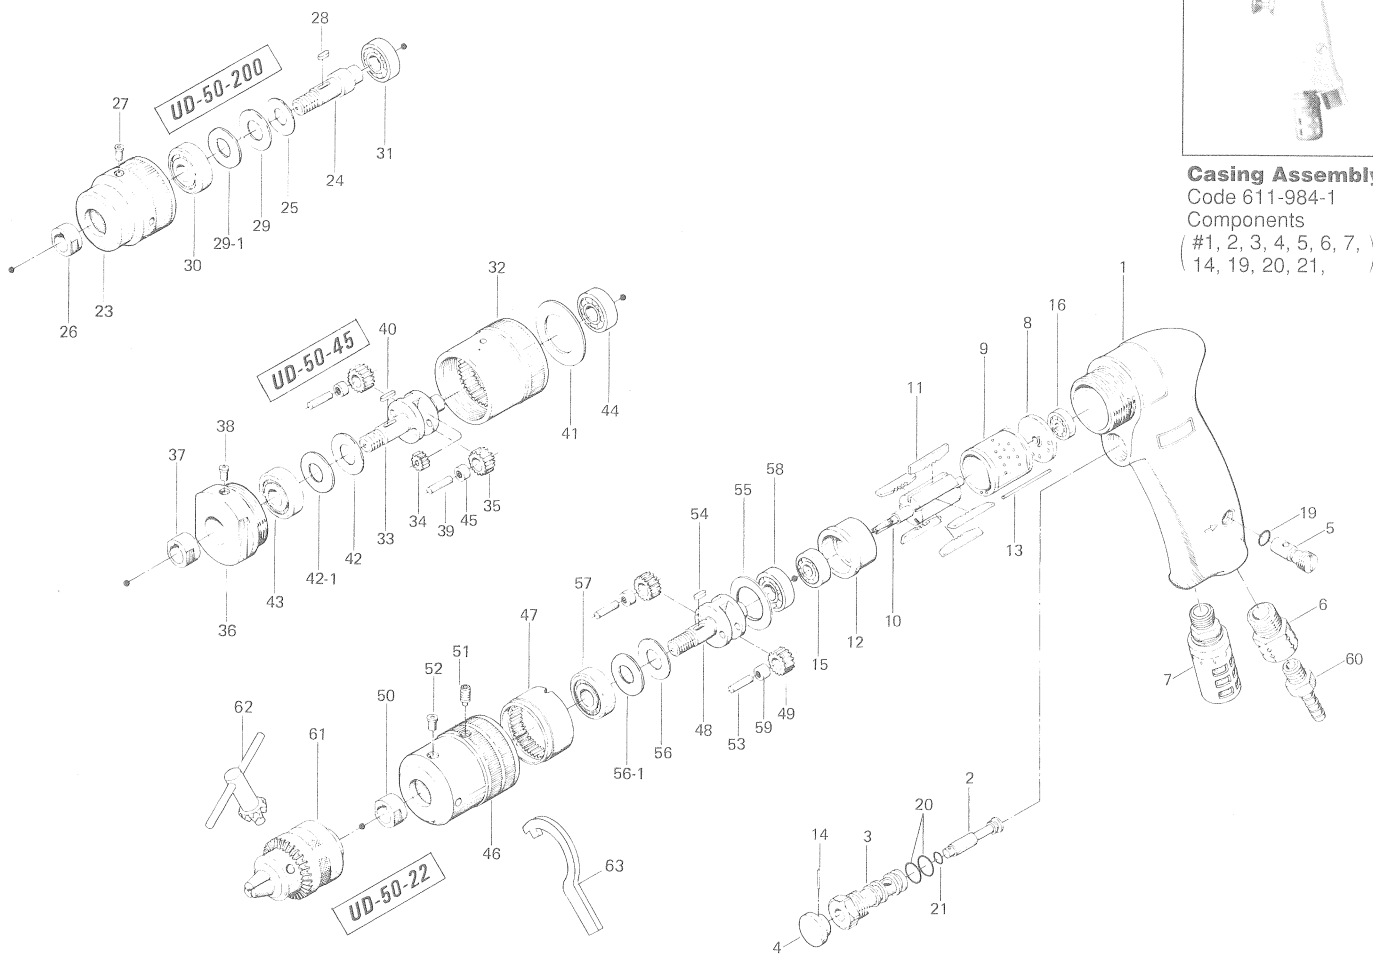

PARTS LIST

Casing Assembly Components are marked with "○"

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
UD-50 Series Common Parts				#27	968-130-0	Grease Cup(3/16)	1	#47	611-465-1	Internal Gear	1
# 1	611-025-1	○ Casing	1	#28	974-008-0	Key(3×8)	1	#48	603-319-1	Anvil	1
# 2	603-100-2	○ Valve	1	#29	975-149-0	Spacer(22×12.5×0.4)	1	#49	603-470-1	Planet Gear	2
# 3	606-101-1	○ Valve Bushing	1	#29-1	975-752-0	Adjusting Spacer(15×10×t)	1	#50	603-411-1	Chuck Retainer	1
# 4	603-107-2	○ Throttle Trigger	1	#30	982-140-0	Ball Bearing(6000Z)	1	#51	952-205-0	Allen Head Dog Point	
# 5	023-240-1	○ Regulator Valve	1	#31	982-402-0	Ball Bearing(EE-3)	1			Screw(M5×5)	1
# 6	191-091-5	○ Air Inlet Bushing	1	611-005-5 Gear Box Assembly for UD-50-45				#52	968-130-0	Grease Cup(3/16)	1
# 7	611-885-0	○ Silencer Assembly	1	#32	611-029-5	Gear Casing	1	#53	972-114-0	Needle Roller(4×13.8)	2
# 8	603-285-1	Rear Plate	1	#33	674-319-1	Anvil	1	#54	974-008-0	Key(3×8)	1
# 9	603-286-1	Cylinder	1	#34	674-460-1	Rotor Gear	1	#55	975-244-0	Spacer(31.5×26×2)	1
#10	603-287-1	Rotor	1	#35	674-470-1	Planet Gear	2	#56	975-162-0	Spacer(24×12.5×0.4)	1
#11	603-288-1	Blade	5	#36	674-070-1	Gear Casing Cover	1	#56-1	975-752-0	Adjusting Spacer(15×10×t)	1
#12	603-289-1	Front Plate	1	#37	603-411-1	Chuck Retainer	1	#57	982-140-0	Ball Bearing(6000Z)	1
#13	970-030-0	Pin(H)(1.8×44)	1	#38	968-130-0	Grease Cup(3/16)	1	#58	982-402-0	Ball Bearing(EE-3)	1
#14	973-010-0	○ Roll Pin(2×10)	1	#39	972-114-0	Needle Roller(4×13.8)	2	#59	988-450-0	Needle Roller Bearing(HK-0408)	2
#15	982-021-0	Ball Bearing(626)	1	#40	974-008-0	Key(3×8)	1	Standard Accessories			
#16	982-026-0	Ball Bearing(634)	1	#41	611-296-4	Front Plate Spacer	1	#60	940-114-0	Air Hose Nipple(NPT1/4×3/8)	1
#19	990-003-0	○ O-Ring(P5)	1	#42	975-162-0	Spacer(24×12.5×0.4)	1	#61	923-070-0	Chuck(8mm)	1
#20	990-610-0	○ O-Ring(8×2)	2	#42-1	975-752-0	Adjusting Spacer(15×10×t)	1	#62	927-050-0	Chuck Handle(5mm)	1
#21	990-203-0	○ O-Ring(JW1516-3)	1	#43	982-140-0	Ball Bearing(6000Z)	1	#63	937-006-0	Spanner(4×21×150)	1
611-005-8 Gear Box Assembly for UD-50-200				#44	982-402-0	Ball Bearing(EE-3)	1				
#23	611-039-8	Anvil Casing	1	#45	988-450-0	Needle Roller Bearing(HK-0408)	2				
#24	611-319-7	Anvil	1	611-005-1 Gear Box Assembly for UD-50-22							
#25	611-334-7	Anvil Spacer	1	#46	611-029-1	Gear Casing	1				
#26	603-411-1	Chuck Retainer	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-145-05-03-14-3018