


UA100MC OIL-PULSE WRENCH

EXPLODED VIEW

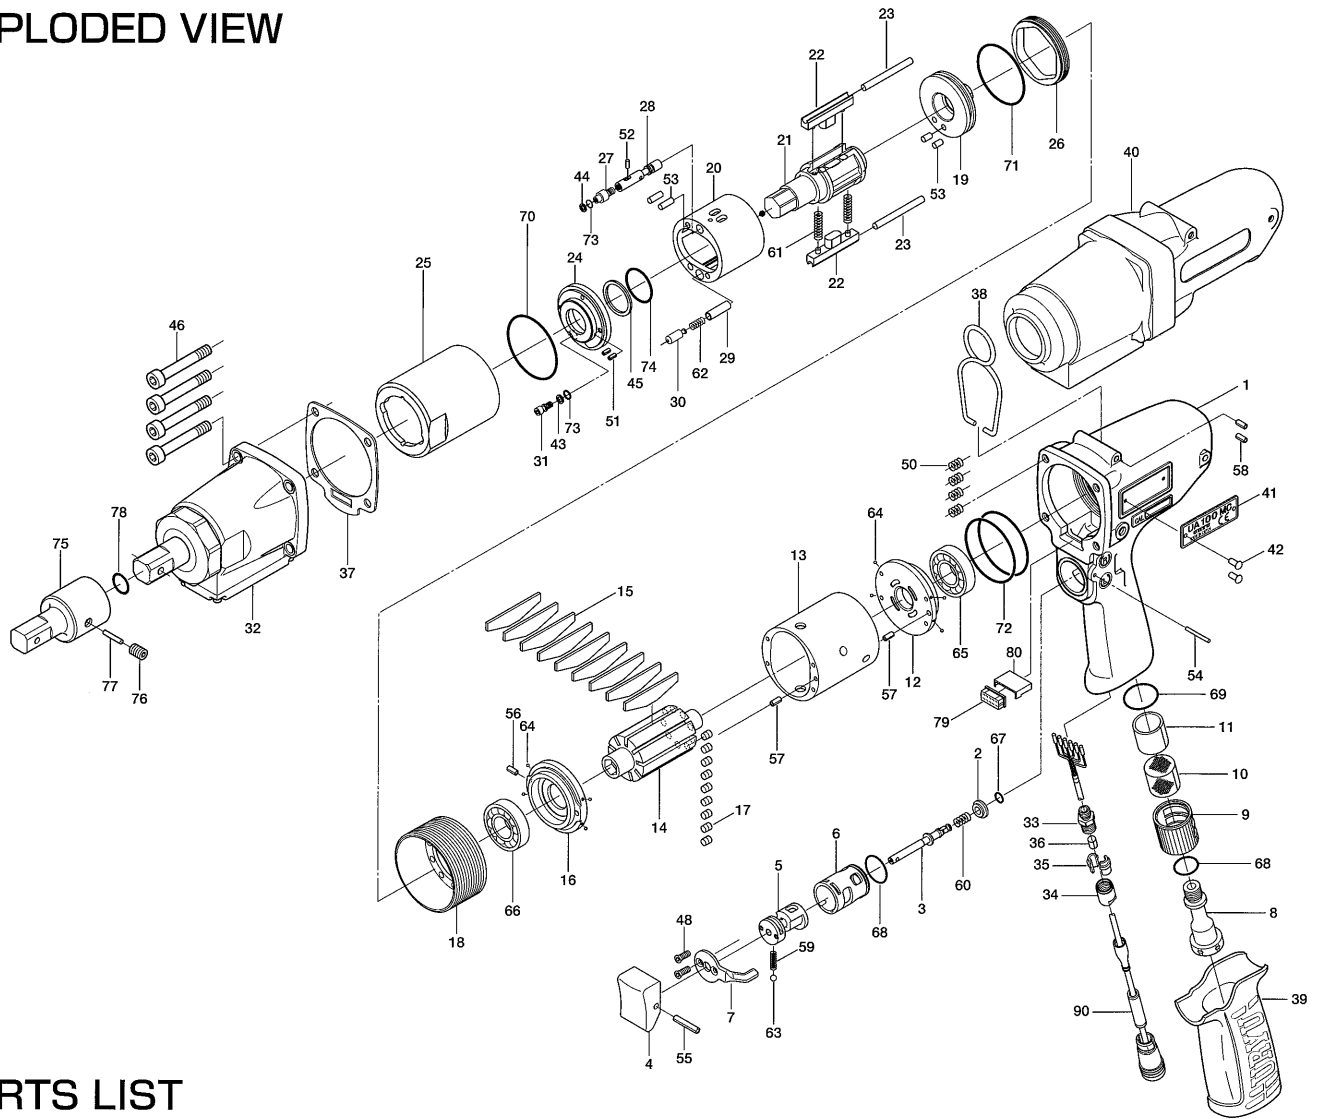

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	131-025-9	Handle	1	#30	18F-276-9	Pressure Adjusting Valve	1	#61	976-783-0	Spring (4.3x36)WPC	2
# 2	147-100-8	Valve	1	#31	194-742-3	Oil Plug	1	#62	976-874-0	Spring (3.4x16.6)	1
# 3	147-104-8	Valve Rod	1	#32	851-692-1	Sensor Casing Assembly (S08S)	1	#63	981-002-0	Ball (1/8)	1
# 4	147-107-2	Valve Lever	1	#33	851-301-1	Connector	1	#64	981-045-0	Ball (1.5)	9
# 5	147-210-8	Reverse Valve	1	#34	851-302-1	Cap	1	#65	982-949-0	Ball Bearing (16001)	1
# 6	147-211-8	Reverse Valve Bushing	1	#35	851-303-1	Stopper	2	#66	982-950-0	Ball Bearing (16002)	1
# 7	147-212-8	Reverse Lever	1	#36	131-395-8	Outer Ring	1	#67	990-306-0	O-Ring (APR-569-004)	1
# 8	148-091-3	Air Inlet Bushing	1	#37	131-867-9	Front Casing Packing	1	#68	990-914-0	O-Ring (SNS-16)	2
# 9	147-780-9	Exhaust Stack	1	#38	174-790-0	Suspension Ring	1	#69	990-919-0	O-Ring (SNS-22)	1
#10	147-042-8	Silencer	1	#39	17D-842-3	Handle Cover	1	#70	990-928-0	O-Ring (SNS-38)	1
#11	148-835-2	Filter (K-50)	1	#40	131-840-9	Casing Protector	1	#71	990-929-0	O-Ring (SNS-36)	1
#12	148-285-2	Rear Plate	1	#41	17F-924-3	Metal Tag (UA100MC)	1	#72	990-938-0	O-Ring (SNS-48)	2
#13	851-391-1	Cylinder	1	#42	930-205-0	Driver Rivet	2	#73	990-970-0	O-Ring (SNS-2)	2
#14	148-287-2	Rotor	1	#43	944-003-0	Back-up Ring (3x5x1)	1	#74	992-021-0	SU-Ring (Q16)	1
#15	148-288-2	Blade	9	#44	944-203-0	Back-up Ring (3.1x5x1)	1	#75	904-190-0	Extension Bar (1/2x60)	1
#16	148-289-2	Front Plate	1	#45	944-215-0	Back-up Ring (16x19.9x1.5)	1	#76	953-205-0	Allen Head Screw (M5x5)	1
#17	148-064-2	Plug	9	#46	945-117-0	Allen Head Bolt (M5x16)	4	#77	971-220-0	Pin (3x20)	1
#18	148-036-2	Hammer Casing Connector	1	#48	948-423-0	Allen Flush Head Screw (M3x6)	2	#78	990-016-0	O-Ring (P-16)	1
#19	17F-901-3	Rear Liner Plate	1	#50	965-011-0	Heli-Sert (M5x1.5D)	1	#79	909-918-0	Double-Row Socket	1
#20	18F-902-8	Liner	1	#51	969-450-0	Pin (G)(3x8)	2	#80	911-012-0	Connector Cover	1
#21	131-319-9	Anvil	1	#52	970-091-0	Pin (H)(2x4.5)	1	ACCESSORIES			
#22	148-440-2	Driving Blade	2	#53	970-205-0	Pin (H)(3x7)	4				
#23	148-974-2	Roller Pin (3x35)	2	#54	971-125-0	Pin (2x25)	1	#90	910-258-0	Joint Cable Assembly	1
#24	18F-904-8	Front Liner Plate	1	#55	973-014-0	Roll Pin (2x14)	1	#91	939-091-0	Allen Wrench (1.5)	1
#25	148-905-2	Liner Casing	1	#56	973-006-0	Roll Pin (2x6)	1	#92	940-114-0	Air Hose Nipple (NPT1/4x3/8)	1
#26	148-906-2	Liner Casing Cover	1	#57	973-068-0	Roll Pin (2.5x8)	2	#93	909-749-0	Solenoid Valve Assembly	1
#27	174-907-2	Relief Valve Spindle	1	#58	973-308-0	Roll Pin (5x8)	2	#94	910-263-0	Sensor Cable Assembly (3F5)	1
#28	17F-970-3	Relief Valve	1	#59	976-006-0	Spring (3x5)	1	#95	910-633-0	Connector Cover	1
#29	18F-274-8	Spring Holder	1	#60	976-643-0	Spring (7.5x9.7)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

Jun 2012

OKA-548-12-07-06-0501