


UL50MC SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

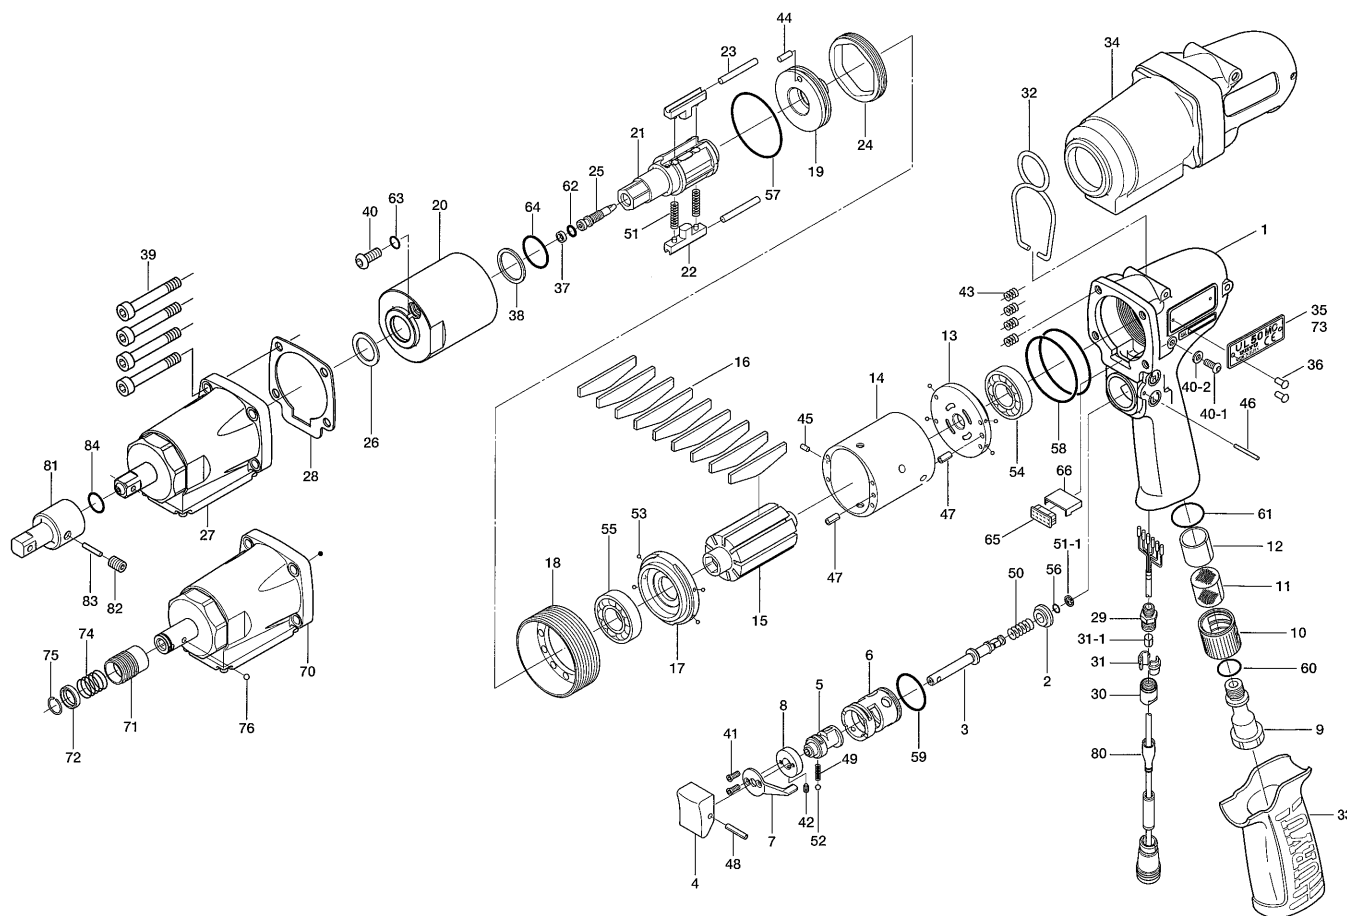

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	131-025-5	Handle	1	#32	143-790-3	Suspension Ring	1	#61	990-916-0	O-Ring (SNS-18)	1
# 2	147-100-3	Valve	1	#33	147-842-2	Handle Cover	1	#62	990-970-0	O-Ring (SNS-2)(NOK)	1
# 3	147-104-2	Valve Rod	1	#34	131-840-5	Casing Protector	1	#63	990-971-0	O-Ring (SNS-3)(NOK)	1
# 4	147-107-2	Valve Lever	1	#35	131-924-5	Metal Tag	1	#64	992-020-0	SU-Ring (Q12)(NOK)	1
# 5	851-306-1	Reverse Valve	1	#36	930-205-0	Driver Rivet (No.0×2.6)	2	#65	909-918-0	Double-Row Socket	1
# 6	851-359-1	Reverse Valve Bushing	1	#37	944-002-0	Supporting Ring (2.6×4.5×1)	1	#66	911-012-0	Connector Cover	1
# 7	173-212-0	Reverse Lever	1	#38	944-212-0	Supporting Ring (12×16×1.5)	1	PARTS FOR UL-50DMC			
# 8	851-307-1	Reverse Valve Spacer	1	#39	945-117-0	Allen Head Bolt (M5×16)	4	#70	851-697-1	Sensor Casing Assembly (S04D)	1
# 9	147-091-2	Air Inlet Bushing	1	#40	945-942-0	Hexagon Round Head Bolt(M4×6)	1	#71	011-351-1	Bit Sleeve	1
#10	147-780-3	Exhaust Stack	1	#40-1	945-949-0	Hexagon Head Bolt(M5×6)	1	#72	011-352-1	Bit Spacer	1
#11	147-042-2	Silencer	1	#40-2	961-012-0	Flat Washer (5)	1	#73	131-924-2	Metal Tag	1
#12	145-835-8	Filter(K-100)	1	#41	948-423-0	Allen Flush Head Screw (M3×6)	2	#74	976-327-0	Spring (13.5×11)	1
#13	147-285-2	Rear Plate	1	#42	952-008-0	Allen Head Screw (M3×8)	1	#75	976-117-0	Snap Ring (11.7×1)	1
#14	143-286-3	Cylinder	1	#43	965-011-0	Heli-Sert (M5×1.5D)	4	#76	981-002-0	Ball (1/8)	1
#15	143-287-3	Rotor	1	#44	970-148-0	Pin (H)(2.5×3.8)	1	ACCESSORIES			
#16	143-288-3	Blade (PC)	9	#45	971-102-0	Pin (2×3.8)	1	#80	910-258-0	Joint Cable Assembly	1
#17	147-289-3	Front Plate	1	#46	971-130-0	Pin (2×30)	1	#81	904-090-0	Extension Bar (3/8×45)(MC)	1
#18	130-036-5	Hammer Casing Connector	1	#47	973-008-0	Roll Pin (2×8)	2	#82	953-104-0	Allen Head Screw (M4×4)	1
#19	143-901-3	Rear Liner Plate	1	#48	973-014-0	Roll Pin (2×14)	1	#83	971-214-0	Pin (3×14)	1
#20	143-902-3	Liner	1	#49	976-006-0	Spring (3×5)(0.4)	1	#84	990-011-0	O-Ring (P-12)	1
#21	851-357-1	Anvil	1	#50	976-457-0	Spring (7×12)(0.9)	1	#85	939-090-0	Allen Wrench (1.5)	1
#22	143-440-3	Driving Blade	2	#51	976-792-0	Spring (3.5×21)(0.45)WPC	2	#86	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#23	143-974-3	Roller Pin (2.5×22)	2	#51-1	979-405-0	Outer Snap Ring(E2.5)	1	#87	916-810-0	(W) Bit (No.2×75)	1
#24	143-906-3	Liner Casing Cover	1	#52	981-002-0	Ball (1/8)	1	#88	909-749-0	Solenoid Valve Assembly	1
#25	143-970-3	Relief Valve	1	#53	981-045-0	Ball(1.5mm)	8	OPTIONAL ACCESSORIES			
#26	178-327-9	Anvil Front Spacer	1	#54	982-014-0	Ball Bearing(607)	1	#90	910-263-0	Sensor Cable Assembly (3F5)	1
#27	851-679-1	Sensor Casing Assembly (S04S)	1	#55	982-902-0	Ball Bearing(6901)	1	#91	910-633-0	Connector Cover	1
#28	149-867-2	Front Casing Packing	1	#56	990-306-0	O-Ring (ARP-568-004)(H)	1				
#29	851-301-1	Connector	1	#57	990-331-0	O-Ring (JW1530-21)	1				
#30	851-302-1	Cap	1	#58	990-337-0	O-Ring (JW1530-27)	2				
#31	851-303-1	Stopper	2	#59	990-912-0	O-Ring (SNS-14)	1				
#31-1	131-395-8	Outer Ring	1	#60	990-914-0	O-Ring (SNS-16)	1				

When ordering spare parts, please Specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

2011

OKA-508-11-04-26-302