



UW-101EK & UW-101ERK IMPACT WRENCHES

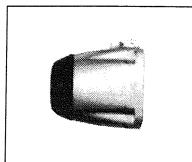



Hammer Casing Assembly
Code 054-007-1
Components
#18, 26, 30, 38,
54, 58.

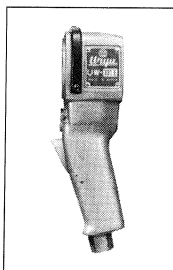

Handle Assembly for UW-101EK
Code 054-984-8
Components
#2, 3, 4, 5, 7, 29,
34, 36, 37, 39, 40,
43, 47, 51.

EXPLODED VIEW

Handle Assembly for UW-101ERK
Code 055-004-0
Components
#2-1, 3-1, 4, 5, 7,
29, 34, 36, 37, 39,
40-1, 43, 47, 51.

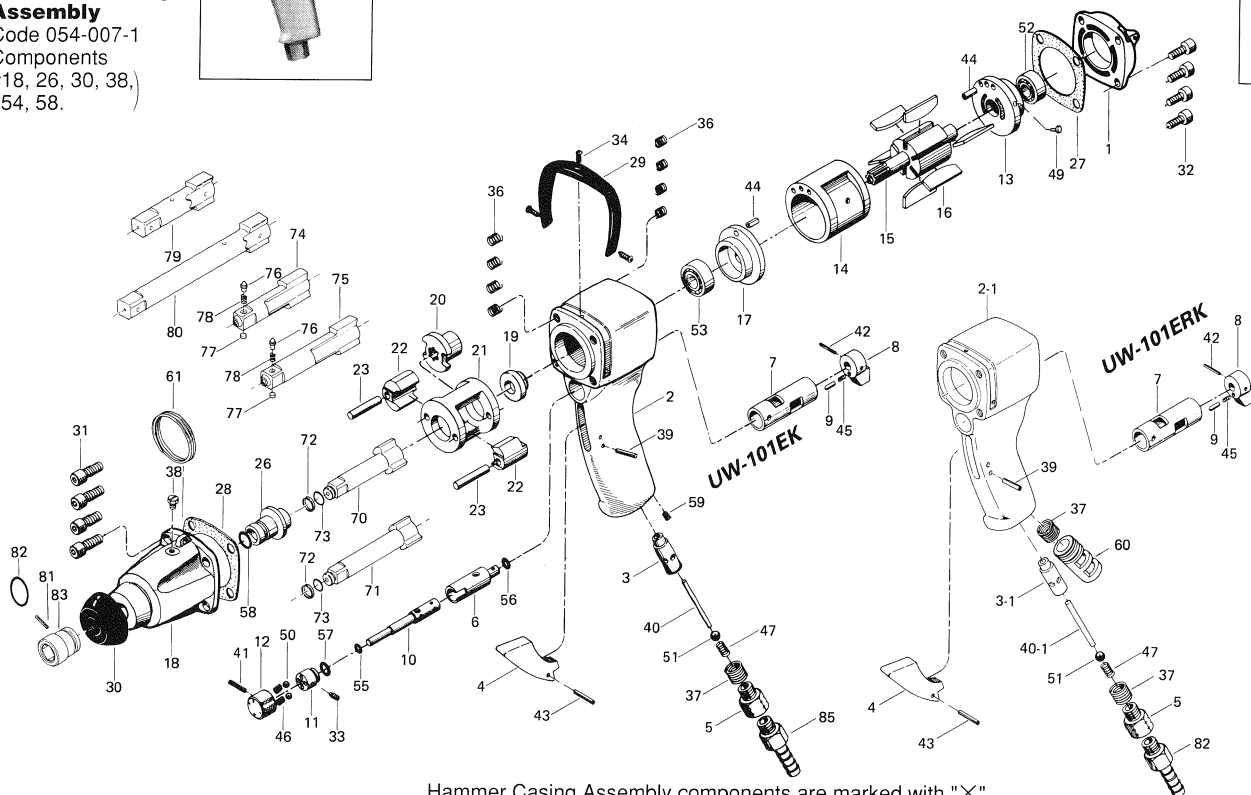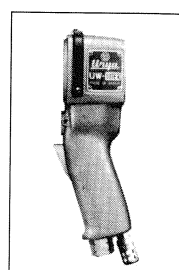

Hammer Casing Assembly components are marked with "X".
Handle Assembly components for UW-101EK are marked with "O".
Handle Assembly components for UW-101ERK are marked with "△".
Anvil marked with "*" are at the User's option.

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
COMMON PARTS				#29	054-840-1	○△ Handle Protector	1	#58	993-034-0	Felt Ring (16×21×2)	1
#1	054-012-1	Head Cover	1	#30	054-841-1	× Hammer Casing Protector	1	#59	966-100-0	○ Allen Head Plug (1/8)	1
#2	054-025-8	○ Handle	1	#31	945-116-0	Allen Head Bolt (M5×16)	4	#61	004-790-2	Suspension Ring	1
#3	054-102-1	○ Valve Bushing	1	#32	945-114-0	Allen Head Bolt (M5×4)	4	#70	891-025-1	* Anvil (WR)	1
#4	085-107-1	○△ Throttle Trigger	1	#33	952-212-0	Allen Head Dog Point Screw (M5×12)	1	#71	891-027-1	* Extended Anvil (WR)	1
#5	185-091-7	○△ Air Inlet Bushing	1	#34	963-350-0	○△ Tapping Screw (M4×8)	3	#72	891-004-1	Snap Ring	1
#6	054-210-1	Reverse Valve	1	#36	965-012-0	○△ Heli-Sert (M5×2D)	8	#73	990-205-0	O-Ring (JW1516-5)	1
#7	054-211-1	○△ Reverse Valve Bushing	1	#37	965-073-0	○△ Heli-Sert (UNF 5/8×N6)	1	#74	054-319-1	Anvil (P)	1
#8	054-212-1	Reverse Lever	1	#38	945-962-0	× Hexagon Round Head Bolt (M6×6)	1	#75	160-323-5	* Extended Anvil (P)	1
#9	054-220-1	Reverse Lever Notch	1	#39	973-120-0	○△ Roll Pin (3×20)	1	#76	153-800-2	Socket Retainer Pin (Flat)	1
#10	054-240-1	Regulator Valve	1	#40	970-349-0	○ Pin (H)(4×39)	1	#77	971-302-0	Pin (4×2)	1
#11	054-241-1	Regulator Valve Bushing	1	#41	973-016-0	Roll Pin (2×16)	1	#78	976-034-0	Spring (3.6×11)	1
#12	054-242-1	Regulator Dial	1	#42	973-020-0	Roll Pin (2×20)	1	#79	880-004-1	* Anvil (O)	1
#13	054-285-5	Rear plate	1	#43	973-118-0	○△ Roll Pin (3×18)	1	#80	160-323-4	* Extended Anvil (O)	1
#14	054-286-5	Cylinder	1	#44	973-210-0	Roll Pin (4×10)	2	#81	971-991-0	Pin (2.3×24)	1
#15	054-287-1	Rotor	1	#45	976-018-0	Spring (2.8×8.5)	1	#82	990-291-0	O-Ring (JW17)	1
#16	054-288-1	Blade	6	#46	976-066-0	Spring (4.8×9)	1	PARTS FOR UW-101ERK			
#17	054-289-5	Front Plate	1	#47	977-220-0	○△ Cone Spring (9×10×25)	1	#2-1	055-025-0	△ Handle	1
#18	054-028-1	× Hammer Casing	1	#49	980-008-0	Round Head Notch (2.4)	1	#3-1	063-102-1	△ Valve Bushing	1
#19	054-310-1	Anvil Rear Spacer	1	#50	981-004-0	Ball (3/16)	2	#40-1	970-335-0	△ Pin (H)(4×34)	1
#20	054-311-1	Hammer Cam	1	#51	981-210-0	○△ Ball (3/8)	1	#60	031-885-7	Silencer	1
#21	054-312-1	Hammer Cage	1	#52	982-101-0	Ball Bearing (6001)	1	ACCESSORIES			
#22	054-313-6	Hammer	2	#53	982-102-0	Ball Bearing (6002)	1	#82	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#23	054-317-1	Hammer Pin	2	#55	990-004-0	O-Ring (P-6)	1	#83	900-187-0	Hexagon Socket (22×40)	1
#26	054-328-1	× Anvil Bushing	1	#56	990-006-0	O-Ring (P-8)	1	#84	939-105-0	Allen Wrench (4mm)	1
#27	054-853-1	Rear Packing	1	#57	990-009-0	O-Ring (P10A)	1				
#28	054-857-1	Front Packing	1								

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

OKA-036-03-04-21-2007