


UAT50 SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

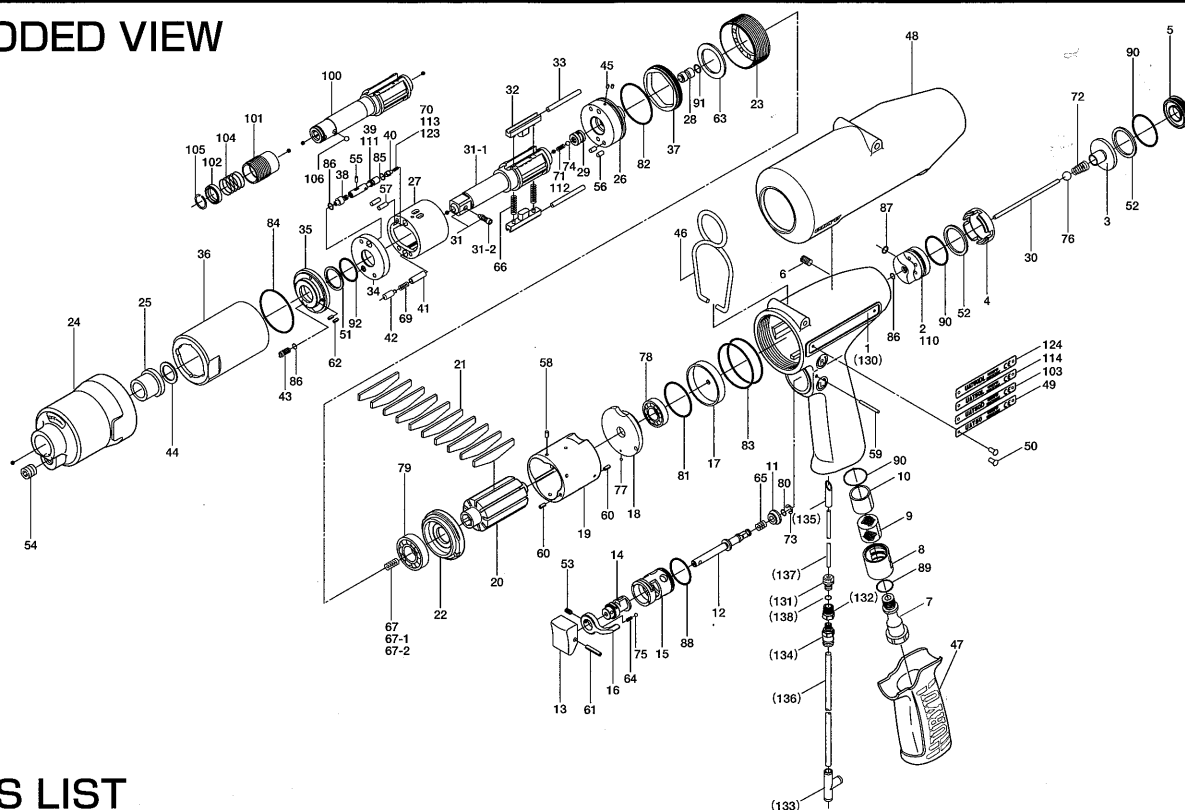

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	145-025-0	Handle	1	#45	150-064-5	Plug	2	#90	990-916-0	O-Ring (SNS-18)	3
# 2	145-253-6	Shut-off Valve Bushing	1	#46	174-790-0	Suspension Ring	1	#91	990-305-0	O-Ring (APR-568-003KS)	1
# 3	145-254-6	Shut-off Valve	1	#47	18C-842-8	Handle Cover	1	#92	992-020-0	SU Ring Q12(NTN)	1
# 4	145-684-6	Cushion Spacer	1	#48	145-840-7	Casing Cover	1	PARTS FOR UAT50D			
# 5	145-019-6	Valve Cover	1	#49	18B-924-2	Name Plate	1	#100	145-350-2	Driver Anvil	1
# 6	150-108-5	Valve Plug	1	#50	930-205-0	Driver Rivet (No.0×2.6)	2	#101	011-351-1	Bit Sleeve (1/8)	1
# 7	147-091-2	Air Inlet Bushing	1	#51	944-212-0	Back-up Ring (12×16×1.5)	1	#102	011-352-1	Bit Spacer	1
# 8	147-780-3	Exhaust Stack	1	#52	944-217-0	Back-up Ring (14×20×1.8)	2	#103	18B-924-5	Name Plate	1
# 9	147-042-2	Silencer	1	#53	952-106-0	Allen Head Dog Point Screw (M4×6)	1	#104	976-327-0	Spring (13.5×11)	1
#10	147-835-3	Filter (K200)	1	#54	966-099-0	Allen Head Plug (NPT1/16)	1	#105	978-117-0	Snap Ring (11.7×1)	1
#11	147-100-3	Valve	1	#55	970-013-0	Pin (H) (1.5×4)	1	#106	981-002-0	Ball (1/8)	1
#12	142-104-6	Valve Rod	1	#56	970-130-0	Pin (H) (2.45×4.5)	2	PARTS FOR UAT50L			
#13	147-107-2	Valve Lever	1	#57	970-131-0	Pin (H) (2.45×9.5)	2	#110	145-253-8	Shut-off Valve Bushing	1
#14	147-210-2	Reverse Valve	1	#58	971-102-0	Pin (2×3.8)	1	#111	18C-970-1	Relief Valve	1
#15	147-211-2	Reverse Valve Bushing	1	#59	971-123-0	Pin (2×23)	1	#112	976-653-0	Spring (2.4×5)	1
#16	480-212-8	Reverse Lever	1	#60	973-008-0	Roll Pin (2×8)	2	#113	976-881-0	Spring (2.7×7.6)	1
#17	145-291-7	Rear Plate Spacer	1	#61	973-014-0	Roll Pin (2×14)	1	#114	18C-924-1	Name Plate	1
#18	18B-285-2	Rear Plate	1	#62	973-040-0	Roll Pin (1.5×5)	2	PARTS FOR UAT50DL			
#19	18B-286-2	Cylinder	1	#63	975-752-0	Adjusting Spacer (15×10×t)	1	#110	145-253-8	Shut-off Valve Bushing	1
#20	18B-287-2	Rotor	1	#64	976-006-0	Spring (3×5)	1	#111	18C-970-1	Relief Valve	1
#21	18B-288-2	Blade	10	#65	976-457-0	Spring (7×12)	2	#112	976-653-0	Spring (2.4×5)	1
#22	18B-289-2	Front Plate	1	#66	976-791-0	Spring (3.3×21)	1	#123	976-676-0	Spring (2.7×7.4)	1
#23	147-036-2	Hammer Casing Connector	1	#67	976-650-0	Spring (3.3×16)	1	#124	18B-924-7	Name Plate	1
#24	145-439-0	Front Casing	1	#67-1	976-857-0	Spring (3.3×17)	1	PARTS FOR TM			
#25	190-328-6	Anvil Bushing	1	#67-2	976-662-0	Spring (3.3×18)	1	#130	852-501-1	Handle	1
#26	18B-901-2	Rear Liner Plate	1	#69	976-841-0	Spring (3.0×11.4)	1	#131	851-967-1	Plug	1
#27	18B-902-2	Liner	1	#70	976-852-0	Spring (2.8×7.6)	1	#132	851-955-1	Connecting Screw	1
#28	145-546-6	Piston	1	#71	976-645-0	Spring (2.4×5)	1	#133	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#29	145-929-6	Check Valve Cover	1	#72	977-043-0	Cone Spring (4.1×4.7×9)	1	#134	933-281-0	One-Touch Connector (KJH04-M5)	1
#30	145-130-0	Operating Rod	1	#73	979-405-0	Outer Snap Ring (E2.5)	1	#135	935-240-0	Nylon Tube (18NY)	1
#31	891-554-1	Anvil Assembly	1	#74	981-001-0	Ball (3/32)	1	#136	935-350-0	Polyurethane Hose (F1504)	1
#31-1	145-319-0	Anvil	1	#75	981-002-0	Ball (1/8)	1	#137	935-358-0	Polyurethane Hose (TU-0212)	1
#31-2	891-300-1	Socket Pin Assembly	1	#76	981-003-0	Ball (5/32)	1	#138	990-320-0	O-Ring (APR568-003)	1
#32	145-440-0	Driving Blade	2	#77	981-045-0	Ball (1.5)	1	ACCESSORIES			
#33	145-974-0	Roller (2.5×21)	2	#78	982-014-0	Ball Bearing (607)	1	#140	939-091-0	Allen Wrench (1.5)	1
#34	18C-973-8	Liner Casing Spacer	1	#79	982-902-0	Ball Bearing (6901)	1	#141	939-105-0	Allen Wrench (4)	1
#35	145-904-6	Front Liner Plate	1	#80	990-306-0	O-Ring (ARP568-004)	1	#142	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#36	145-905-0	Liner Casing	1	#81	990-327-0	O-Ring (JW1530-18)	1	#143	916-810-0	(W) Bit for Driver type	1
#37	145-906-6	Liner Casing Cover	1	#82	990-329-0	O-Ring (JW-1530-19)	1	#144	909-449-0	Speed Controller for TM-type	1
#38	145-907-6	Relief Valve Spindle	1	#83	990-337-0	O-Ring (JW1530-27)	2				
#39	144-970-0	Relief Valve	1	#84	990-605-0	O-Ring (25×1.45)	1				
#40	144-270-0	Pressure Valve	1	#85	990-621-0	O-Ring (3.8×1.8×1.0)	1				
#41	080-274-6	Pressure Valve Spring Collar	1	#86	990-900-0	O-Ring (SNS-2)	3				
#42	18B-276-2	Pressure Valve Body	1	#87	990-901-0	O-Ring (SNS-3)	1				
#43	194-742-0	Oil Plug	1	#88	990-912-0	O-Ring (SNS-14)	1				
#44	145-327-6	Anvil Front Spacer	1	#89	990-914-0	O-Ring (SNS-16)	1				

When ordering spare parts, please specify tool type, code number and part name.

Printed Japan



URYU SEISAKU, LTD. Osaka Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-533-11-08-05-1001