


UAT70S SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

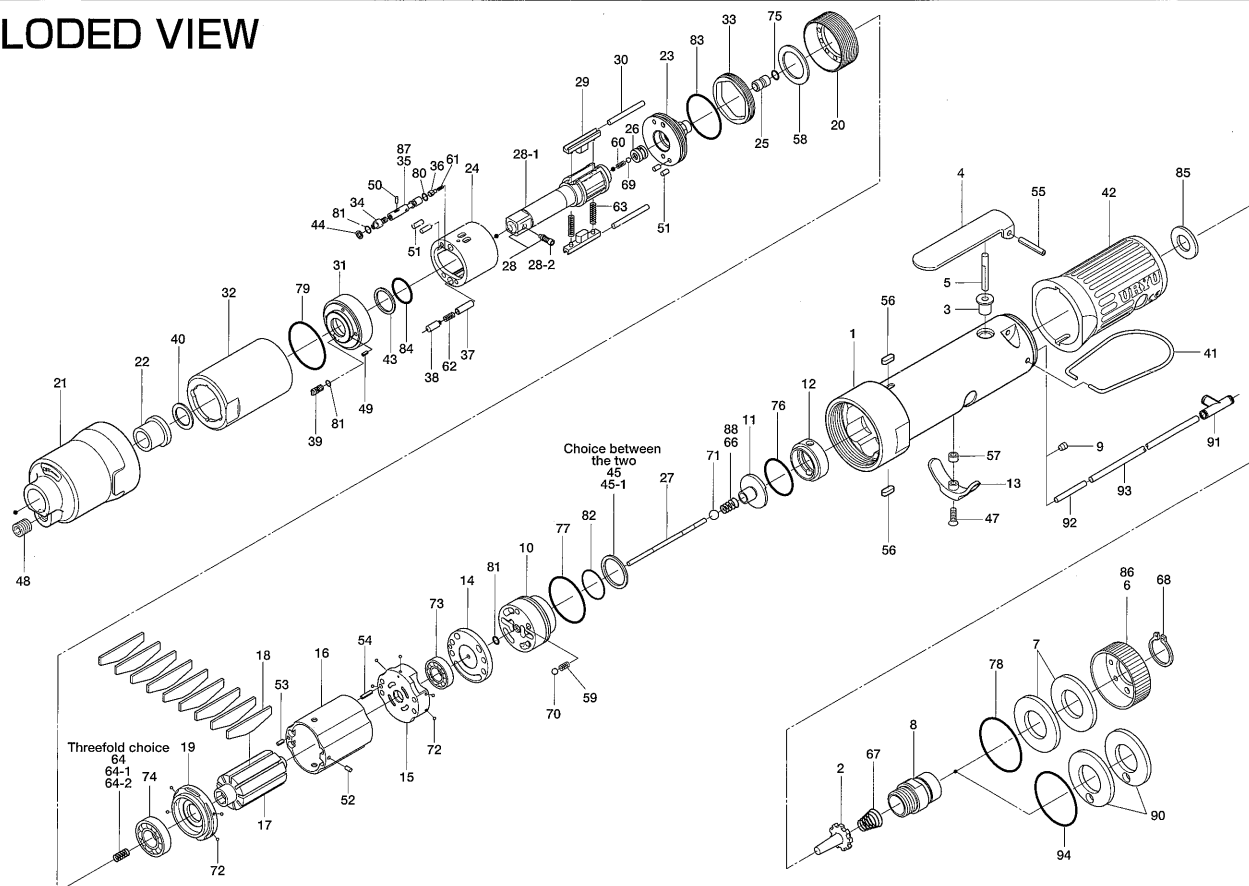

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	18E-025-9	Casing	1	#35	18E-970-3	Relief Valve	1	#70	981-002-0	Ball (1/8)	1
# 2	259-100-0	Valve	1	#36	144-270-0	Pressure Valve	1	#71	981-003-0	Ball (5/32)	1
# 3	161-103-3	Valve Rod Bushing	1	#37	18F-274-2	Pressure Valve Spring Collar	1	#72	981-045-0	Ball (1.5)	9
# 4	18D-107-8	Valve Lever	1	#38	080-276-6	Pressure Valve Body	1	#73	982-014-0	Ball Bearing (607)	1
# 5	128-104-8	Valve Rod	1	#39	194-742-0	Oil Plug	1	#74	982-902-0	Ball Bearing (6901)	1
# 6	128-782-8	Exhaust Cover	1	#40	178-327-9	Anvil Front Spacer	1	#75	990-305-0	O-Ring (APR568-003KS)	1
# 7	128-835-8	Filter (K200)	2	#41	191-790-1	Suspension Ring	1	#76	990-329-0	O-Ring (JW1530-19)	1
# 8	128-091-8	Air Inlet Bushing	1	#42	129-842-6	Casing Cover	1	#77	990-331-0	O-Ring (JW1530-21)	1
# 9	147-064-6	Filler	1	#43	944-013-0	Back-up Ring (P-12)	1	#78	990-603-0	O-Ring (28.5×1.3)	1
#10	129-253-2	Shut-off Valve Bushing	1	#44	944-203-0	Back-up Ring (3.1×5×1)	1	#79	990-334-0	O-Ring (JW1530-24)	1
#11	145-254-6	Shut-off Valve	1	#45	944-216-0	Back-up Ring (14×20×1.85)	1	#80	990-621-0	O-Ring (3.8×1.8×1.0)	1
#12	129-684-6	Cushion Spacer	1	#45-1	944-218-0	Back-up Ring (14×20×1.9)	1	#81	990-970-0	O-Ring (SNS-2)	3
#13	161-212-3	Reverse Lever	1	#47	948-426-0	Allen Head Screw (M3×12)	1	#82	990-914-0	O-Ring (SNS-16)	1
#14	128-291-8	Rear Plate Spacer	1	#48	966-099-0	Allen Head Plug (NPT1/16)	1	#83	990-923-0	O-Ring (SNS-26)	1
#15	129-285-2	Rear Plate	1	#49	969-449-0	Pin (G)(3×6)	1	#84	992-020-0	SU-Ring (Q12)	1
#16	129-286-6	Cylinder	1	#50	970-013-0	Pin (H)(1.5×4)	1	#85	996-424-0	Urethane Packing (16×9×2)	1
#17	129-287-6	Rotor	1	#51	970-204-0	Pin (H)(3×6)	4	PARTS FOR UAT70SL			
#18	129-288-6	Blade (PC)	9	#52	971-102-0	Pin (2×3.8)	1	#86	129-782-0	Exhaust Deflector	1
#19	128-289-8	Front Plate	1	#53	973-008-0	Roll Pin (2×8)	1	#87	976-710-0	Spring (2.8×6.8)	1
#20	147-036-6	Hammer Casing Connector	1	#54	973-018-0	Roll Pin (2×18)	1	#88	977-046-0	Cone Spring (4.0×4.6×9)	1
#21	147-439-6	Front Casing	1	#55	973-122-0	Roll Pin (3×22)	1	PARTS FOR (TM) TYPE			
#22	190-328-6	Anvil Bushing	1	#56	974-008-0	Key (3×8)	2	Remove 147-064-6 Plug			
#23	18E-901-3	Rear Liner Plate	1	#57	975-004-0	Spacer (5.5×3.1×2.7)	1	#90	851-053-1	Filter (K200)	1
#24	18E-902-3	Liner	1	#58	975-752-0	Adjusting Spacer (15×10×1)	1	#91	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#25	145-546-6	Piston	1	#59	976-006-0	Spring (3×5)	1	#92	935-240-0	Nylon Tube (18NY)	1
#26	145-929-6	Check Valve Cover	1	#60	976-626-0	Spring (2.4×6)	1	#93	935-350-0	Polyurethane Hose (F-1504)	1
#27	129-130-6	Operating Rod (2.1×70.7)	1	#61	976-885-0	Spring (2.9×7)	1	#94	990-333-0	O Ring (JW1530-23)	1
#28	891-550-1	Anvil Assembly (P)	1	#62	976-877-0	Spring (2.8×7.4)	1	ACCESSORIES			
#28-1	147-319-6	Anvil	1	#63	976-788-0	Spring (3.5×25) WPC	2	#100	939-091-0	Allen Wrench (1.5)	1
#28-2	891-300-1	Socket Pin Assembly	1	#64	976-650-0	Spring (3.3×16) Standard	1	#101	939-105-0	Allen Wrench (4)	1
#29	147-440-6	Driving Blade	2	#64-1	976-857-0	Spring (3.3×17) Strong	1	#102	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#30	147-974-6	Roller (2.5×28)	2	#64-2	976-688-0	Spring (3.3×18) Weak	1	#103	909-449-0	Speed Controller	1
#31	18E-904-3	Front Liner Plate	1	#66	977-045-0	Cone Spring (4×4.6×9)	1				
#32	147-905-6	Liner Casing	1	#67	977-227-0	Cone Spring (9×12×25)	1				
#33	147-906-6	Liner Casing Cover	1	#68	979-358-0	Inner Snap Ring (ISTW-17)	1				
#34	174-907-2	Relief Valve Spindle	1	#69	981-001-0	Ball (3/32)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

2013.05

OKA-554-13-03-26-0501