


UL30 SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

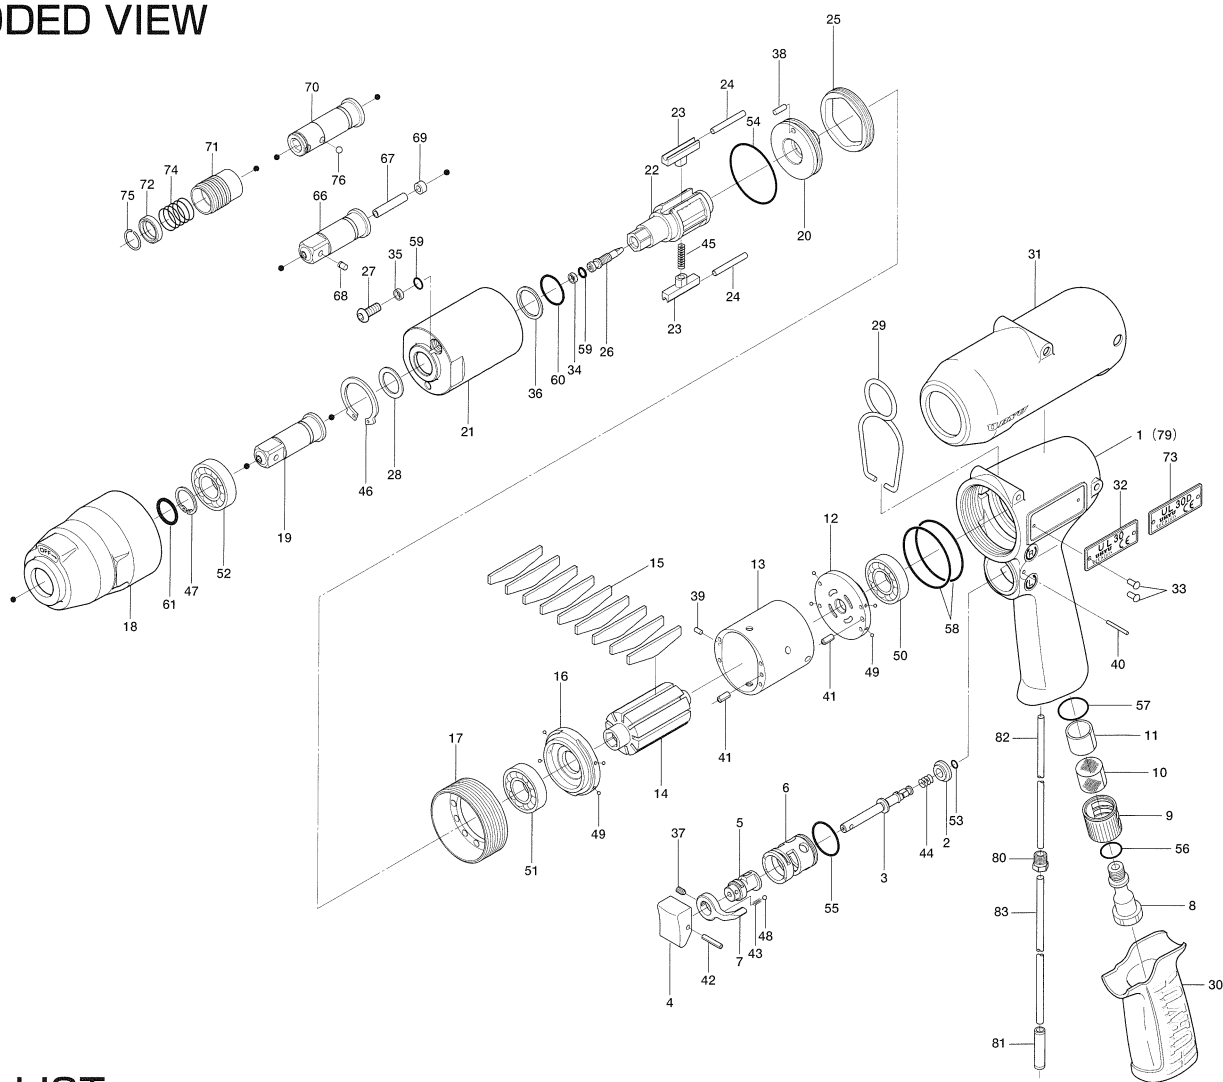

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	143-025-0	Handle	1	#31	143-840-0	Casing Protector	1	#60	992-019-0	SU-Ring(Q10)(NTN)	1
# 2	147-100-2	Valve	1	#32	142-924-8	Name Plate	1	#61	993-100-0	Rubber Sponge Ring (12×16.5×2)	1
# 3	147-104-2	Valve Rod	1	#33	930-205-0	Driver Rivet(No.0×2.6)	2	#66	891-565-1	Socket Spindle Assembly(P)	1
# 4	147-107-2	Valve Lever	1	#34	944-002-0	Supporting Ring(2.6×4.5×1)	1	#67	891-559-1	Pipe	1
# 5	147-210-2	Reverse Valve	1	#35	944-003-0	Supporting Ring(3×5×1)	1	#68	891-560-1	Socket Snap Pin	1
# 6	147-211-2	Reverse Valve Bushing	1	#36	944-211-0	Supporting Ring(10×14×1.5)	1	#69	975-001-0	Spacer(6×2.8×3)	1
# 7	480-212-8	Reverse Lever	1	#37	952-106-0	Allen Head Dog Point Screw(M4×6)	1	PARTS FOR UL30D			
# 8	142-091-8	Air Inlet Bushing	1	#38	970-145-0	Pin(H)(2.5×3.5)	1	#70	143-350-2	Driver Anvil	1
# 9	147-780-3	Exhaust Stack	1	#39	971-102-0	Pin(2×3.8)	1	#71	011-351-1	Bit Sleeve(1/8)	1
#10	147-042-2	Silencer	1	#40	971-123-0	Pin(2×23)	1	#72	011-352-1	Bit Spacer	1
#11	145-835-8	Filter(K100)	1	#41	973-008-0	Roll Pin(2×8)	2	#73	142-924-9	Name Plate	1
#12	143-285-0	Rear Plate	1	#42	973-014-0	Roll Pin(2×14)	1	#74	976-327-0	Spring(13.5×11)(0.9)	1
#13	143-286-0	Cylinder	1	#43	976-006-0	Spring(3×5)(0.4)	1	#75	978-117-0	Snap Ring(11.7×1.0)	1
#14	143-287-0	Rotor	1	#44	976-457-0	Spring(7×12)(0.9)	1	#76	981-002-0	Ball(1/8)	1
#15	143-288-0	Blade(PC)	9	#45	976-803-0	Spring(2.8×18)(0.4)WPC	1	Parts for (TM)-TYPE			
#16	144-289-0	Front Plate	1	#46	979-324-0	Inner Snap Ring(IRTW-24)	1	#79	851-073-1	Handle	1
#17	143-036-0	Hammer Casing Connector	1	#47	979-353-0	Inner Snap Ring(ISTW-12)	1	#80	850-610-1	Connecting Screw	1
#18	143-439-0	Front Casing	1	#48	981-002-0	Ball(1/8)	1	#81	933-250-0	One-Touch Connector (SLS-04)	1
#19	143-454-0	Socket Spindle	1	#49	981-045-0	Ball(1.5)	1	#82	935-240-0	Nylon Tube(18NY)	1
#20	143-901-0	Liner Rear Plate	1	#50	982-014-0	Ball Bearing(607)	1	#83	935-350-0	Polyurethane Hose(F1504)	1
#21	142-902-8	Liner	1	#51	982-901-0	Ball Bearing(6900)	1	Accessories			
#22	143-319-0	Anvil	1	#52	982-922-0	Ball Bearing(6901ZZ)	1	#84	143-242-2	Adjuster	1
#23	143-440-0	Driving Blade	2	#53	990-306-0	O-Ring(ARP-568-004)(H)	1	#85	916-810-0	(+)Double Bit No.2×75(6.35H)	1
#24	143-974-0	Roller(2.5×21)	2	#54	990-329-0	O-Ring(JW1530-19)	1	#86	940-114-0	Air Hose Nipple(NPT1/4×3/8)	1
#25	143-906-0	Liner Casing Setter	1	#55	990-912-0	O-Ring(SNS-14)	1				
#26	143-970-3	Relief Valve	1	#56	990-914-0	O-Ring(SNS-16)	1				
#27	194-742-3	Oil Plug	1	#57	990-916-0	O-Ring(SNS-18)	1				
#28	143-327-0	Anvil Front Spacer	1	#58	990-925-0	O-Ring(SNS-32)	2				
#29	174-790-0	Suspension Ring	1	#59	990-970-0	O-Ring(SNS-2)NOK	2				
#30	147-842-2	Handle Cover	1								

When ordering spare parts, please Specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-504-05-04-01-2001