


US-LT20 SERIES SCREW DRIVERS

EXPLODED VIEW

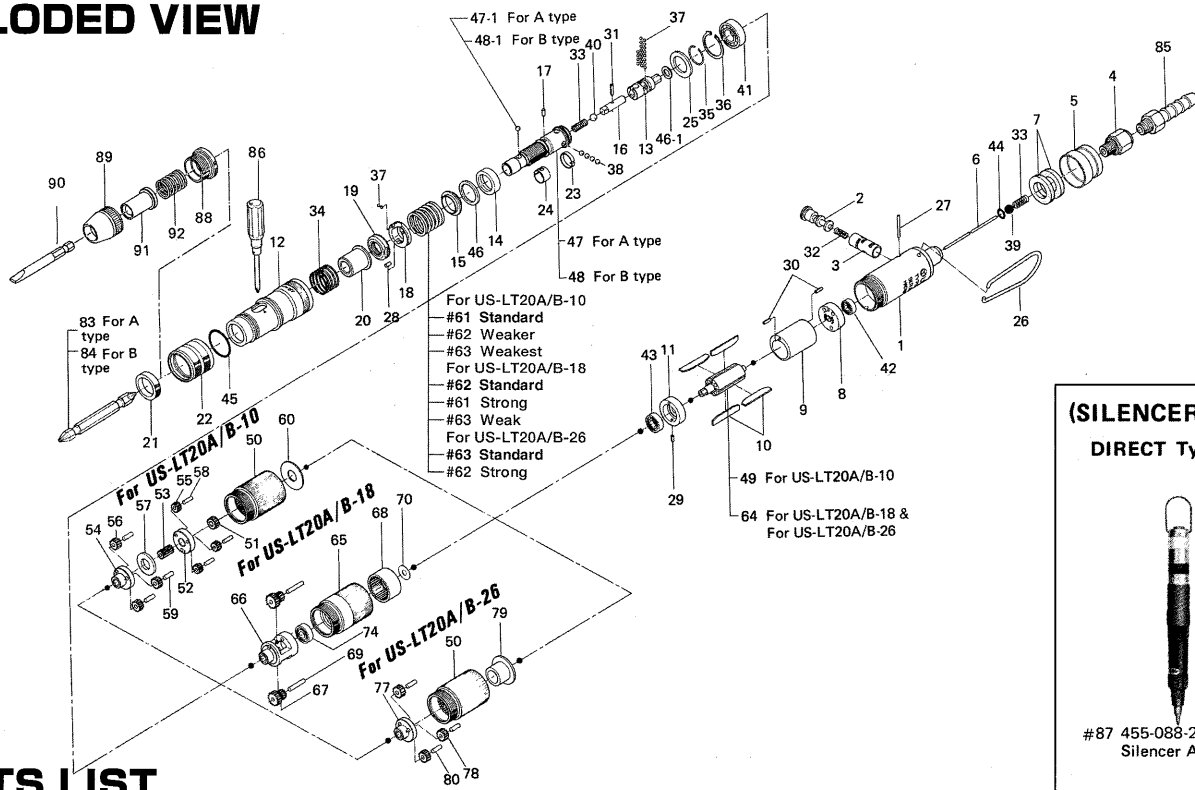

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
Common Parts for US-LT20 series				#39	981-206-0	Ball (1/4)	1	#64	470-287-6	Rotor	1
# 1	470-025-8	Casing	1	#40	981-004-0	Ball (3/16)	1	#65	470-029-6	Gear Casing	1
# 2	893-055-1	Reverse Valve (Lock)	1	#41	982-036-0	Ball Bearing (699)	1	#66	470-480-6	Gear Cage	1
# 3	470-211-8	Reverse Valve Bushing	1	#42	987-038-0	Miniature Ball Bearing (R-1140ZZ)	1	#67	470-470-6	Planet Gear	2
# 4	405-091-1	Air Inlet Bushing	1	#43	987-041-0	Miniature Ball Bearing (R-1350ZZ)	1	#68	470-465-6	Internal Gear	1
# 5	455-782-1	Exhaust Deflector	1	#44	990-903-0	O-Ring (SNS-5)	1	#69	972-037-0	Needle Roller (2.5×15)	2
# 6	470-104-8	Valve Rod	1	#45	990-918-0	O-Ring (SNS-20)	1	#70	975-009-0	Spacer (9×5.2×0.3)	1
# 7	470-835-8	Filter	2	#46	944-014-0	Back-up Ring (P-14)	1	#74	987-013-0	Miniature Ball Bearing (R-1350)	1
# 8	470-285-8	Rear Plate	1	#46-1	470-344-8	Cam Spacer	1	Option			
# 9	470-286-8	Cylinder	1	Parts for US-LT20A series				#61	976-432-0	Spring (18×20) (1.8)	1
#10	470-288-1	Blade (PC)	4	#47	470-319-3	Anvil	1	#63	976-430-0	Spring (17.5×20) (1.4)	1
#11	470-289-8	Front Plate	1	#47-1	981-155-0	Ball (3.5)	1	Parts for US-LT20A-26 and US-LT20B-26			
#12	470-369-9	Clutch Casing	1	Parts for US-LT20B series				#50	470-029-8	Gear Casing	1
#13	470-346-8	Cam	1	#48	470-319-4	Anvil	1	#63	976-430-0	Spring (17.5×20) (1.4)	1
#14	470-375-9	Cam Ring	1	#48-1	981-150-0	Ball (3)	1	#64	470-287-6	Rotor	1
#15	470-164-9	Spring Setter	1	Parts for US-LT20A-10 and US-LT20B-10				#77	470-480-4	Gear Cage	1
#16	470-318-8	Pilot Pin	1	#49	470-287-8	Rotor	1	#78	471-470-3	Planet Gear	3
#17	470-764-8	Notch Pin	1	#50	470-029-8	Gear Casing	1	#79	470-483-4	Gear Case Spacer	1
#18	470-562-8	Retainer	1	#51	470-460-8	Rotor Gear	1	#80	972-033-0	Needle Roller (2.5×8)	3
#19	470-257-8	Regulating Screw	1	#52	470-480-8	First Gear Cage	1	Option			
#20	470-351-7	Bit Sleeve	1	#53	470-445-8	Middle Gear	1	#62	976-431-0	Spring (18×20) (1.4)	1
#21	470-567-7	Bushing	1	#54	470-485-8	Second Gear Cage	1	ACCESSORIES			
#22	470-370-8	Clutch Casing Sleeve	1	#55	470-470-8	First Planet Gear	3	#83	916-710-0	(+)Double Bit (No.2×70)for A-type	1
#23	470-670-8	Band	1	#56	470-471-8	Second Planet Gear	3	#84	916-810-0	(+)Double Bit (No.2×75)for B-type	1
#24	470-356-8	Bit Band	1	#57	471-483-7	Gear Case Spacer	3	#85	940-103-0	Air Hose Nipple	1
#25	975-153-0	Spacer (21×14.5×1)	1	#58	972-008-0	Needle Roller (2×8)	3	#86	939-402-0	Manual Driver No.2 (φ 5)	1
#26	401-790-1	Suspension Ring	1	#59	972-033-0	Needle Roller (2.5×8)	3	For Direct Type			
#27	970-017-0	Pin (H) (1.5×18)	1	#60	975-151-0	Spacer (22×8×1.5)	1	#87	455-088-2	Silencer Assembly	1
#28	970-091-0	Pin (H) (2×4.5)	1	#61	976-432-0	Spring (18×20) (1.8)	1	For Slotted Head Bit and Finder			
#29	973-000-0	Roll Pin (1.5×4)	2	Option				#88	470-082-8	Bit Casing Set Screw	1
#30	973-001-0	Roll Pin (1.5×6)	2	#62	976-431-0	Spring (18×20) (1.6)	1	#89	471-057-7	Bit Casing	1
#31	973-003-0	Roll Pin (1.5×8)	1	#63	976-430-0	Spring (17.5×20) (1.4)	1	#90	916-030-0	(-)Bit (5×56) (6.35H)	1
#32	976-048-0	Spring (4×10)	1	Parts for US-LT20A-18 and US-LT20B-18				#91	917-350-0	Finder (7.3×56×24)	1
#33	976-058-0	Spring (4.5×11)	2	#62	976-431-0	Spring (18×20) (1.6)	1	#92	976-330-0	Spring (13.8×18×0.8)	1
#34	976-427-0	Spring (17.5×10)	1								
#35	978-150-0	Snap Ring (15×1)	1								
#36	979-320-0	Inner Snap Ring (IRTW-20)	1								
#37	981-000-0	Ball (1/16)	22								
#38	981-002-0	Ball (1/8)	4								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka Japan

For further information, please contact at any time your nearest URYU distributor.

2013.4

OKA-247-11-03-31-2015