


# US-LT40(B)-08(15)C SCREW DRIVER

## EXPLODED VIEW

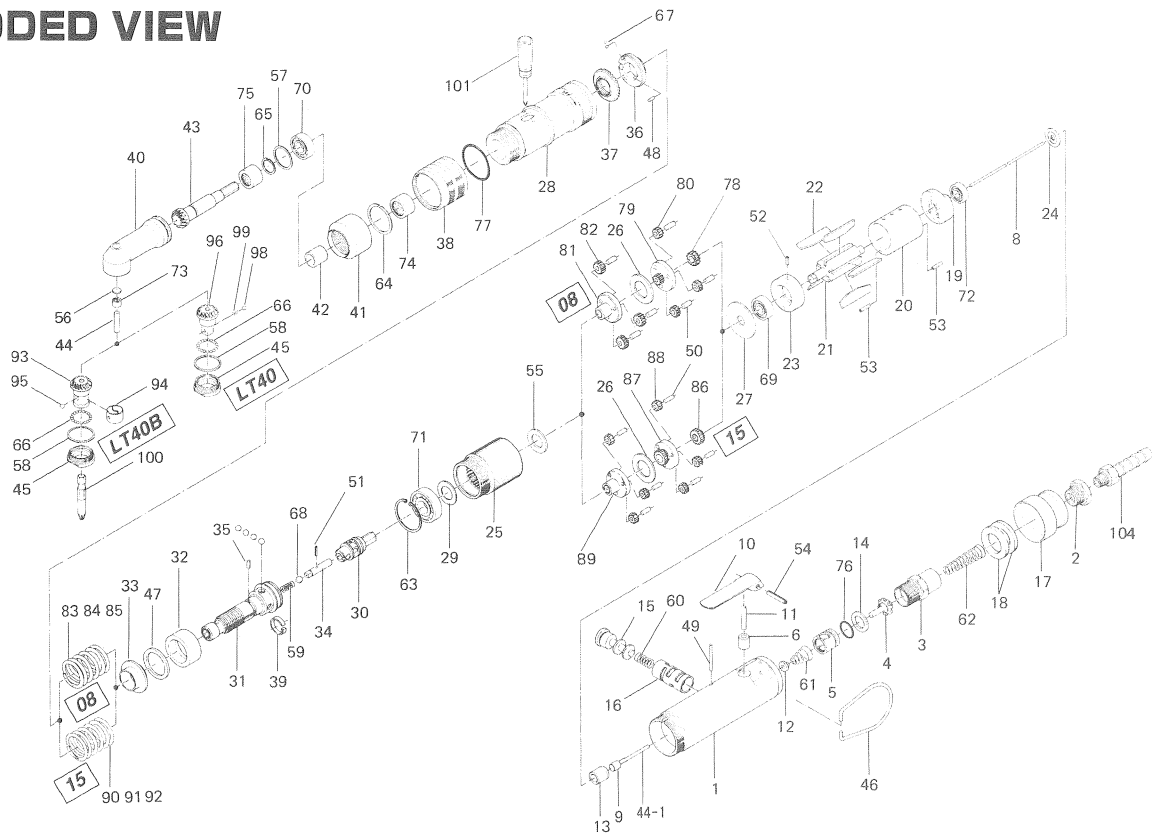

## PARTS LIST

| Index No. | Code No.  | Parts Name            | Quantity | Index No. | Code No.  | Parts Name                       | Quantity | Index No.                       | Code No.  | Parts Name                        | Quantity |
|-----------|-----------|-----------------------|----------|-----------|-----------|----------------------------------|----------|---------------------------------|-----------|-----------------------------------|----------|
| # 1       | 461-025-6 | Casing                | 1        | # 43      | 469-420-5 | Driving Gear                     | 1        | <b>Parts for US-LT40(B)-08C</b> |           |                                   |          |
| # 2       | 480-091-8 | Air Inlet Bushing     | 1        | # 44      | 469-431-6 | Driven Gear Spindle              | 1        | # 78                            | 472-460-7 | Rotor Gear                        | 1        |
| # 3       | 461-097-6 | Air Inlet Connector   | 1        | # 44-1    | 970-108-0 | Pin (H) (2×26.8A)                | 1        | # 79                            | 472-480-7 | First Gear Cage                   | 1        |
| # 4       | 259-100-0 | Valve                 | 1        | # 45      | 469-488-5 | Angle Head Casing Cover          | 1        | # 80                            | 472-470-7 | First Planet Gear                 | 3        |
| # 5       | 461-102-6 | Valve Bushing         | 1        | # 46      | 010-790-1 | Suspension Ring                  | 1        | # 81                            | 472-485-7 | Second Gear Cage                  | 1        |
| # 6       | 553-103-1 | Valve Rod Bushing     | 1        | # 47      | 944-019-0 | Back-up Ring (P19)               | 1        | # 82                            | 472-471-7 | Second Planet Gear                | 3        |
| # 8       | 463-104-7 | Valve Rod             | 1        | # 48      | 970-092-0 | Pin (H) (2×5.5)                  | 1        | # 83                            | 976-515-0 | Spring (22.7×28) (2.6) (STANDARD) | 1        |
| # 9       | 444-106-8 | Valve Rod Cap         | 1        | # 49      | 970-105-0 | Pin (H) (2×24)                   | 1        | # 84                            | 976-516-0 | Spring (22.1×28) (2.3) (WEAK)     | 1        |
| # 10      | 700-107-1 | Valve Lever           | 1        | # 50      | 972-089-0 | Roller Pin (3×8)                 | 6        | # 85                            | 976-517-0 | Spring (21.5×31) (2.0) (WEAKER)   | 1        |
| # 11      | 461-114-6 | Valve Pin             | 1        | # 51      | 969-470-0 | Pin (2×8)                        | 1        | <b>Parts for US-LT40(B)-15C</b> |           |                                   |          |
| # 12      | 259-254-0 | Shut-off Valve        | 1        | # 52      | 973-006-0 | Roll Pin (2×6)                   | 1        | # 86                            | 472-460-5 | Rotor Gear                        | 1        |
| # 13      | 461-567-6 | Bushing               | 1        | # 53      | 973-010-0 | Roll Pin (2×10)                  | 2        | # 87                            | 472-480-5 | First Gear Cage                   | 1        |
| # 14      | 996-424-0 | Packing (16×9×2)      | 1        | # 54      | 973-118-0 | Roll Pin (3×18)                  | 1        | # 88                            | 472-470-5 | First Planet Gear                 | 6        |
| # 15      | 893-057-1 | Reverse Valve(Lock)   | 1        | # 55      | 975-106-0 | Spacer (18.5×11×1)               | 1        | # 89                            | 472-485-5 | Second Gear Cage                  | 1        |
| # 16      | 472-211-7 | Reverse Valve Bushing | 1        | # 56      | 975-590-0 | Round Plate (6.3×1)              | 1        | # 90                            | 976-516-0 | Spring (22.1×28) (2.3) (STANDARD) | 1        |
| # 17      | 472-782-7 | Exhaust Deflector     | 1        | # 57      | 975-768-0 | Adjusting Spacer (19×16.2×T)     | 1        | # 91                            | 976-515-0 | Spring (22.7×28) (2.6) (STRONG)   | 1        |
| # 18      | 472-835-7 | Filter                | 2        | # 58      | 975-771-0 | Adjusting Spacer (20×18×T)       | 1        | # 92                            | 976-517-0 | Spring (21.5×31) (2.0) (WEAK)     | 1        |
| # 19      | 472-285-7 | Rear Plate            | 1        | # 59      | 976-058-0 | Spring (4.5×11) (0.4)            | 1        | <b>Parts for US-LT40B</b>       |           |                                   |          |
| # 20      | 472-286-7 | Cylinder              | 1        | # 60      | 976-147-0 | Spring (7×12) (0.6)              | 1        | # 93                            | 469-430-5 | Driven Gear                       | 1        |
| # 21      | 472-287-7 | Rotor                 | 1        | # 61      | 977-071-0 | Cone Spring (5.5×11.5×15)        | 1        | # 94                            | 430-356-1 | Bit Band                          | 1        |
| # 22      | 472-288-0 | Blade (PC)            | 5        | # 62      | 977-155-0 | Cone Spring (7×10×35)            | 1        | # 95                            | 981-002-0 | Ball (1/8)                        | 1        |
| # 23      | 472-289-7 | Front Plate           | 1        | # 63      | 979-326-0 | Inner Snap Ring (IRTW-26)        | 1        | <b>Parts for US-LT40</b>        |           |                                   |          |
| # 24      | 461-291-6 | Rear Plate Spacer     | 1        | # 64      | 979-190-0 | Outer Snap Ring (22)             | 1        | # 96                            | 469-430-8 | Driven Gear                       | 1        |
| # 25      | 472-029-7 | Gear Casing           | 1        | # 65      | 979-351-0 | Inner Snap Ring (ISTW-10)        | 1        | # 98                            | 981-002-0 | Ball (1/8)                        | 1        |
| # 26      | 496-483-1 | Gear Casing Spacer    | 1        | # 66      | 981-000-0 | Ball (1/16)                      | 24       | # 99                            | 976-346-0 | Spring (2.9×6.35)                 | 1        |
| # 27      | 472-807-7 | Spacer                | 1        | # 67      | 981-001-0 | Ball (3/32)                      | 2        | <b>Accessories</b>              |           |                                   |          |
| # 28      | 461-369-8 | Clutch Casing         | 1        | # 68      | 981-004-0 | Ball (3/16)                      | 5        | # 100                           | 916-510-0 | (+) Double Bit (No.2×23) (6.35)   | 1        |
| # 29      | 461-344-6 | Cam Retainer          | 1        | # 69      | 982-063-0 | Ball Bearing (606ZZ)             | 1        | # 101                           | 939-402-0 | Manual Driver (No.2)              | 1        |
| # 30      | 472-346-5 | Cam                   | 1        | # 70      | 982-035-0 | Ball Bearing (698)               | 1        | # 104                           | 940-113-0 | Air Hose Nipple (NPT 1/4×1/4)     | 1        |
| # 31      | 472-319-7 | Anvil                 | 1        | # 71      | 982-100-0 | Ball Bearing (6000)              | 1        |                                 |           |                                   |          |
| # 32      | 472-375-7 | Cam Ring              | 1        | # 72      | 987-039-0 | Miniature Ball Bearing (R1560ZZ) | 1        |                                 |           |                                   |          |
| # 33      | 472-379-8 | Retainer              | 1        |           |           |                                  |          |                                 |           |                                   |          |
| # 34      | 471-318-5 | Pilot Pin             | 1        | # 73      | 988-090-0 | Needle Roller Bearing (B-24)     | 1        |                                 |           |                                   |          |
| # 35      | 471-764-7 | Notch Pin             | 1        | # 74      | 988-394-0 | Needle Roller Bearing (FJ-1210)  | 1        |                                 |           |                                   |          |
| # 36      | 472-562-8 | Spring Holder         | 1        | # 75      | 988-689-0 | Needle Roller Bearing (RLM-1010) | 1        |                                 |           |                                   |          |
| # 37      | 472-257-8 | Regulating Screw      | 1        |           |           |                                  |          |                                 |           |                                   |          |
| # 38      | 472-370-7 | Clutch Casing Sleeve  | 1        | # 76      | 990-911-0 | O-Ring (SNS-12)                  | 1        |                                 |           |                                   |          |
| # 39      | 471-670-7 | Band                  | 1        | # 77      | 990-923-0 | O-Ring (SNS-26)                  | 1        |                                 |           |                                   |          |
| # 40      | 469-441-7 | Angle Casing          | 1        |           |           |                                  |          |                                 |           |                                   |          |
| # 41      | 469-081-6 | Locking Nut           | 1        |           |           |                                  |          |                                 |           |                                   |          |
| # 42      | 469-807-5 | Spacer                | 1        |           |           |                                  |          |                                 |           |                                   |          |

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



**URYU SEISAKU, LTD.** Osaka, Japan

OKA-331-03-06-10-2006