


US-LT40A(B)L SERIES SCREW DRIVERS

EXPLODED VIEW

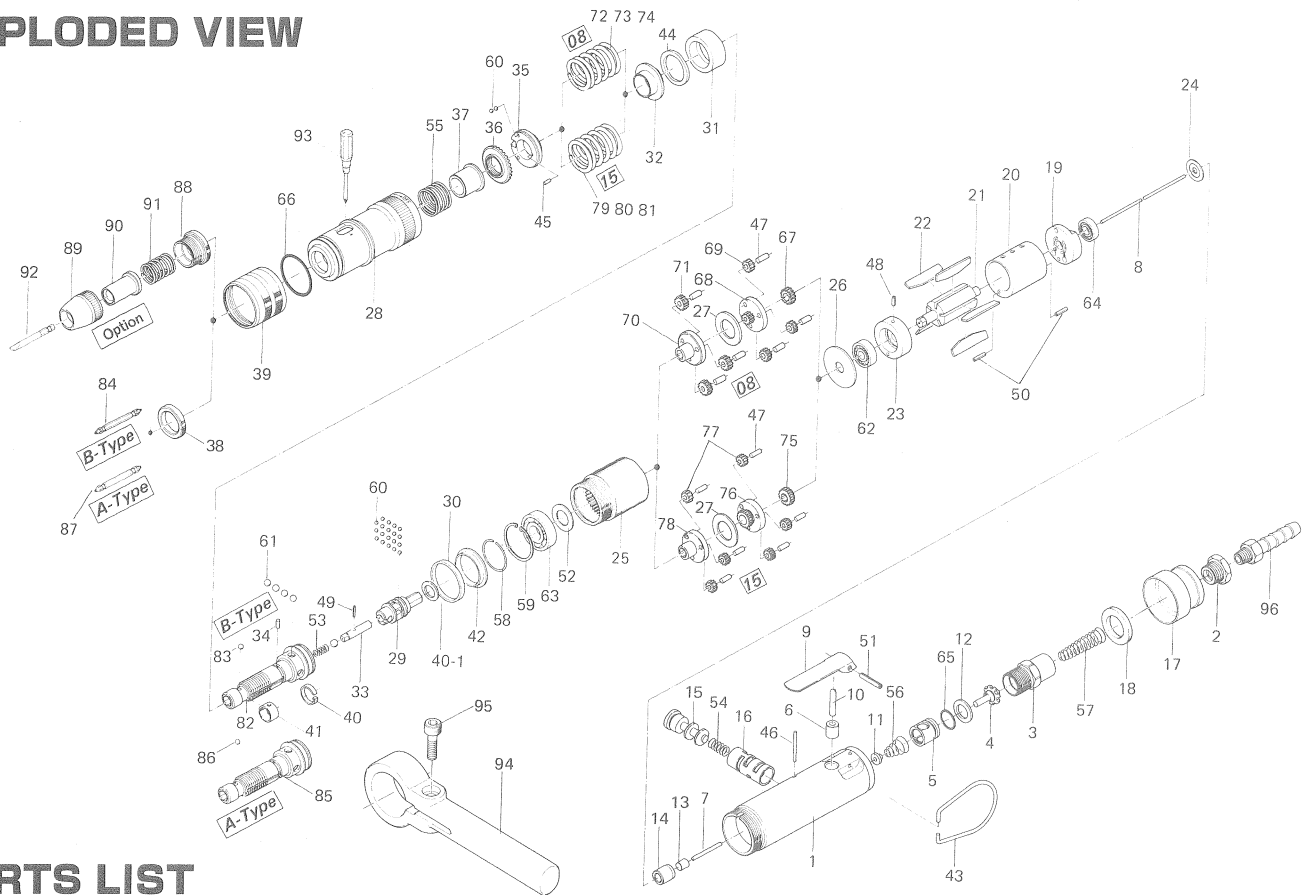

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	461-025-6	Casing	1	#40	471-670-7	Band	1			Weak	1
# 2	480-091-8	Air Inlet Bushing	1	#40-1	461-344-6	Cam Retainer	1	#74	976-517-0	Spring (21.5x31)(2.0)	1
# 3	461-097-6	Air Inlet Connector	1	#41	471-356-7	Bit Band	1			Weaker	1
# 4	259-100-0	Valve	1	#42	463-334-7	Anvil Spacer	1	Parts for US-LT40L-15			
# 5	461-102-6	Valve Bushing	1	#43	010-790-1	Suspension Ring	1	#75	472-460-5	Rotor Gear	1
# 6	553-103-1	Valve Rod Bushing	1	#44	944-019-0	Back-up Ring (P-19)	1	#76	472-480-5	First Gear Cage	1
# 7	970-108-0	Pin (H)(2x26.8A)	1	#45	970-092-0	Pin (2x5.5)	1	#77	472-470-5	First Planet Gear	1
# 8	463-104-7	Valve Rod	1	#46	970-105-0	Pin (2x24)	1	#78	472-485-5	Second Gear Cage	1
# 9	466-107-5	Valve Lever	1	#47	972-089-0	Roller Pin (3x8)	6	#79	976-516-0	Spring (22.1x28) (2.3)	1
#10	461-114-6	Valve Pin	1	#48	973-006-0	Roll Pin (2x6)	1			Standard	1
#11	259-254-0	Shut-Off Valve	1	#49	969-470-0	Pin (E)(2x8)	1	#80	976-515-0	Spring (22.7x28) (2.6)	1
#12	996-424-0	Packing	1	#50	973-010-0	Roll Pin (2x10)	2			Strong	1
#13	444-106-8	Valve Rod Cap	1	#51	973-118-0	Roll Pin (3x18)	1	#81	976-517-0	Spring (21.5x31) (2.0)	1
#14	461-567-6	Bushing	1	#52	975-106-0	Spacer (18.5x11x1)	1			Weak	1
#15	893-057-1	Reverse Valve (Lock)	1	#53	976-058-0	Spring (4.5x11) (0.4)	1	Parts for US-LT40BL			
#16	472-211-7	Reverse Valve Bushing	1	#54	976-147-0	Spring (7x12) (0.6)	1	#82	472-319-7	Anvil	1
#17	472-782-7	Exhaust Deflector	1	#55	476-450-0	Spring (18.5x10) (1.0)	1	#83	981-002-0	Ball (1/8)	1
#18	161-835-3	Filter	1	#56	977-071-0	Cone Spring (5.5x11.5x15)	1	Parts for US-LT40AL			
#19	472-285-7	Rear Plate	1	#57	977-155-0	Cone Spring (7x10x35)	1	#85	472-319-6	Anvil	1
#20	472-286-7	Cylinder	1	#58	978-218-0	Snap Ring (22x1)	1	#86	981-003-0	Ball (5/32)	1
#21	472-287-7	Rotor	1	#59	979-326-0	Inner Snap Ring (IRTW-26)	1	#88	472-082-7	Bit Casing Set Screw	1
#22	472-288-0	Blade (PC)	5	#60	981-001-0	Ball (3/32)	21	Accessories			
#23	472-289-7	Front Plate	1	#61	981-004-0	Ball (3/16)	5	#84	916-810-0	(+) Double Bit (No.2x75)	1
#24	461-291-6	Rear Plate Spacer	1	#62	982-063-0	Ball Bearing (606ZZ)	1			(6.35)	1
#25	472-029-7	Gear Casing	1	#63	982-100-0	Ball Bearing (6000)	1	#87	916-710-0	(+) Double Bit (No.2x70)	1
#26	472-807-7	Spacer	1	#64	987-039-0	Miniature Ball Bearing (R1560ZZ)	1			(5H)	1
#27	496-483-1	Gear Cage Spacer	1			O-Ring (SNS-12)	1	#89	471-057-7	Bit Casing	1
#28	463-369-7	Clutch Casing	1	#65	990-911-0	O-Ring (SNS-26)	1	#90	917-350-0	Finder (7.3x56x24-4E)	1
#29	472-346-5	Cam	1	#66	990-923-0		1	#91	916-330-0	Spring (13.8x18)(0.8)	1
#30	463-397-7	Back-up Spacer	1	Parts for US-LT40L-08				#92	916-030-0	(-)Bit (5x56)	1
#31	472-375-7	Cam Ring	1	#67	472-460-7	Rotor Gear	1	#93	939-402-0	Manual Driver (No.2)	1
#32	472-379-8	Retainer	1	#68	472-480-7	First Gear Cage	1	#94	472-516-7	Dead Handle	1
#33	471-318-5	Pilot Pin	1	#69	472-470-7	First Planet Gear	3	#95	945-222-0	Allen Head Bolt(M6x22)	1
#34	471-764-7	Notch Pin	1	#70	472-485-7	Second Gear Cage	1	#96	940-113-0	Air Hose Nipple (NPT 1/4x1/4)	1
#35	472-562-8	Spring Holder	1	#71	472-471-7	Second Planet Gear	3				
#36	472-257-8	Regulating Screw	1	#72	976-515-0	Spring (22.7x28)(2.6)	1				
#37	472-351-7	Bit Sleeve	1			Standard	1				
#38	472-567-7	Bushing	1	#73	976-516-0	Spring (22.1x28)(2.3)	1				
#39	472-370-7	Clutch Casing Sleeve	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka Japan

OKA-330-03-06-17-2005