


US-LT41P SERIES SCREW DRIVERS

EXPLODED VIEW

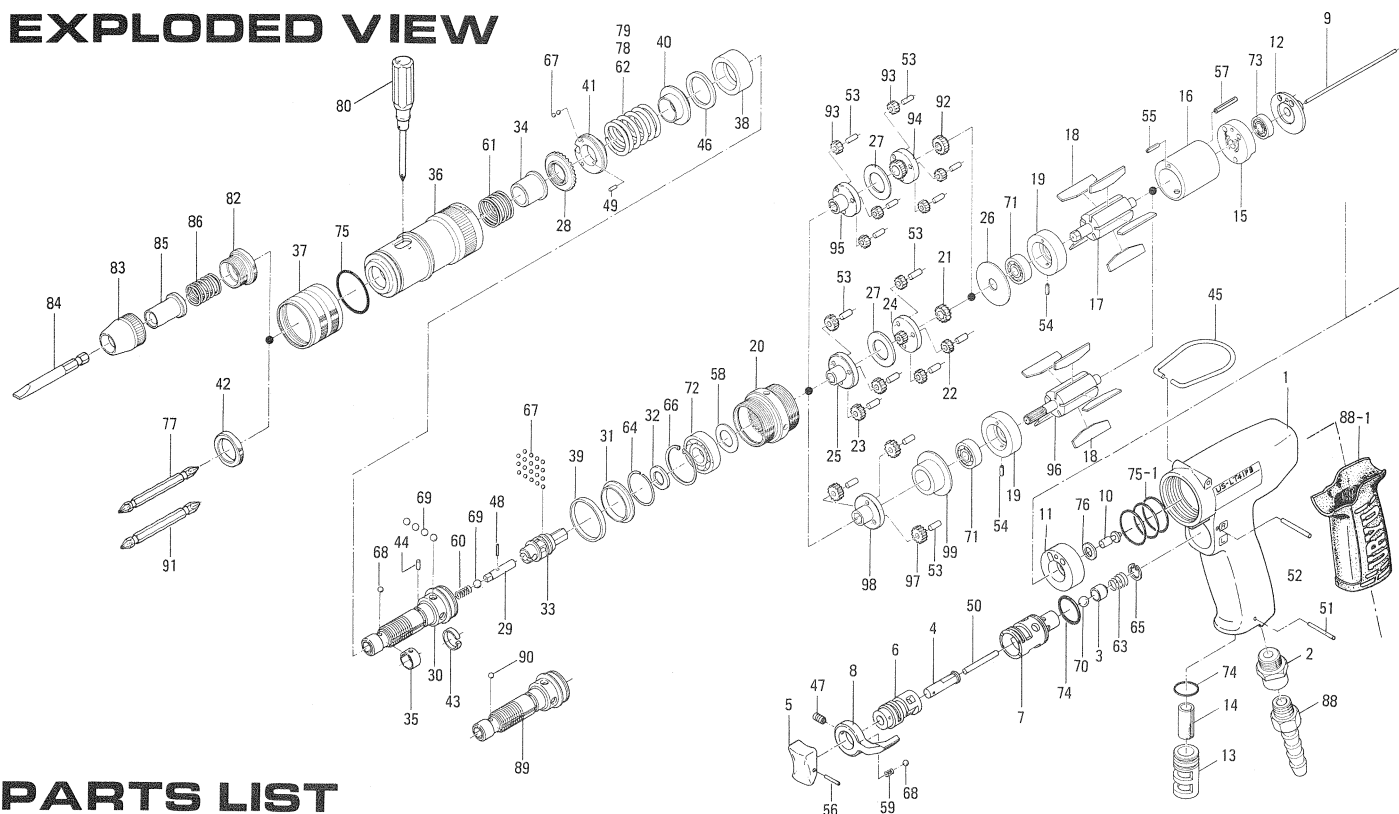

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	443-025-6	Casing	1	# 49	970-092-0	Pin (H) (2×5.5)	1	For US-LT41PA/PB-15			
# 2	480-091-8	Air Inlet Bushing	1	# 50	970-228-0	Pin (H) (3×28)	1	# 17	472-287-7	Rotor	1
# 3	480-100-9	Valve	1	# 51	971-120-0	Pin (2×20)	1	# 92	472-460-5	Rotor Gear	1
# 4	443-103-5	Valve Rod Bushing	1	# 52	971-123-0	Pin (2×23)	1	# 93	472-470-5	First Planet Gear	6
# 5	177-107-5	Valve Lever	1	# 54	973-006-0	Roll Pin (2×6)	1	# 94	472-480-5	First Gear Cage	1
# 6	480-210-9	Reverse Valve	1	# 55	973-010-0	Roll Pin (2×10)	1	# 95	472-485-5	Second Gear Cage	1
# 7	480-211-9	Reverse Valve Bushing	1	# 56	973-012-0	Roll Pin (2×12)	1	# 26	472-807-7	Spacer	1
# 8	480-212-8	Reverse Lever	1	# 57	973-018-0	Roll Pin (2×18)	1	# 27	496-483-1	Gear Cage Spacer	1
# 9	443-104-5	Valve Rod	1	# 58	975-106-0	Spacer (18.5×11×1)	1	# 53	972-089-0	Needle Roller (3×8)	6
# 10	443-254-5	Shut-Off Valve	1	# 59	976-006-0	Spring (3×5) (0.4)	1	# 78	976-516-0	Spring (22.1×28) (2.3)	1
# 11	443-282-6	Handle Bushing	1	# 60	976-058-0	Spring (4.5×11) (0.4)	1	For US-LT41PA/PB-21			
# 12	443-291-5	Rear Plate Spacer	1	# 61	976-450-0	Spring (18.5×10) (1.0)	1	# 96	472-287-3	Rotor	1
# 13	480-780-8	Exhaust Stack	1	# 63	977-150-0	Cone Spring (6.8×8.5×8)(0.4)	1	# 97	472-470-3	Planet Gear	3
# 14	177-835-5	Filter	1	# 64	978-218-0	Snap Ring (22×1)	1	# 98	472-480-3	Gear Cage	1
# 15	472-285-7	Rear Plate	1	# 65	979-002-0	Inner Snap Ring (9)	1	# 99	472-807-3	Spacer	1
# 16	443-286-5	Cylinder	1	# 66	979-326-0	Inner Snap Ring (IRTW-26)	1	# 53	972-089-0	Needle Roller (3×8)	3
# 18	472-288-0	Blade (PC)	5	# 67	981-001-0	Ball (3/32)	21	# 79	976-517-0	Spring (21.5×31) (2.0)	1
# 19	472-289-7	Front Plate	1	# 68	981-002-0	Ball (1/8)	2	Parts for A Type (5mm Hex.) Anvil			
# 20	463-029-8	Gear Casing	1	# 69	981-004-0	Ball (3/16)	5	[Take out #31, #66, #75 and use below parts.]			
# 28	472-257-8	Regulating screw	1	# 70	981-206-0	Ball (1/4)	1	# 89	472-319-6	Anvil	1
# 29	471-318-5	Pilot Pin	1	# 71	982-063-0	Ball Bearing (606ZZ)	1	# 90	981-003-0	Ball (5/32)	1
# 30	472-319-7	Anvil	1	# 72	982-100-0	Ball Bearing (6000)	1	# 91	916-710-0	Double Bit No. 2×70(5H)	1
# 31	463-334-7	Anvil Spacer	1	# 73	987-039-0	Miniature Ball Bearing (R1560ZZ)	1	Accessories			
# 32	461-344-6	Cam Retainer	1	# 74	990-912-0	O Ring (SNS-14)	2	# 77	916-810-0	Double Bit No. 2×75	1
# 33	472-346-5	Cam	1	# 75	990-923-0	O Ring (SNS-26)	1	# 80	939-402-0	Manual Driver(No.2)	1
# 34	472-351-7	Bit Sleeve	1	# 75-1	990-333-0	O Ring (JW1530-23)	3	# 88	940-113-0	Air Hose Nipple	1
# 35	471-356-7	Bit Band	1	# 76	996-411-0	Packing (11×6×1)	1	Optional Accessories			
# 36	463-369-7	Clutch Casing	1	# 88-1	174-842-8	Handle Jacket	1	For Slotted Head Bit and Finder (in common)			
# 37	472-370-7	Clutch Casing Sleeve	1	For US-LT41PA/PB-08				[Take out #42 and use following]			
# 38	472-375-7	Cam Ring	1	# 17	472-287-7	Rotor	1	# 82	472-082-7	Bit Casing Set Screw	1
# 39	463-397-7	Nut Flange	1	# 21	472-460-7	Rotor Gear	1	# 83	471-057-7	Bit Casing	1
# 40	472-379-8	Retainer	1	# 22	472-470-7	First Planet Gear	3	# 84	916-030-0	(-) Bit (5×56) (6.35H)	1
# 41	472-562-8	Stopper	1	# 23	472-471-7	Second Planet Gear	3	# 85	917-350-0	Finder (7.3×56×24)	1
# 42	472-567-7	Bushing	1	# 24	472-480-7	First Gear Cage	1	# 86	976-330-0	Spring (13.8×18) (0.8)	1
# 43	471-670-7	Band	1	# 25	472-485-7	Second Gear Cage	1				
# 44	471-764-7	Notch Pin	1	# 26	472-807-7	Spacer	1				
# 45	010-790-1	Suspension Ring	1	# 27	496-483-1	Gear Cage Spacer	1				
# 46	944-019-0	Back Up Ring (P19)	1	# 53	972-089-0	Needle Roller (3×8)	6				
# 47	952-106-0	Allen Head Dog Point Screw (M4×6)	1	# 62	976-515-0	Spring (22.7×28) (2.6)	1				
# 48	969-470-0	Pin (E) (2×8)	1								

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

OKA-395-00-08-10-2004