


EXPLODED VIEW

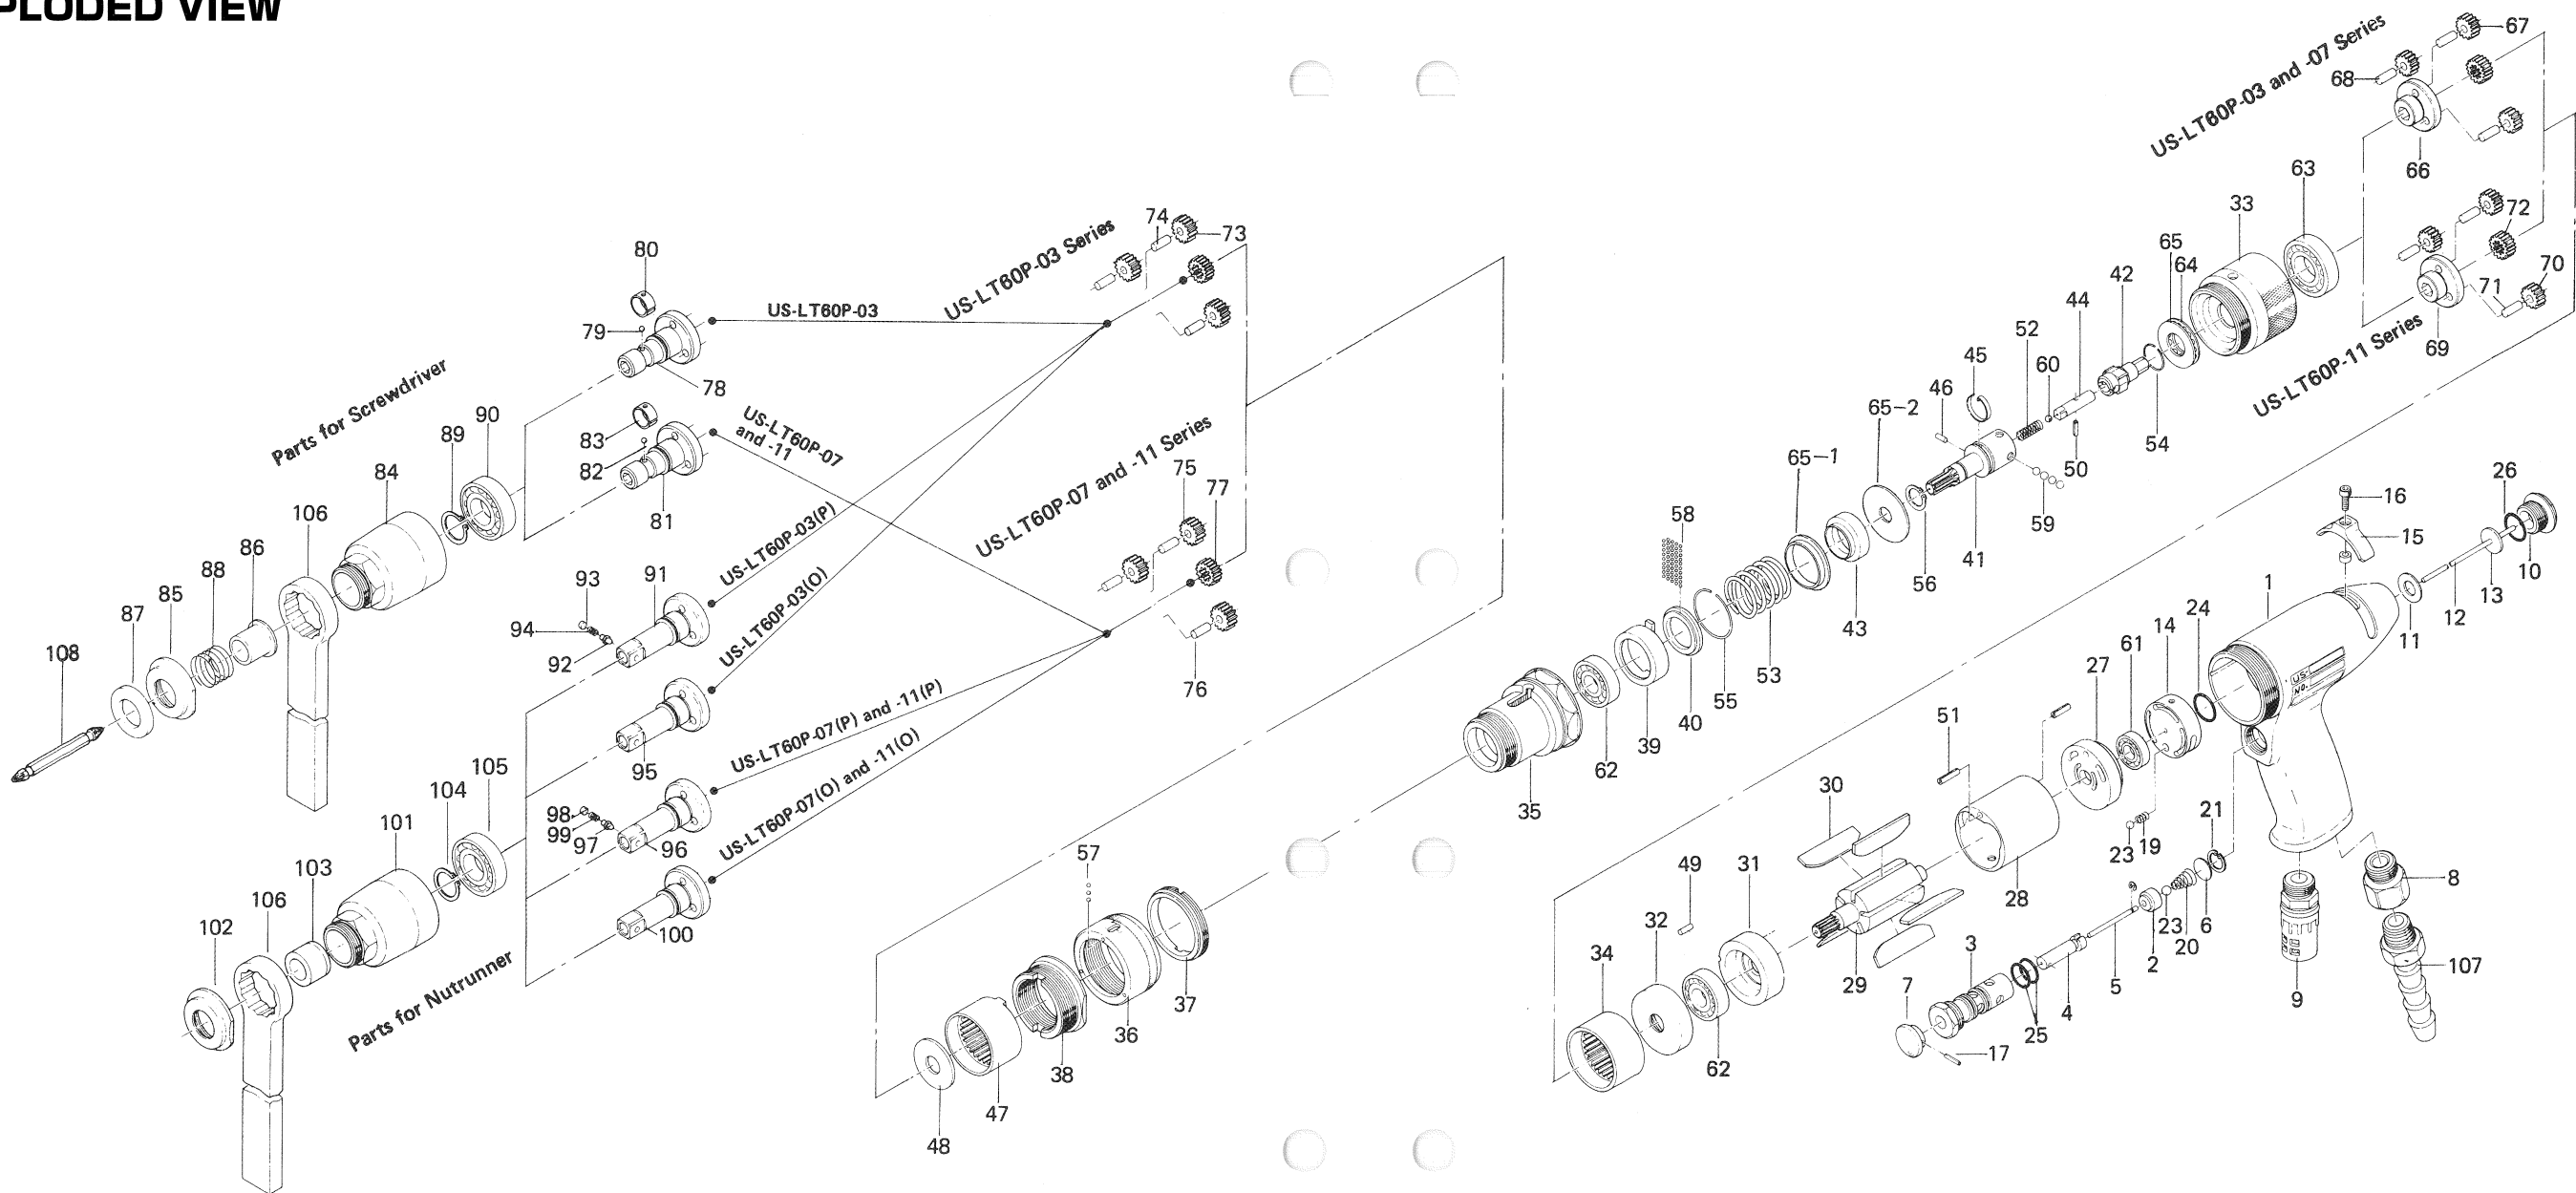

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
499-984-7 HANDLE ASSEMBLY				#24	990-011-0	O-Ring (P12)	1	#46	499-764-7	Notch Pin	1
# 1	499-025-8	Handle	1	#25	990-909-0	O-Ring (SNS11.2)	2	#47	499-466-7	Second Internal Gear	1
# 2	621-100-0	Valve	1	#26	990-912-0	O-Ring (SNS14)	1	#48	499-483-7	Gear Cage Spacer	1
# 3	499-101-7	Valve Bushing	1					#49	971-110-0	Pin (2×10)	1
# 4	499-103-8	Valve Rod Bushing	1	#27	499-285-7	Rear Plate	1	#50	969-470-0	Pin (2×8)	1
# 5	969-412-0	Pin (G) (2×12)	1	#28	499-286-7	Cylinder	1	#51	973-112-0	Roll Pin (3×12)	2
# 6	621-164-0	Spring Spacer	1	#29	499-287-7	Rotor	1	#52	976-139-0	Spring (4.5×18)	1
# 7	603-107-2	Throttle Trigger	1	#30	609-288-1	Blade	5	#53	976-586-0	Spring (25×21) for US-LT60-03 & -07	1
# 8	180-091-6	Air Inlet Bushing	1	#31	499-289-7	Front plate	1	#53-1	976-585-0	Spring (25×21) for US-LT60P-11	1
# 9	235-885-0	Silencer Assy	1	#32	499-296-7	Front plate Spacer	1	#54	978-150-0	Snap Ring (15×1)	1
#10	499-108-7	Valve Plug	1	#33	499-036-7	Hammer Casing Connector	1	#55	978-289-0	Snap Ring (29×1)	1
#11	996-421-0	Packing (16×8×1)	1	#34	499-465-7	First Internal Gear	1	#56	979-107-0	Outer Snap Ring (10)	1
#12	499-104-7	Operating Rod	1	#35	499-028-7	Hammer Casing	1	#57	981-000-0	Ball (1/16)	3
#13	499-106-7	Operating Rod Cap	1	#36	499-264-7	Regulating Dial	1	#58	981-000-0	Ball (1/16)	49
#14	499-210-7	Reverse Valve	1	#37	499-257-7	Regulating Screw	1	#59	981-003-0	Ball (5/32)	4
#15	496-212-2	Reverse Lever	1	#38	499-382-7	Hammer Casing Nut	1	#60	981-004-0	Ball (3/16)	1
#16	945-001-0	Allen Head Bolt (M3×10)	1	#39	499-164-7	Spring Setter	1	#61	982-035-0	Ball Bearing (698)	1
#17	973-010-0	Roll Pin (2×10)	1	#40	499-379-7	Retainer	1	#62	982-100-0	Ball Bearing (6000)	2
#18	976-033-0	Spring (3.6×7)	1	#41	499-452-7	Cam Guide	1	#63	982-102-0	Ball Bearing (6002)	1
#19	499-210-7	Reverse Valve	1	#42	499-346-3	Cam	1	#64	988-837-0	Thrust Needle Bearing (NTB 1226)	1
#20	976-942-0	Spring (7.5×12)	1	#43	499-375-8	Cam Ring	1				
#21	979-005-0	Inner Snap Ring (12)	1	#44	471-318-5	Pilot Pin	1				
#23	981-003-0	Ball (5/32)	2	#45	499-670-7	Cam Guide Band	1				

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
#65	988-962-0	Thrust Washer (AS1226)	2	#79	981-002-0	Ball (1/8)	1	Casing assembly components are marked with "X".			
#65-1	499-165-7	Spring Holder	1	#80	471-356-7	Bit Band	1	For US-LT60P-07 and -11 Series			
#65-2	499-682-7	Cushion Rubber	1					#96	499-319-5	Anvil (P)	1
PARTS for US-LT60P-03 and -07				#81	499-350-3	Driver Anvil	1	#97	135-800-1	Socket Retainer Pin	1
#66	499-480-7	Gear Cage	1	#82	981-002-0	Ball (1/8)	1	#98	971-250-0	Pin (3.3×2)	1
#67	499-470-7	First Planet Gear	3	#83	471-356-7	Bit Band	1	#99	976-018-0	Spring (2.8×8.5)	1
#68	972-111-0	Needle Roller (4×11)	3	In common				#100	499-319-4	Anvil (O)	1
PARTS for US-LT60P-11				#84	499-029-7	Gear Casing	1	In common			
#69	499-480-0	Gear Cage	1	#85	499-057-7	Bit Casing	1	#101	499-029-7	Gear Casing	1
#70	499-470-0	First Planet Gear	1	#86	472-351-7	Bit Sleeve	1	#102	499-057-7	Bit Casing	1
#71	972-111-0	Needle Roller (4×11)	3	#87	444-567-4	Bushing	1	#103	499-328-7	Anvil Bushing	1
#72	499-445-0	First Middle Gear	1	#88	976-450-0	Spring (18.5×10)	1	#104	979-112-0	Outer Snap Ring (15)	1
PARTS for US-LT60P-03				#89	979-112-0	Outer Snap Ring (15)	1	#105	982-102-0	Ball Bearing (6002)	1
#73	499-471-7	Second Planet Gear	3	#90	982-102-0	Ball Bearing (6002)	1	Anvil marked with "O" are at use's option.			
#74	972-111-0	Needle Roller (4×11)	3	ACCESSORIES				#106	499-516-7	Reaction Bar	1
PARTS for US-LT60P-07 and -11				PARTS for NUTRUNNER				#107	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#75	499-471-3	Second Planet Gear	3	For US-LT60P-03 Series				#108	916-810-0	(+)Double Bit (No.2×75) only for Screwdriver	1
#76	972-111-0	Needle Roller (4×11)	1	#91	499-319-8	Anvil (P)	1				
#77	499-445-3	Second Middle Gear	3	#92	135-800-1	Socket Retainer Pin	1				
PARTS for SCREWDRIVER				#93	971-250-0	Pin (3.3×2)	1				
For US-LT60P-03				#94	976-018-0	Spring (2.8×8.5)	1				
#78	499-350-6	Driver Anvil	1	#95	499-319-7	Anvil (O)	1				