US-LT41PB SERIES SCREWDRIVERS

EXPLODED VIEW

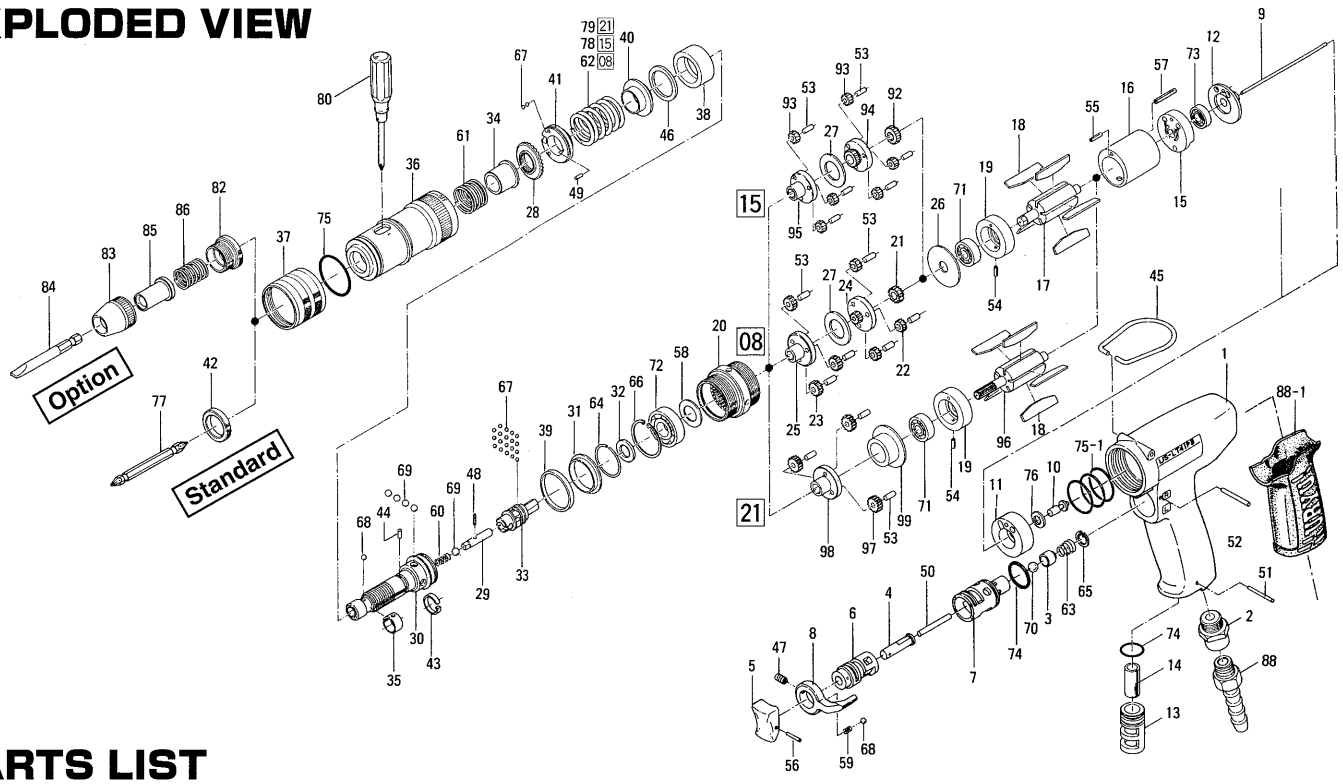

PARTS LIST

Index No.	Code No.	Parts Name	Quantity
# 1	443-025-6	Casing	1
# 2	480-091-8	Air Inlet Bushing	1
# 3	480-100-9	Valve	1
# 4	443-103-5	Valve Rod Bushing	1
# 5	177-107-5	Valve Lever	1
# 6	480-210-9	Reverse Valve	1
# 7	480-211-9	Reverse Valve Bushing	1
# 8	480-212-8	Revese Lever	1
# 9	443-104-5	Valve Rod	1
#10	443-254-5	Shut-Off Valve	1
#11	443-282-6	Handle Bushing	1
#12	443-291-5	Rear Plate Spacer	1
#13	480-780-8	Exhaust Stack	1
#14	177-835-6	Filter	1
#15	467-285-7	Rear Plate	1
#16	443-286-5	Cylinder	1
#18	472-288-0	Blade (PC)	5
#19	472-289-7	Front Plate	1
#20	463-029-8	Gear Casing	1
#28	472-257-8	Regulating Screw	1
#29	471-318-5	Pilot Pin	1
#30	472-319-7	Anvil	1
#31	463-334-7	Anvil Spacer	1
#32	461-344-6	Cam Retainer	1
#33	472-346-5	Cam	1
#34	472-351-7	Bit Sleeve	1
#35	471-356-7	Bit Band	1
#36	463-369-7	Clutch Casing	1
#37	472-370-7	Clutch Casing Sleeve	1
#38	472-375-7	Cam Ring	1
#39	463-397-7	Nut Flange	1
#40	472-379-8	Retainer	1
#41	472-562-8	Stopper	1
#42	472-567-7	Bushing	1
#43	471-670-7	Band	1
#44	471-764-7	Notch Pin	1
#45	010-790-1	Suspension Ring	1
#46	944-019-0	Support Ring (P19)	1
#47	952-106-0	Allen H. D. P. Screw (M4×6)	1
#48	969-470-0	Pin (E) (2×8)	1
#49	970-092-0	Pin (H) (2×5.5)	1
#50	970-228-0	Pin (H)(3×28)	1
#51	971-120-0	Pin (2×20)	1
#52	971-123-0	Pin (2×23)	1
#54	973-006-0	Roll Pin (2×6)	1
#55	973-010-0	Roll Pin (2×10)	1
#56	973-012-0	Roll Pin (2×12)	1
#57	973-018-0	Roll Pin (3×18)	1
#58	975-106-0	Spacer (18.5×11×1)	1
#59	976-006-0	Spring (3×5) (0.4)	1
#60	976-058-0	Spring (4.5×11) (0.4)	1
#61	976-450-0	Spring (18.5×10) (1.0)	1
#63	977-150-0	Cone Spring (6.8×8.5×8)	1
#64	978-218-0	Snap Ring (22×1)	1
#65	979-002-0	Inner Snap Ring (9)	1
#66	979-326-0	Inner Snap Ring (IRTW-26)	1
#67	981-001-0	Ball (3/32)	21
#68	981-002-0	Ball (1/8)	2
#69	981-004-0	Ball (3/16)	5
#70	981-206-0	Ball (1/4)	1
#71	982-063-0	Ball Bearing (606ZZ)	1
#72	982-100-0	Ball Bearing (6000)	1
#73	987-039-0	Mini. Ball Bearing (R1560ZZ)	1
#74	990-912-0	O-Ring (SNS-14)	2
#75	990-923-0	O-Ring (SNS-26)	1
#75-1	990-333-0	O-Ring (JW1530-23)	3
#76	996-411-0	Packing (11×6×1)	1
#88-1	174-842-8	Handle Cover	1
For US-LT41PB-08			
#17	472-287-7	Rotor	1
#21	472-460-7	Rotor Gear	1
#22	472-470-7	First Planet Gear	3
#23	472-471-7	Second Planet Gear	3
#24	472-480-7	First Gear Cage	1
#25	472-485-7	Second Gear Cage	1
#26	472-807-7	Spacer	1
#27	496-483-1	Gear Cage Spacer	1
#53	972-089-0	Roller Pin (3×8)	6
#62	976-515-0	Spring (22.7×28) Standard	1
	976-516-0	Spring (22.1×28) Weaker	1
	976-517-0	Spring (21.5×31) Weakest	1
For US-LT41PB-15			
#17	472-287-7	Rotor	1
#92	472-460-5	Rotor Gear	1
#93	472-470-5	First Planet Gear	6
#94	472-480-5	First Gear Cage	1
#95	472-485-5	Second Gear Cage	1
#26	472-807-7	Spacer	1
#27	496-483-1	Gear Cage Spacer	1
#53	972-089-0	Roller Pin (3×8)	6
#78	976-516-0	Spring (22.1×28) Standard	1
	976-515-0	Spring (22.7×28) Strong	1
	976-517-0	Spring (21.5×31) Weaker	1
For US-LT41PB-21			
#96	472-287-3	Rotor	1
#97	472-470-3	Planet Gear	3
#98	472-480-3	Gear Cage	1
#99	472-807-3	Spacer	1
#53	972-089-0	Roller Pin (3×8)	3
#79	976-517-0	Spring (21.5×31) Standard	1
	976-616-0	Spring (22.1×28) Strong	1
Accessories			
#77	916-810-0	Double Bit No.2×75	1
#80	939-402-0	Manual Driver (No.2)	1
#88	940-113-0	Air Hose Nipple	1
Optional Accessories			
For Slotted Head Bit and Finder (In common)			
[Take out #42, #77 and use following]			
#82	472-082-7	Bit Casing Set Screw	1
#83	471-057-7	Bit Casing	1
#84	916-030-0	(-)Bit (5×56) (6.35H)	1
#85	917-350-0	Finder (73×56×24)	1
#86	976-330-0	Spring (138×18) (08)	1

When ordering spare parts, please specify tool type, code number and part name.

Printed in Japan

PRINTED WITH SOY INK

URYU SEISAKU, LTD. Osaka Japan

For further information, please contact at any time your nearest URYU distributor.

Jan 2012

OKA-249-11-12-13-1008