

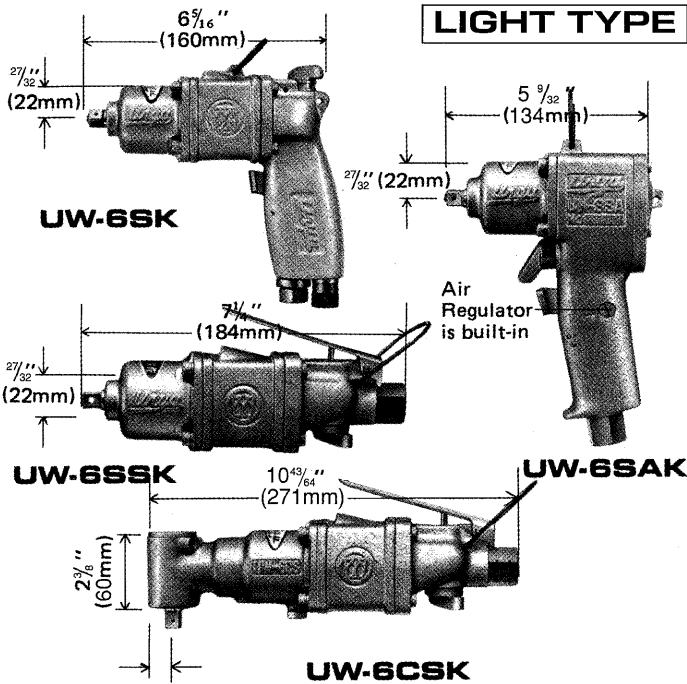


URYU IMPACT WRENCHES


LIGHT TYPE

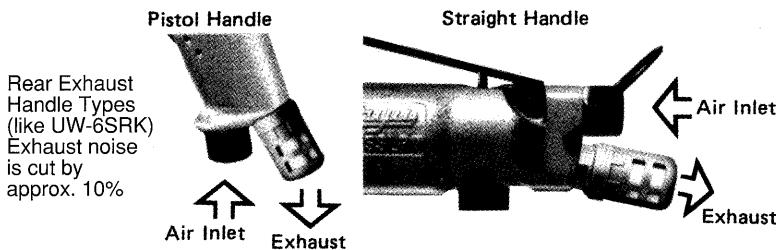

HEAVY-DUTY TYPES

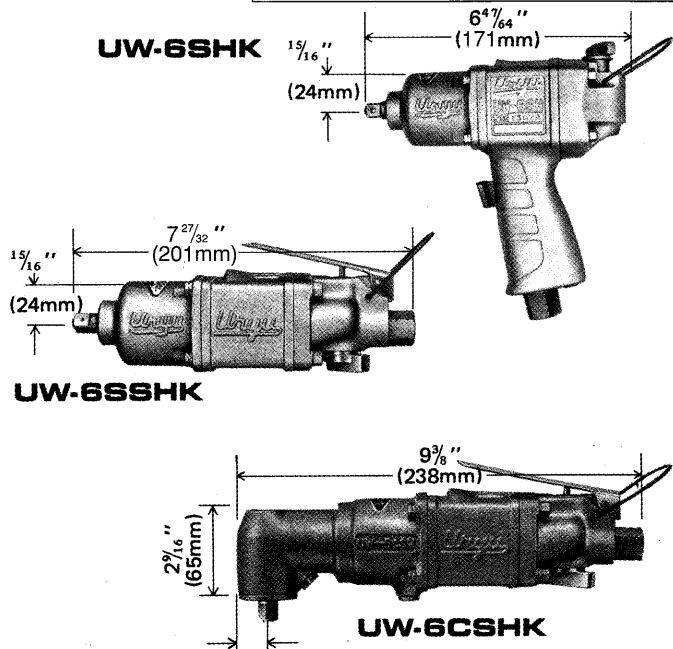

Quick-change Driver Anvil (for 1/4" Hex. bit) is available for the pistol and straight handle types.)

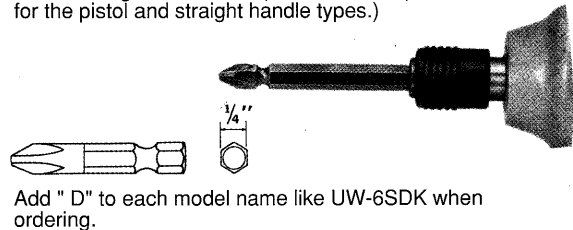

Add "D" to each model name like UW-6SDK when ordering.

SPECIFICATIONS (Subject to change without notice.)

Model		Capacity (Bolt Size)		Free Speed(about)		Weight Less Socket(about)				Average Air Consumption(about)			
Standard	Rear Exhaust			Standard	Rear Exhaust								
		mm	in	rpm		kg	lb	kg	lb	m ³ /min.	ft ³ /min.	m ³ /min.	ft ³ /min.
UW-6SAK	UW-6SARK	6	1/4	7,500	7,500	1.10	2.47	1.10	2.47	0.30	10.5	0.30	10.5
UW-6SK	UW-6SRK	6	1/4	7,500	7,500	1.22	2.68	0.97	2.13	0.30	10.5	0.30	10.5
UW-6SSK	UW-6SSRK	6	1/4	7,500	7,500	0.97	2.13	0.97	2.13	0.30	10.5	0.30	10.5
UW-6CSK	UW-6CSRK	6	1/4	7,500	7,300	1.42	3.12	1.42	3.12	0.30	10.5	0.30	10.5
—	UW-6SHBRK	8	5/16	—	7,300	—	—	1.36	2.99	—	—	0.35	12.4
UW-6SHK	—	8	5/16	7,500	—	1.41	3.10	—	—	0.35	12.4	—	—
UW-6SSHK	UW-6SSHRK	8	5/16	7,500	7,300	1.21	2.66	1.26	2.77	0.35	12.4	0.35	12.4
UW-6CSHK	UW-6CSHRK	8	5/16	7,500	7,300	1.71	3.76	1.71	3.76	0.35	12.4	0.30	10.5

Air Pressure : 0.6MPa (85psi) Drive Shank : 9.5mm (3/8") Air Inlet Thread (Pipe Tap) : N.P.T.1/4 Air Hose Size : 9.5mm (3/8")

IMPORTANT!!

- Air Pressure** → Air Pressure of 0.6MPa(85psi) is recommended for the most efficient performance.
Too high air pressure will shorten tool's life. Adjust air current by Air Regulator for favorable influence on tool's life.
- Lubrication** → **For Air Motor**— Supply turbine Oil properly through Air Inlet or Line Oiler every before and after operation. (for example, MOBIL TURBINE OIL #32 SHELL TURBINE OIL #32, and or equivalents.)
For Impacting Part— Supply recommended high quality Grease properly (for examples, SHELL Alvania EP R2, NIPPON Sharples Grease, or equivalents.) once every three months and when the tool is overhauled. Over-greasing will cause dull motion or heating.
- Dry & Clean Air** → Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.

- Air Hose & Joints** → Use Air Hose (the shorter, the better), Joints and other fittings of good condition and of proper size to avoid pressure drop.
- Sockets** → Do not use Sockets which are worn at female square where Anvil fits in.
- Anvil & Hammer** → Replace Anvil and Hammer together when either of them is found worn.
- Genuine Parts** → Use only URYU's genuine spare parts for replacement.
- Regular Overhaul** → At least every three months regular or periodical overhaul by a competent person is needed for best performance and troubleless operation.

Distributed by

Printed in Japan

URYU SEISAKU, LTD.

Claims must be filed only with distributors within ten(10)days from delivery.