## **URYU OPEN-END WRENCHES**

#### **SPECIFICATIONS**


\*The uncertainty in the sound levels is 3dB(A).

Model	Max. Torque/Range (about)			Free Speed (about)	Weight (about)		Average Air Consumption (about)		Sound Pressure Level (LpA)	Sound Power Level (Lwa)	Vibration Total Value (Ahd)	Vibration Uncertainty (K)
	Nm	kgf-m	ft-lbs	rpm	kg	lb	m³/min.	ft³/min.	db(A)	db(A)	m/sec <sup>2</sup>	m/sec²
UOW-11-10	13	1.3	9.6	400	1.4	3.08	0.35	12.5	76	_	< 2.5	0.47
UOW-11-14	16	1.6	11.8	260	1.8	3.96	0.35	12.5	76	-	< 2.5	0.47
UOW-11-22	24	2.4	17.8	180	1.8	3.96	0.35	12.5	76	-	< 2.5	0.47
UOW-11-30	32	3.2	23.7	135	2.5	5.50	0.35	12.5	76	-	< 2.5	0.47
SHUT-OFF-TYPE												
UOW-T60-10	4-14	0.4-1.4	3.0-10.4	300	1.8	3.96	0.50	18.0	76	-	< 2.5	0.47
UOW-T60-14	5-17	0.5-1.7	3.7-12.6	230	2.2	4.85	0.50	18.0	76	-	< 2.5	0.47
UOW-T60-22	7-24	0.7-2.4	5.2-17.8	170	2.2	4.85	0.50	18.0	76	-	< 2.5	0.47
UOW-T60-30	10-32	1.0-3.2	7.4-23.7	130	2.9	3.30	0.50	18.0	76	-	< 2.5	0.48


- \*Recommended Air Pressure: 0.6MPa (85psi)
- \*Air Inlet Thread (Pipe Tap): N.P.T. 1/4
- \* Air Hose Size: 9.5mm (3/8in)

### TWO-STEP THROTTLE LEVER

1 HALF-WAY for Releasing the Gear Socket back to the open position.

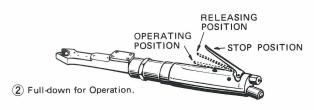


#### (OPERATION)

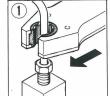

Socket is set to the open position. If not, push the Throttle Lever fully to run the fastener. Handle half way to down lightly half way to release the Gear Socket back to the open position.



Make sure that the Gear Slide the tool on to the Slide the tool off the fastener and push the Throttle Lever down

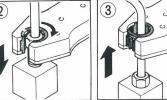

tightened fastener and operate the Throttle release the Gear Socket back to the open position for freeing the tool of the work.

## **GEAR SOCKETS**

Code No.   Model		L	Н	D	d			1	Н	D	d		
UOW 11-10 8 T60-10 20.48 14 8 9 14 5 9 14 858-966-1 9 6 80 858-967-1 858-967-1 11 6 858-967-1 13/8 UOW 11-22 8 6 862-500-1 13 35.68 16 21 14 15 15 13 13 858-972-1 15 858-941-1 15 13 13 358-96-1 958-941-1 15 13 16 858-941-1 15 13 21 15 13 862-508-1 16 15 234-447-0 (9/16) 14 12 13 13 13 13 14 858-971-1 13 13 13 13 13 13 14 10 12 13 13 13 13 13 14 858-971-1 13 13 13 13 14 10 12 13 13 13 13 14 858-971-1 13 13 13 13 14 10 12 13 13 13 13 14 858-971-1 13 13 13 14 10 12 13 13 13 14 858-971-1 13 13 14 10 12 13 13 14 858-981-1 14 23 14 18 1858-991-1 27 27 21 1858-982-1 28 29 22 20 22 22 22 22 22 23 23 24 24 29 22 22 22 22 22 22 23 23 24 24 29 22 22 28 28 29 22 22 22 23 23 24 24 29 29 22 28 28 29 22 22 22 23 23 24 24 29 29 22 28 28 29 22 29 22 22 28 28 29 22 22 23 23 24 24 29 29 22 28 28 29 22 23 23 24 24 29 29 20 20 20 20 21 23 23 24 24 24 29 29 20 20 20 20 20 20 20 20 21 21 21 21 21 21 21 21 21 21 21 21 21	Model		-11			Code No.	Model					Code No.	
UOW 11-10 8 T60-10 20.48 14 14 10 11 10 6 882-962-1 (3/8) 9 6 858-962-1 6 862-500-1 (3/8) 4 862-503-1 6 862-500-1 13 9 10 11 12 13 9 858-974-1 13 13 9 858-974-1 12 13 9 858-974-1 13 13 9 858-974-1 13 13 9 858-974-1 13 13 9 858-974-1 13 13 9 858-974-1 13 13 9 858-974-1 13 13 13 9 858-974-1 14 15 9 16 17 17 11 18 862-508-1 16 17 11 16 862-508-1 17 17 11 11 12 12 13 9 858-974-1 13 13 9 858-971-1 13 13 9 858-971-1 13 14 9 15 9 862-509-1 17 17 11 11 12 12 13 9 862-509-1 17 17 11 18 862-510-1 17 17 11 18 862-510-1 17 17 11 18 862-510-1 17 17 11 18 862-510-1 17 17 18 862-501-1 17 17 18 862-501-1 17 17 18 862-501-1 17 17 18 862-501-1 17 17 18 862-501-1 18 863-982-1 27 28 28 29 22 858-982-1 27 28 858-982-1 27 28 858-982-1 29 22 858-982-1 29 22 858-983-1 29 29 22 858-983-1 29 29 22 858-983-1 29 29 22 858-983-1 29 29 22 858-983-1 29 29 22 858-983-1 16 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1 (13/16) 15 862-511-1		mm	mm	mm(in)	mm			mm	mm	mm(in)	mm		
UOW 11-14 8 760-14 26.88	11-10 &	20.48	14	9 *10 11 (1/4)	6 6 6 4.8	858-967-1 233-447-0 858-968-1 862-503-1	11-22 &	35.68	16	17 18 19 21 *22	13 13 15 15 15	858-992-1 858-977-1 858-994-1 858-941-1 234-447-0	
11-14 & 26.88	11-14 &	26.88	14	11	6 8 9 9 11 8	858-974-1 858-971-1 858-972-1 233-447-4 862-579-1 862-514-1 862-502-1 862-501-1				(5/8)	13	862-509-1 862-510-1	
				13 *14 15 17 (1/2) (7/16)			11-30 &	47.68	16	24 27 28 29 *30 (5/8) (7/8) (13/16)	18 21 21 22 23 13 15 15	858-999-1 858-982-1 858-942-1 858-983-1 234-447-6 862-516-1 862-511-1 862-517-1	

 In addition to listed sizes, many other sizes are available for each model. Specify Hex. size of Gear Socket when ordering. Otherwise the standard Gear Socket (marked with\*) is supplied





#### **IMPORTANT!!**

- ★Air Pressure: 0.6MPa (85psi) Air Pressure is recommended for good performance. Too high air pressure will shorten tool's life.
- ★Lubrication: For Air Motor Supply Turbine Oil properly through Air Inlet or Line Oiler every before and after operation. (for example, MOBIL TURBINE OIL #32, SHELL TURBINE OIL #32 and or equivalents.)

For Gears and Bearings - Supply recommended high quality grease properly (for example, SHELL ALVANIA NO.2, SHELL ALVANIA EP, MOBILPLEX 2, MOBILPLEX 47 and or equivalents.) every three months and when the tool is overhauled.

Over -greasing will cause dull motion or heating.

- ★Dry & Clean Air: Drain daily, and install Filter at or near the take-off point to prevent trouble from foreign matter.
- ★Air Hose & Joints: Use air hose (the shorter, the better), joints and other fittings of good condition and of proper size to avoid pressure drop.

★Ratchet: - Do not use over-sized and worn Gear Socket.


★Genuine Parts: - Use only URYU's genuine spare parts for replacement.

Distributed by:

Printed in Japan

# UPT (URYU Pneumatic Tools

# UOW-11 & T60 Series OPEN-END WRENCHES

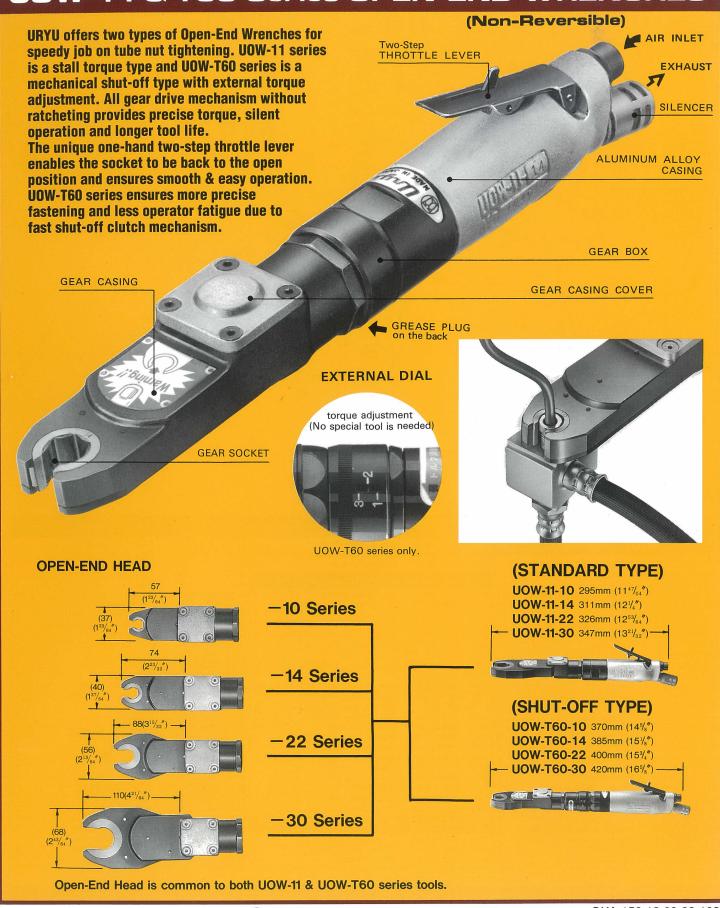



THE URYU SEISAKU, LTD. Oct VOIZ

OKA-152-12-09-03-1020